

# **NEXTECH**

**LA5111**



## **Personal Alarm with Torch**

### **Instruction Manual**

## CONTENTS

General Information & Safety Instructions.....	3
Box Contents .....	3
Product Diagram .....	4
Before First Use .....	4
Safety Precautions .....	5
Operating Instructions.....	5
Replacing the Battery.....	6
Cleaning, Care, Storage & Maintenance .....	7
Specifications.....	7
Warranty Information.....	8

## GENERAL INFORMATION & SAFETY INSTRUCTIONS

Our Personal Alarm with 130dB is a compact, portable device that emits a loud and attention-grabbing alarm sound when activated. It is designed for personal safety and can be used in various situations, such as in case of an attack, medical emergency, or when you need to attract attention quickly.

- **130dB Siren:** The alarm produces a piercing sound at 130 decibels to alert others and deter potential threats.
- **Compact and Lightweight:** Easy to carry and attach to a bag, keychain, or clothing.
- **Simple Activation:** The alarm is activated by pulling a pin or pressing a button, depending on the model.
- **LED Light:** Some models include a built-in LED flashlight for added functionality.
- If the personal alarm reaches the end of its useful life or becomes damaged, please dispose of it following your local waste disposal regulations. Make sure to remove the batteries before disposing of the device.

**WARNING: The manufacturer is not responsible for any potential injury from misuse**

Throughout the manual any important notes should be clearly identified using addressed as per below;

**NOTE: The product should be placed in a secure location before turned on**

 
## BOX CONTENTS



1x Personal Alarm

1x User Manual

## PRODUCT DIAGRAM

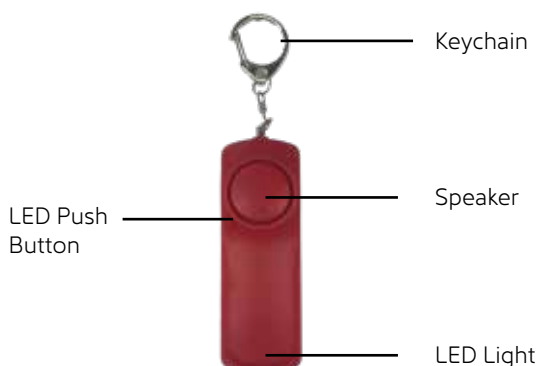

## BEFORE FIRST USE

Prior to using your product, please read all the safety and operating instructions thoroughly. Ensure that you follow the steps below before using the product. We recommend keeping the original packaging for storing the product when not in use. Pay close attention to the section entitled 'Important Safety and General Instructions.' Find a safe and convenient place to store this instruction manual for future reference.

**Unpacking the Product:** Unpack the product, but keep all packaging materials until you have ensured that your new product is undamaged and in good working order. Make sure you have all the accessories listed in this manual. Be aware that plastic wrapping can be a suffocation hazard for babies and children, so ensure all packaging materials are out of their reach.

**Preliminary Steps:** Address any steps that need to be taken before turning on or using the product for the first time.

**WARNING: The manufacturer is not responsible for any potential injury from misuse**


**NOTE: Place the product on a dry, flat, even surface when not in use.**

## SAFETY PRECAUTIONS


- When replacing the battery, please avoid contact between the battery and the circuit board to prevent a short circuit.
- It is not waterproof, please avoid high humidity.
- Please do not expose it to high temperatures to prevent an explosion.
- Please do not impact or vibrate the product to avoid damaging the electronic components.
- Please carefully inspect the product's condition before use. If it has been damaged, do not attempt to open or repair it yourself.

## OPERATING INSTRUCTIONS


Please pull out the pin on the top of the equipment to activate the alarm; it will immediately flash. Insert the pin to stop the alarm. Holding the button turns on the LED light, and releasing it turns off the LED light.

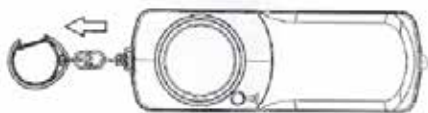

1. Pull out the SOS pin to activate the alarm.

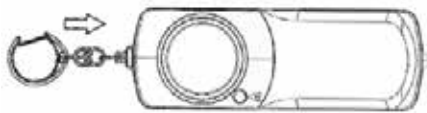


2. Insert the SOS pin to deactivate the alarm.

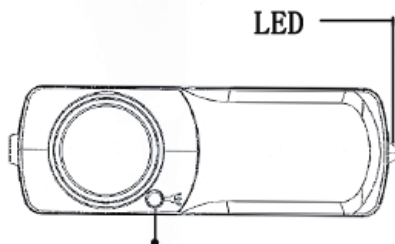


3. Hold the button to turn the LED light on, and release the button to turn it off.


## REPLACING THE BATTERY

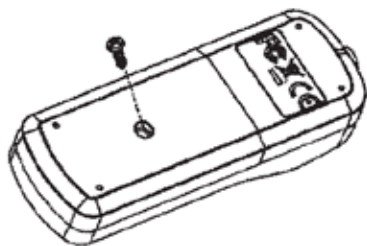


1. Unscrew the battery cover

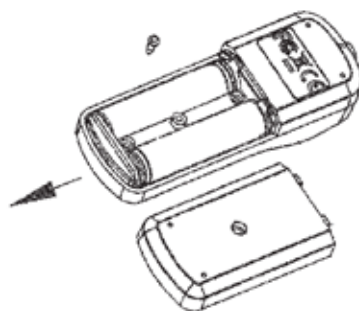

2. Slide to remove the back cover.

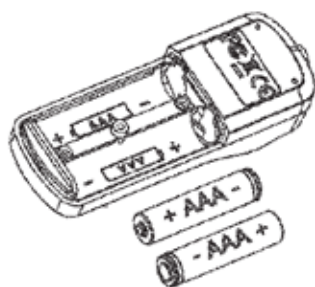

3. Replace old batteries with new ones, observing polarity.

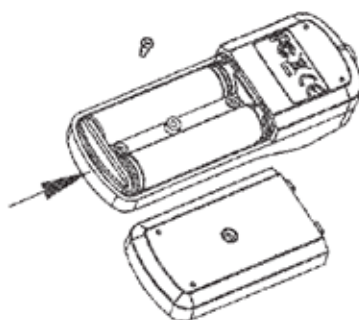

4. Install the back cover, following the indicated direction, and screw the battery cover in place.

## CLEANING, CARE, STORAGE & MAINTENANCE

**Cleaning:** Regularly inspect the alarm for dirt, dust, or residue. Use a damp, lint-free cloth to gently clean the surface of the alarm. Avoid using abrasive or corrosive cleaning agents, as they may damage the device.

**Care:** Avoid dropping or subjecting the alarm to unnecessary shocks or impact. Do not immerse the alarm in water or expose it to extreme temperature or humidity conditions. Ensure the alarm is not in contact with sharp or pointed objects to prevent damage.

**Storage:** Store the personal alarm in a cool, dry place to prevent potential damage from moisture. If you plan to store the alarm for an extended period, remove the batteries to prevent any leakage or corrosion. Store the alarm away from direct sunlight, which may cause discoloration or damage to the device.

**Maintenance:** Periodically check the alarm's battery compartment for any signs of corrosion or battery leakage. Test the alarm at regular intervals to ensure it is functioning correctly. Replace the batteries as recommended by the manufacturer to maintain optimal performance. If you notice any unusual behavior or issues with the alarm, contact the manufacturer or authorized service center for inspection and potential repairs.

## SPECIFICATIONS

<b>Material</b>	Environmental ABS
<b>Voltage</b>	3V
<b>Working Current</b>	120mA
<b>Batteries</b>	2x AAA (not included)
<b>Alarm Time</b>	<= 6 Hours
<b>Luminous Intensity</b>	20 lumens
<b>Lighting Time</b>	About 20 hours
<b>Product Size</b>	95(L) x 32(W) x 20(H)mm
<b>Net Weight</b>	50g
<b>Alarm Volume</b>	130dB

## WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 months. If your product becomes defective during this period, Electus Distribution will repair, replace, or refund it if the product is faulty or not fit for its intended purpose.

Please note that this warranty will not cover modified products, misuse, or abuse of the product contrary to user instructions or packaging labels, change of mind, or normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You also have the right to have the goods repaired or replaced if they fail to be of acceptable quality and the failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show a receipt or other proof of purchase, and additional information may be required to process your claim.

Please note that any expenses related to the return of your product to the store will normally have to be paid by you.

The benefits to the customer provided by this warranty are in addition to other rights and remedies offered by the Australian Consumer Law concerning the goods or services to which this warranty applies.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555