



展开尺寸:455x90mm
风琴折尺寸: 65x90mm

<div><div>NEXTECH</div><div>LA5116</div></div> <div><div>Works with Apple Find My</div></div> <div><div>Mini Personal Alarm</div><div>Instruction Manual</div></div>	<div><div>Rechargeble Personal Safety Alarm</div><div><p>Thank you for your purchase of this personal safety alarm. Our vision is to help bring safer communities to women and children, and because of you we are one step closer!</p><p>When to use it</p><p>This device is intended for use in emergency situations where you feel you are unsafe and wish to alert people around you to come rescue, or scare off attackers. Some examples include:</p><p>1) Suspicion that you are being followed when you are walking alone.</p><p>2) You spot a potentially unsafe situation nearby, for example a suspicious person approaching children, and want to draw attention and scare away the attacker.</p><p>3) You require immediate assistance and cannot reach people with your voice.</p><p>What it does</p><p>When the device is activated, the device will emit a very loud alarm noise (130 dB). The alarm will sound continuously until deactivated. In addition, the built-in light will also start flashing, helping you gain even more attention. The alarm duration is expected to last up to 90 minutes with full power.</p><p>Charging port: Type-C Charging time: within 1 hour Battery capacity: 200mAh</p></div></div>	<div><div>Rechargeble Personal Safety Alarm</div><div><p>How to use it</p><p>1: To activate the alarm, pull out the pin. To stop the alarm, simply insert the pin back into the device.</p><p>2: press the button in side, turn on the flashlight, loose to turn off the flashlight.</p><p>Low voltage reminder:</p><p>when the voltage lower than 3.2 V, press the button or pull the pin everytime, the red light will flash 10 times.</p><div></div><p>This device has GPS function, please operate it as below instructions.</p></div></div>	<div><div>Index</div><div><div>01</div><div>Getting Started</div></div><div><div>02</div><div>Add Your Alarm</div></div><div><div>03</div><div>Locate Your Alarm</div></div><div><div>04</div><div>Notifications</div></div><div><div>05</div><div>When Your Alarm Is Lost</div></div><div><div>06</div><div>Resetting Alarm</div></div><div><div>07</div><div>Extras</div></div><div><div>08</div><div>Warranty Information</div></div></div>	<div><div>01 Getting Started</div><div><div>01.1 Power On / Off:</div><div><p>Press the Alarm Function Button once to turn it on. It should chime once to indicate that it is powered on.</p><p>To power off, Press the same button twice rapidly then hold it for five seconds. You will hear two beeps to indicate that your Alarm is powered off.</p><p>If you could not sure power on or off, just press twice rapidly, it should beep once to indicate that it is powered on.</p></div></div><div><div>01.2 Check For Updates:</div><div><p>To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items app on Apple Watch requires the latest version of watchOS.</p></div></div></div>	<div><div>02 Add Your Alarm</div><div><div>02.1 Start The App</div><div><p>Open Find My app on your supported iPhone.</p></div></div><div><div>02.2 Connect Your Alarm</div><div><p>Press the function button once to power on your Alarm.</p><p>Tap+, then "Add Other Item".</p><p>Once your Alarm is located, tap "connect".</p><p>Enter a name and choose an emoji for your Loliworld Alarm and tap "Continue".</p><p>Find My will ask for confirmation to add your Loliworld Alarm to your Apple ID. Tap "Agree".</p><p>Tap "Finish" and your Alarm will be set up and ready to be used.</p></div></div></div>	<div><div>03 Locate Your Alarm</div><div><div>03.1 Find Alarm When It's Nearby:</div><div><p>Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.</p><p>Tap on your Alarm from the list.</p><p>Tap "Play Sound" to make your Alarm beep.</p><p>Tap "Stop Sound" to stop the beeps once you find.</p></div></div><div><div>03.2 Find Alarm's Location:</div><div><p>Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.</p><p>Tap on your Alarm from the list.</p><p>Your Alarm's location will appear on the Map with a time stamp of when the item was located.</p><p>To navigate to the Alarm's location, tap "Directions" to open Apple Maps.</p></div></div></div>
---	--	---	--	--	--	---

<h2>04 Notifications</h2> <p>04.1 Enabling "Notify When Left Behind":</p> <p>Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.</p> <p>Tap on your Alarm from the list.</p> <p>Under "Notifications" enable the "Notify When Left Behind" toggle.</p> <p>You will receive a notification when you leave your Alarm behind and it's no longer in range of your device.</p> <p>04.2 Enabling "Notify When Found":</p> <p>Under "Notifications", enable the "Notify When Found" toggle.</p> <p>When your Alarm is seen by another Find My network device, you will receive a notification of its location.</p> <p>Note: " Notify When Found" can only be activated when your Alarm is out of range.</p>	<h2>05 When Your Alarm Is Lost</h2> <p>05.1 Enabling "Lost Mode":</p> <p>Open Find My app and select the "Items" tab or open the Find Items app on your Apple Watch.</p> <p>Tap on your Alarm from the list.</p> <p>Under "Lost Mode" tap "Enable"</p> <p>A screen detailing Lost Mode will pop up, tap "Continue"</p> <p>Enter your phone number or email address and tap "Next".</p> <p>You may enter a message that will be shared with the person that finds your item.</p> <p>Tap "Activate" to enable "Lost Mode"</p> <p>Note: When "Lost Mode" is enabled, "Notify When Found" is automatically enabled.</p> <p>Note: When "Lost Mode" is enabled, your Loliworld Alarm is locked and cannot be paired to a new device.</p>	<h2>06 Resetting Alarm</h2> <p>06.1 Remove The Alarm From Find My App:</p> <p>Open Find My app and select the "Items" tab.</p> <p>Tap on your Alarm from the list.</p> <p>please ensure "Lost Mode" is disabled.</p> <p>Scroll to the bottom of the screen and tap "Remove Item".</p> <p>A summary will open, tap "Remove" to confirm.</p> <p>06.2 Factory Reset Your Alarm:</p> <p>After successfully removing the Alarm from Find My app, press the Alarm's function button four times rapidly and then hold it a fifth time until you hear a ringing chime.</p> <p>The Alarm is now reset and ready to be paired to a new Apple ID.</p>	<h2>07 Extras</h2> <p>07.1 Unwanted tracking:</p> <p>If any Find My network accessory separated from its owner is seen moving with you over time, you'll be notified in one of two ways:</p> <ol style="list-style-type: none">1. If you have an iPhone, iPad, Find My will send a notification to your Apple device.This feature is available on iOS or iPadOS 14.5 or later.2. If you don't have an ios device or a smartphone, a Find My network accessory that isn't with its owner for a period of time will emit a sound when it's moved. <p>These features were created specifically to discourage people from trying to track you without your knowledge.</p>	<h2>08 Warranty Information</h2> <p>Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.</p> <p>If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.</p> <p>This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.</p> <p>Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.</p> <p>To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.</p> <p>Any expenses relating to the return of your product to the store will normally have to be paid by you.</p> <p>The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.</p> <p>This warranty is provided by:</p> <p>Electus Distribution</p> <p>Address 46 Eastern Creek Drive, Eastern Creek NSW 2766</p> <p>Ph. 1300 738 555</p>	<h2>09 About Apple Find My</h2> <p>The Apple Find My network provides an easy, secure way to locate compatible personal items using the Find My app on your iPhone, iPad, Mac, or the Find Items app on Apple Watch.</p> <p>To use the Apple Find My app to locate this item, the latest version of iOS, iPadOS, or macOS is recommended. The Find Items appon Apple Watch requires the latest version of watchOS.</p> <p>Use of the Works with Apple badge means that a product has been designed to work specifically with the technology identified in the badge and has been certified by the product manufacturer to meet Apple Find My network product specifications and requirements. Apple is not responsible for the operation of this device or use of this product or its compliance with safety and regulatory standards.</p> <p>Apple, Apple Find My, Apple Watch, Find My, iPhone, iPad, iPadOS, Mac, macOS and watchOS are the trademarks of Apple Inc. iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.</p>
---	--	--	--	---	--