


Installation

1 Installing batteries and creating a personal alarm code

NOTE: This alarm requires three AAA alkaline batteries (not included).

- Remove the screw from the battery compartment cover located on the back of the alarm (A). Pull off the cover to expose the batteries.
- Insert three AAA batteries noting the polarity diagram inside the battery compartment.
- When the LED light starts to flash, enter a 4-digit personal code into the keypad (1).
- The code is confirmed when the alarm chirps twice and the LED light illuminates for 3 seconds.
- Replace the battery compartment cover and secure the screw.


NOTE: If you forget your personal code or need to reset it, remove the batteries, then replace the batteries and re-enter your new personal code.

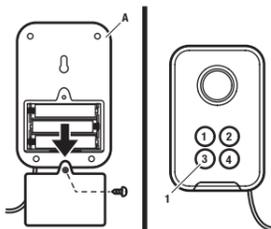

Installation (continued)

3 Installing the alarm

- If using the screws (D)(E), measure and mark the location of the Alarm (A). Place the medium screw (E) and hang the alarm (A) onto the screw (D). Measure and mark the location of both magnetic sensors (C). Place the small screws (D) and hang the magnetic sensors (C).
- If using the hook-loop fastener (F), adhere one side to the back of the alarm (A) above the battery compartment cover. Do not adhere to the battery compartment cover. Adhere the opposite side of the hook-loop fastener (F) to clean, dry mounting surface.
- Using the double-sided tape (B), lightly attach the magnetic sensors (C) to the opposite edges of the door or gate. To test the distance, turn to CHIME mode and open the door. If it does NOT sound, move the sensors (C) closer together and check that arrows are facing each other. Secure the position of the alarm and magnet sensors (C) once they work correctly.

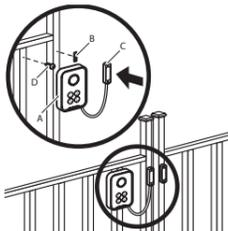

Troubleshooting

The alarm sound becomes low.

- The batteries are low. Replace the batteries promptly. Remove the back cover of the alarm using a Phillips screwdriver. Replace with new batteries, noting the polarity diagram inside the battery compartment. Replace the battery compartment cover.

User forgot personal code.

- Remove the batteries, then replace the batteries and re-enter your new personal code. The new code is confirmed when the alarm chirps twice and the LED light illuminates for 3 seconds.

The alarm sounds when the gate or door is closed.

- Check the gap between the magnets. It should not be greater than 12 mm/0.4 in.

The LED light flashes and the unit beeps periodically with the gate or door closed.

- The batteries are low. Replace the batteries promptly. Remove the back cover of the alarm using a Phillips screwdriver. Replace with new batteries, noting the polarity diagram inside the battery compartment. Replace the battery compartment cover.

How long does the alarm sound after activation?

- The alarm sounds continuously and does not turn off until you enter the 4-digit PIN.


Installation (continued)

2 Preparing for installation

- Select your desired location for the alarm. The alarm is designed to mount to a door frame, door, or pool gate.

- Use either the provided screws (for permanent mounting) (D) (E) or the double-sided tape (B) and hook-loop fastener (F) (for temporary mounting). The recommended location is the back of the door or gate, with the magnetic sensor (C) mounted to the fixed door or gate frame. If you use double-sided tape (B), ensure the mounting surface is clean and dry.
- Mounting the alarm to the door ensures that the alarm will not be damaged by opening and closing the door.

IMPORTANT: Whether mounting to the door or the door frame, the magnetic sensors (C) cannot be further than 12 mm/0.4 in. apart from each other and the arrows on the magnetic sensors must face each other.

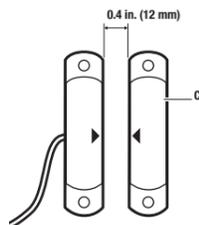

Operation

CHIME MODE

- To activate Chime mode, press 1 and 2 at the same time.
- After the alarm chirps twice, enter your 4-digit PIN. The alarm beeps twice, the LED light illuminates for 2 seconds, and the chime sounds to confirm Chime mode.
- To disarm Chime mode, enter your 4-digit PIN. The alarm chirps twice to confirm the disarm.

HOME MODE

- To activate Home mode, enter the first 3-digits of your 4-digit PIN.
- The LED light flashes and the alarm chirps twice with a solid LED light for confirmation. The alarm will then begin a 15 second EXIT delay with the LED light flashing.
- Once the alarm stops flashing, Home mode is activated. When the alarm is triggered it sounds immediately.
- To disarm Home mode, enter your 4-digit PIN. The unit chirps twice to confirm the disarm.

NOTE: If the door or gate is not closed within 15 seconds of the EXIT delay, the alarm will sound to alert you the door or gate is open. To disarm the alarm, enter your 4-digit PIN.

PANIC MODE

- To activate Panic mode press 1 and 4 at the same time. LED will keep blinking while alarming.
- To deactivate Panic mode, enter the 4-digit PIN.
- Panic can be activated while the alarm is in Chime, Home and while Disarmed as well.

ALARM BYPASS FEATURE


- To pass through the protected door or gate without sounding the alarm when Home mode is activated, press 3 and 4 at the same time.
- The LED light flashes for 10 seconds to indicate bypass mode is active. The alarm will not sound when door or gate is opened.
- The alarm remains in bypass mode for 10 seconds after the bypass code is entered. The LED light stops flashing after 10 seconds and alarm is re-armed.

NOTE: If the door or gate is not closed within 10 seconds when the bypass mode expires, the alarm will sound to alert you the door or gate is open. To disarm the alarm, enter your 4-digit PIN.

Care and Maintenance

- Use a soft cloth dampened with water to clean the device.
- Do not use solvents to clean the device as this may damage and discolor the unit.

NEXTECH

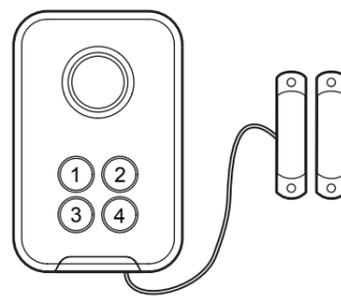

Outdoor/Gate Alarm LA5208 User Manual

Warranty

1-YEAR LIMITED WARRANTY

The manufacturer warrants this product to be free from manufacturing defects for a period of 1 year from the original date of consumer purchase. This warranty is limited to the repair or replacement of this product only and does not extend to consequential or incidental damage to other products that may be used with this unit. This warranty does not cover products which have been abused, altered or damaged.

This warranty is in lieu of all other warranties express or implied. TO THE EXTENT PERMITTED BY LAW, THE MANUFACTURER DISCLAIMS ALL OTHER IMPLIED OR EXPRESS WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE.

LIMITATIONS OF LIABILITY: This limited warranty is your sole remedy and the manufacturer shall not be liable for any damages, whether direct, indirect, incidental, special, consequential, exemplary or otherwise, including lost revenue and lost profits, arising out of any theory of recover, including statutory, contract or tort. In no event will the manufacturer's entire liability exceed the purchase price of this product. Some states and provinces do not allow the exclusion or limitations on how long an implied warranty lasts or permit the exclusion or limitations of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may also have other rights which vary from state to state and province.

If unit should prove defective within the warranty period, return prepaid with dated proof of purchase to the place of purchase.

Distributed by: Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere, NSW 2116 Australia
www.electusdistribution.com.au

Made in China

Safety

WARNING: RISK OF PERSONAL INJURY. PROLONGED EXPOSURE TO THE ALARM SIREN MAY CAUSE PERMANENT HEARING LOSS.

WARNING: Limitations of Alarm Products
Test product regularly to ensure it functions in accordance with these instructions. The manufacturer is not providing insurance or any guarantee that the risk of burglary or robbery will be reduced or prevented even if this product is used properly. Obtain proper insurance coverage for these risks.
The manufacturer does not represent or warrant that this product may not be compromised or circumvented, that it will provide proper or adequate warning, or that the use of this product will prevent injury, property damage or other losses. Note that this product may be bypassed, compromised, fail or fail to warn like any alarm, including due to improper installation, positioning, or maintenance; tampering; dead, faulty, or improperly installed batteries; sensing limitations and component failures.

The product's functional range may be affected or limited by environmental conditions, radio frequency interference or other obstructions. Audible alarm signals may be outside of hearing range, muted by doors, walls and floors, unheard by deep sleepers or the hearing-impaired, or overwhelmed by other sounds.

BATTERIES

- Do not allow the batteries to corrode and leak as this may cause permanent damage to the product. Take care to insert the batteries with the correct polarity as shown inside the battery compartment. Do not mix new and old batteries or different types of batteries. Do not use rechargeable batteries.
- At the end of their useful life, the batteries should be disposed of via a suitable recycling center. Do not dispose of with your normal household waste. DO NOT BURN.

Safety (continued)

FCC STATEMENT

FCC Regulation: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital devices, pursuant to Part 15 of the FCC Rules. These limits are designed to protect against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 Reorient or relocate the receiving antenna.
 Increase the separation between the equipment and receiver.
 Consult the dealer or an experienced radio/TV technician for help.


About this Alarm

The alarm is operated using a 4-digit PIN code with the keypad located on the front of the alarm. The system has two operating modes:

- Chime mode is a low security feature that produces a door-chime sound when the alarm is triggered.
- In Home mode the unit produces a constant high-volume alarm sound IMMEDIATELY after it is triggered.

Pre-Installation

PACKAGE CONTENTS

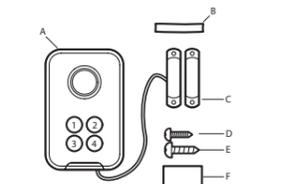

Part	Description	Quantity
A	Alarm	1
B	Double-sided Tape	2
C	Magnetic Sensors	2
D	Small Screws	4
E	Medium Screw	1
F	Hook-Loop Fastener	1

TOOLS REQUIRED



Phillips screwdriver