



# Wireless Doorbell Kit


Model: DC805B

Instruction Manual


# Operating Guide

## Overview

### Speaker unit

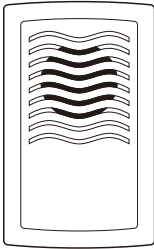

### Doorbell unit

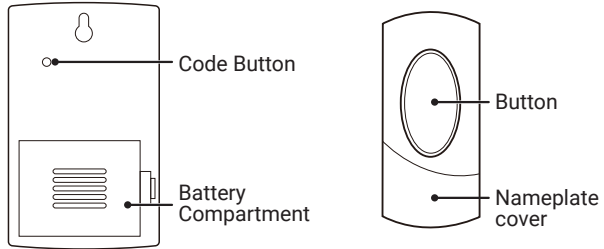

## Installing Batteries

### A. Speaker Unit

- The Speaker unit requires 3 x AA batteries (not included) to operate. For best performance, use fresh, high quality AA alkaline batteries.
- To install them, unclip the battery cover on the rear of the Speaker to reveal the battery compartment. Insert batteries according to the polarity markings (+ and -) indicated inside the battery compartment.

### B. Doorbell Unit



#### **WARNING! THIS PRODUCT CONTAINS A COIN CELL BATTERY.**

If swallowed, a lithium coin cell battery can cause severe or fatal injuries within 2 hours.

The battery is hazardous if swallowed, keep out of reach of children.


If the battery compartment does not close securely, stop using the product.

If you think the battery may have been swallowed or placed inside any part of the body, seek immediate medical attention.

- The Doorbell unit is powered by 3 x LR44 1.5V alkaline batteries which come pre-installed.
- **To activate the batteries:**
  1. Remove the nameplate cover by lifting it off then remove the screw at the base of the Doorbell unit with a small Philips® screwdriver.
  2. Insert a small flat-head screwdriver into the small notch above the screw hole at the base of the Doorbell unit and lift the front cover off.
  3. Remove the plastic tab from the battery holder then snap the front cover back onto the Doorbell unit and fasten with the previously removed screw.
- Replacement of the batteries is necessary as soon as the LED indicator stops flashing when the Doorbell button is pressed.

## Changing the Chime

- Remove the front cover of the Doorbell unit (as previously described above in "Installing Batteries - Doorbell Unit").
- Inside the Doorbell unit, locate the **Chime Select** button as shown on the right. Press the **Chime Select** button to play the next tune on the Speaker. Keep pressing the button until you hear a tune you like. There are 38 tunes to choose from. You do not need to confirm your selection. The tune playing is the chime selected and the one that will be heard when the Doorbell button is pressed.
- Snap the front cover back onto the Doorbell unit and fasten with the screw.

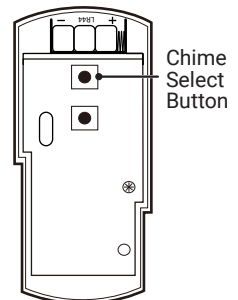

Front Cover Off

### Pairing the Doorbell with the Speaker

1. Press the **Code** button on the rear of the Speaker with a paperclip or similar object.
2. Press the Doorbell button. The Speaker will confirm pairing by playing a “Ding-Dong” sound.

### Resetting the Speaker

First, remove 1 of the 3 batteries from the Speaker’s battery compartment. Before installing the last battery, press and hold the **Code** button while installing the last battery until a “Ding-Dong” sound is heard. This clears the pairing information. You will need to pair the Doorbell unit again.

### Mounting the Doorbell Unit

The Doorbell is mounted by sticking it to a wall using the included adhesive strip.

**The Doorbell is neither water nor weatherproof, and must be installed in a sheltered location. Exposure to rain, moisture or direct sunlight will adversely affect the performance and durability of the doorbell.**

1. Find the area you want to mount the Doorbell unit. Flat, smooth surfaces are ideal. Make sure the surface is clean and dry before mounting.
2. Avoid mounting the Doorbell unit on metal surfaces as this may reduce the transmission range.
3. Peel off the covering of the adhesive strip, and attach the Doorbell unit to the wall in the location you want.

### Mounting the Speaker Unit

If you would like to mount the Speaker, simply attach a screw to the wall. Depending on the surface, you may need to drill guide holes and/or use masonry plugs or dry wall anchors. Do not insert the screw all the way. Leave about 7mm / ¼” protruding from the wall. Then place the unit onto the screw, ensuring the head of the screw passes through the mounting hole on the rear of the unit.

### Troubleshooting

#### The Speaker does not work...

- Check that the units are within 50 meters range of each other. Try placing the Speaker in another location nearer to the Doorbell.
- Check that batteries are fitted correctly with matching polarity.
- Batteries could be flat and need to be replaced. Use alkaline batteries only.

#### The Speaker plays the chime when the Doorbell button has not been pressed...

- Check that the Speaker is not being triggered by another remote like a garage door opener or similar wireless remote device.
- Reset the Speaker and pair the Doorbell unit again.
- Batteries could be running low. Try installing fresh batteries in the Speaker unit.

## Have Questions?

We're here to help! Visit our Support Center at [support.swann.com](http://support.swann.com)  
You can also email us at any time via: [tech@swann.com](mailto:tech@swann.com)



## Limited Warranty Terms & Conditions

Swann Communications warrants this product against defects in workmanship and material for a period of one (1) year from its original purchase date. You must present your receipt as proof of date of purchase for warranty validation. Any unit which proves defective during the stated period will be repaired without charge for parts or labour or replaced at the sole discretion of Swann.

The end user is responsible for all freight charges incurred to send the product to Swann's repair centres. The end user is responsible for all shipping costs incurred when shipping from and to any country other than the country of origin.

The warranty does not cover any incidental, accidental or consequential damages arising from the use of or the inability to use this product. Any costs associated with the fitting or removal of this product by a tradesman or other person or any other costs associated with its use are the responsibility of the end user. This warranty applies to the original purchaser of the product only and is not transferable to any third party. Unauthorized end user or third party modifications to any component or evidence of misuse or abuse of the device will render all warranties void.

By law some countries do not allow limitations on certain exclusions in this warranty. Where applicable by local laws, regulations and legal rights will take precedence.

For Australia: Our goods come with guarantees which cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to major failure.

## Battery Safety Information

Replace batteries at the same time. Do not mix new and old batteries or battery types (for example, alkaline and lithium batteries). Keep batteries out of reach of children. Dispose of used batteries promptly in accordance with local regulations.

## FCC Notice

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

**WARNING:** Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

