



WIRELESS ALERT

 
Wireless Door Chime with Mains Power

Model: DC820P

EN

INSTRUCTION MANUAL

OVERVIEW

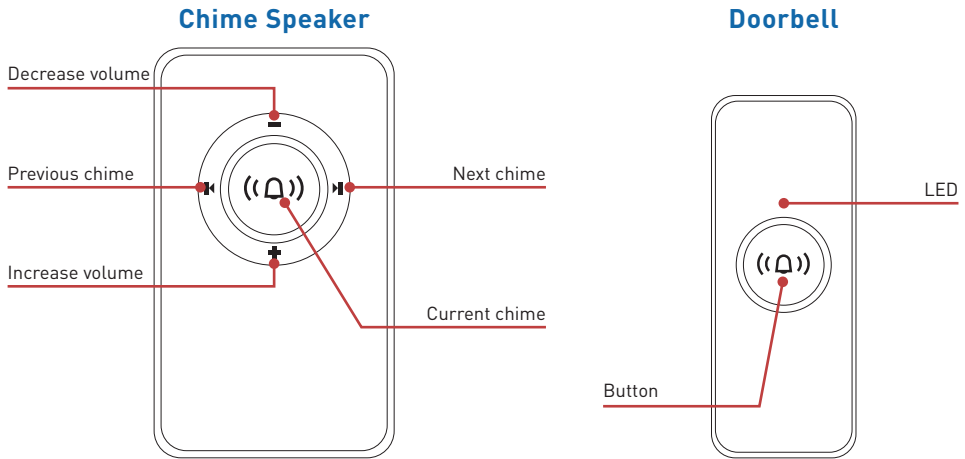

SETUP

Installing the Chime Speaker

No wiring is necessary. Just plug the Chime Speaker into an easily accessible power point and switch the power point on.

Installing the Doorbell

The Doorbell comes pre-paired with the Chime Speaker. Simply install the supplied "23A/12V" battery and it's ready to use.

1. Insert a small flat-head screwdriver into the small notch at the base of the Doorbell and carefully remove the rear cover.
2. Fit the "23A/12V" battery into the battery compartment according to the polarity markings (+ and -) shown.
3. Turn the Doorbell over and press the button. The Doorbell LED illuminates for 2 seconds and the Chime Speaker responds with the default chime. If the Doorbell LED does not come on, check that the battery is fitted correctly, and test again.
4. Replace the rear cover with the UP arrow oriented pointing up.

Mounting the Doorbell

 
The Doorbell can be mounted by sticking it to a wall with the supplied double-sided adhesive tape. The operating distance between the Chime Speaker and Doorbell is up to 50m/165ft but the range may vary depending on local conditions.

Note: Avoid mounting on metal surfaces and UPVC doorframes as these materials will interfere with the Doorbell's ability to communicate with the Chime Speaker.

OPERATING BASICS


Adjusting volume

Decrease or increase the volume of the Chime Speaker

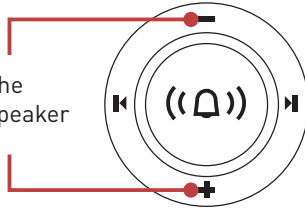


Changing chimes

 Cycle through the sounds available on the Chime Speaker.
Stop when you hear something you like.
There is no need to confirm your selection.

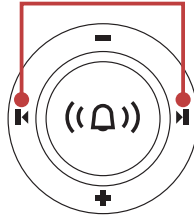

Pairing with the Chime Speaker

 If the Doorbell is not paired, here's how you can easily pair it with the Chime Speaker.

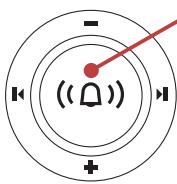

1

Make sure the chime is not playing then press and hold this button for 5 seconds. You will hear the current chime playing followed by a double beep.



 
2

Press the Doorbell button within 10 seconds. The Chime Speaker beeps once to confirm successful pairing. The pairing process ends when you hear a double beep.

Resetting the Chime Speaker

1

Switch the power point off and unplug the Chime Speaker.

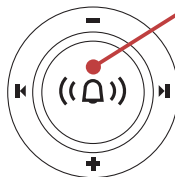

2

Press and hold this button. As you are holding the button, plug the Chime Speaker back in and switch the power point on. Keep holding the button until the Chime Speaker blinks twice. After you reset the Chime Speaker, you need to pair the Doorbell again.

Have Questions?

We're here to help! Visit our Support Center at: support.swann.com
You can also email us at any time via: tech@swann.com

Limited Warranty Terms & Conditions

Swann Communications warrants this product against defects in workmanship and material for a period of one (1) year from its original purchase date. You must present your receipt as proof of date of purchase for warranty validation. Any unit which proves defective during the stated period will be repaired without charge for parts or labour or replaced at the sole discretion of Swann. The end user is responsible for all freight charges incurred to send the product to Swann's repair centres. The end user is responsible for all shipping costs incurred when shipping from and to any country other than the country of origin.


The warranty does not cover any incidental, accidental or consequential damages arising from the use of or the inability to use this product. Any costs associated with the fitting or removal of this product by a tradesman or other person or any other costs associated with its use are the responsibility of the end user. This warranty applies to the original purchaser of the product only and is not transferable to any third party. Unauthorized end user or third party modifications to any component or evidence of misuse or abuse of the device will render all warranties void. By law some countries do not allow limitations on certain exclusions in this warranty. Where applicable by local laws, regulations and legal rights will take precedence.

For Australia: Our goods come with guarantees which cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

General Safety Notice

- The socket outlet must be easily accessible.
- Maximum power transmitted: 220-240V AC, 50Hz, 1.5W
- Maximum radio-frequency power transmitted: 2.39mW
- Wireless operating frequency of receiver: 433.920MHz
- Wireless operating frequency of transmitter: 433.965MHz

Battery Safety Information

-  **WARNING:** The Doorbell unit contains a small battery. If the battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think the battery might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Risk of explosion if battery is replaced by an incorrect type.
- Keep battery out of reach of children.
- Dispose of used batteries promptly in accordance with local regulations.

FCC Notice

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

WARNING: Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

EU Declaration of Conformity

Hereby, Swann Communications, declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. A copy of the Declaration of Conformity can be found at: www.swann.com/uk/compliance

