



Transmitters programming:

Only two transmitters are functional for one remote central locking system. Please program the both transmitters together:

1. Press and hold the learning button for 1 second
2. Press the "lock" button on the first transmitter, then press the "lock" button on the 2nd transmitter.

Now both transmitters are functional. The lost transmitter will not operate the system again.