digitech

Oneway Remote Control



Model: LR8882

Instruction Manual

BEFORE FIRST USE

Prior to using your product, please read all the safety and operating instructions thoroughly. Please ensure you follow the steps below before using the product. We recommend you keep the original packaging for storing the product when not in use.

Find a safe and convenient place to keep this instruction manual for future reference.

Unpack the product but keep all packaging materials until you have made sure your new product is undamaged and in good working order. Ensure you have all accessories listed in this manual.

BOX CONTENTS

1 x Remote Control

FUNCTION

- Pressing button 1 will control relay 1.
 Pressing button 2 will control relay 2.
 Pressing button 3 will control relay 3.
 - Pressing button 4 will control relay 4.
- 2. When you press the button then the LED light will start to flash.
- 3. The numeric keypad buttons has a luminescent function.

SET UP

To connect the remote simply press the program button on the Wireless Remote Control Relay, then press the remote button. The LED will flash once to indicate a connection. Any valid remote transmission will be indicated on the Wireless Remote Control Relay with a 1 second LED flash.

SPECIFICATIONS

Operating Temperature	-5 to 35°C
Dimension	44mm x 52.7mm x 16.1mm
Frequency	433.92MHz ± 75KHz
Modulation	ASK
Compatible Actuator	LR8880
Stand-by current	0.02uA - 0.11uA

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.