

POWERTECH

MB3200

1-Channel Li-ion Battery Charger



Instruction Manual

Please read and save this instruction to ensure safe and effective use of this product.

(eg laptop, powerbank, etc.).

4. The charger will perform auto-detection and inspection after proper power connection.

Charging process

5. Insert the rechargeable battery according to the orientation indicated positive “+” and negative “-”.
6. LED indicator will turn red. It enters into charging condition.
7. After charging is completed, the LED indicator will turn green.

Remark: The LED indicator will go out for battery reverse.

Specification

 Input	DC 5V/2A
 Battery Types	Li-ion
 Max Wattage	10W

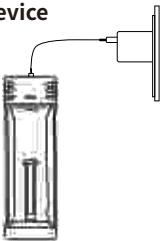


Fig.

Description of the device

- 1-LED indicator
2-Cooling grid
3-Battery slot
4-Type C input port
5-USB-A connector
6-USB-C connector

Using the device



Power Supply

1. Connect the USB-C connector (see Fig.6) of the enclosed cable to the Type C socket in the charger (see Fig. 4.)
2. Connect the USB-A connector (see Fig.5) of the enclosed cable to the adapter or other device from which the charger will be powered.
3. Make sure that the adapter is connected to the mains or that the device is sufficiently powered or charged

Warranty Information

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months. If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you. The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:
Electus Distribution
Address 46 Eastern Creek Drive,
Eastern Creek NSW 2766
Ph. 1300 738 555