

POWERTECH

MB3832

Solar Power Bank with Foldable Solar Panels



Instruction Manual

OVERVIEW:



1. Outdoor LED Light
2. Solar Charging Indicator
3. Battery Status Indicator
4. Power Button
5. Sun Plate Buckle
6. Hanger
7. Solar Panel
8. Compass Kit
9. LED Flashlight
10. USB Output 2
11. USB Output 1
12. Micro USB Input
13. Type-C In/Output

PRODUCT SPECIFICATIONS:

Micro USB Quick Charge Input:	DC 5V/2.4A 9V/2A
Type C Quick Charge Input:	DC 5V/2.4A 9V/2A
Type C Quick Charge Output:	DC 5V/3A 9V/2A 12V/1.5A
USB Quick Charge Output 1:	DC 5V/3A 9V/2A 12V/1.5A
USB Quick Charge Output 2:	DC 5V/3A
LED Flashlight Wattage:	1W
Camping Light Wattage:	3W
Solar Panel Output:	300MA/Panelx4 (25000LUX)
Battery Capacity:	20000mAh/3.7V (74WH)
Battery Type:	Polymer Lithium

BOX CONTENTS:

1 x Wireless Solar
Power Bank

1 x USB Cable
1 x User Manual

1 x Carabiner

PRODUCT FEATURES:

- Exclusive design, versatile and practical
- Original A-class polymer batteries, safe and stable
- High capacity portable power bank, quick charging input and output
- Comes with both LED flashlight and camping light, especially made for emergency and outdoor use.
- Foldable solar panels, power your devices anytime, anywhere.

INSTRUCTIONS:

1. Turn on/turn off

Gently press the power switch, then the LED battery indicators are on. If there is no charging devices, power bank will automatically shut down in 30 seconds.

2. How to charge the power bank

Solar supply - Unfold the solar panels and put the power bank under direct sunlight and sunlight will be converted into electricity to charge built-in lithium battery automatically. (Strong sunlight is advised.) That the green light is on means the power bank is being recharged by sunlight or other forms of light.

Power supply - Connect the Type-C or USB input port and wall/car adapter USB port with a cable. The blue LED indicators will be flickering while charging, and all blue indicators on means the power bank has been fully charged. QC3.0/PD wall/car adaptor will quick charge the power bank.

3. Charge mobile phones or other devices

Cable charging - turn on the power switch and the blue indicators are on. Plug two ends of the cable into the power bank USB port and the devices. USB 1 port and Type-C port support fast charging for mobile phones and devices with fast charging function.

4. LED flashlight function

First press the power button for about 3 seconds to turn on the LED flashlight. Second, short press the power button again and "flashlight mode" flashlight turns to "SOS mode" flash. Third, short press the power switch again, the flashlight function as a strobe. Then, long press the power switch to turn off the flashlight.

5. Camping light function

First, quickly press the power button 2 continuous times to turn on the camping light. (Default max brightness) Second, there are 3 brightness levels. Short press power button once to adjust the brightness level. Third, quickly press the power button 2 continuous times again and the camping light is off.

Note: Due to safety and power saving reasons, LED flashlight and camping light cannot be turned on at the same time.

WARNING:

- Please do not refit or disassemble the power bank without authorisation.
- Keep the power bank away from fire and wet environment, and do not clean the power bank with chemicals.
- Please do not place the power bank under high temperature environment, suggested temperature range from -20°C to 60°C .
- If not intend to use the power bank for a long time, please charge it at least every three months.
- Please do not use the power bank or charge any devices while it is being recharged.

Distributed by:
Electus Distribution Pty Ltd
46 Eastern Creek Dr,
Eastern Creek NSW 2766 Australia
Ph 1300 738 555
Int'l +61 2 8832 3200
Fax 1300 738 500

www.electusdistribution.com.au