

# Wireless Charging Stand



Model:  
MB3870



Please read and save all instructions to ensure safe and effective use of this product.

## Instruction Manual

### KEEP FOR FUTURE REFERENCE

**"READ BEFORE USE!! Warnings!** For internal use - do not use the product in case of damaged cable. Take to a repair centre. Not a toy. Keep out of reach of children. The appliance should not be used by persons with reduced physical problems, sensory or reduced mental abilities, or lack of experience/knowledge, unless they are under adult supervision or adequate instructions have been given.

### PARAMETERS

Input: 5V  $\approx$  3A; 9V  $\approx$  3A

Output: 15W /10W /7.5W/5W

Charging Distance:  $\leq$ 8mm

Product Dimensions: 81X81X41mm

### PRODUCT FEATURES

- No charging cable needed: no need to connect a cable to your smartphone.
- Wide compatibility: compatible with all phones supporting the wireless charging standard.
- Charging tip: to ensure charging, you may need to remove your phone case.
- Charge freely, enjoy uninterrupted entertainment: watch videos or movies while charging, in portrait or landscape mode as you prefer, without missing messages or video calls.

Compatible devices

- Compatible with wireless charging devices.

### WARNINGS

1. Never use this product above its rated output power.
2. Remove thick cases when charging.
3. Keep away from liquids.
4. Disconnect power before cleaning.

### CLEANING & MAINTENANCE

- Clean charging area with soft dry cloth.
- Disinfection: Gently wipe with microfiber cloth lightly moistened with isopropyl alcohol (70%).
- Always disconnect power before cleaning.
- Prevent liquid ingress into charging ports/connectors.
- Avoid abrasive cleaners or solvents that may damage finish.

### FAQ

Issue 1: Wireless charging doesn't start

Verify:

- Device Wireless compatibility
- No metal objects between phone and mount

Issue 2: Intermittent charging

Try:

- Repositioning phone at charging center
- Using different power supply (e.g. 15W)

### CONTENT

1. Charging Stand  $\times$ 1
2. USB  $\times$ 1
3. Manual  $\times$ 1

### WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure. To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555