

Tone	LED Indicator	Fault	Solution
1 beep	Green LED solid on	Working normally	N/A
2 beep	N/A	Undervoltage warning	Check battery input.
3 beep	Red LED solid on	Undervoltage protection	Check battery input.
4 beep	Red LED solid on	Overvoltage protection	Check battery input.
5 beep	Red LED solid on	Overheat protection	Ensure unit has appropriate ventilation. Leave unit switched off until it cools down.
Continuous beep	N/A	Inverter overload protection	Ensure load is within the rating of the inverter. Turn unit off for 10 seconds to reset.