

POWERTECH



OUTDOOR SMART OUTLETS

POSP20W

INSTRUCTION MANUAL

Important Safety Instructions

1. Read all instructions carefully before use.
2. Keep these instructions for future use.
3. Suitable for domestic, indoor or outdoor use only. The IP rating for this product (indicated on the unit's Rating Label) is applicable only when the unit is installed vertically, the Power Cord is inserted into a suitable wall socket, the power cords of the connected devices are passed through the holes on the Lid, and the Lid is closed securely.
4. Do not use an extension cord to connect the Outdoor Plug to the wall socket outlet; only use the Power Cord attached to the unit.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
6. This product is not a toy! Children should be supervised to ensure that they do not play with the appliance.
7. Do not immerse in liquid or allow liquid to run into the interior of the unit, as this could create an electrical shock hazard.
8. Do not use this appliance on a wet surface, or where it can fall or be pushed into water.
9. If the supply cord is damaged, it must be replaced by a qualified electrical person in order to avoid a hazard.
10. Do not operate with the cord coiled up.
11. Do not exceed total maximum load.
12. Do not dispose of in fire or water, incinerate, or cause a short circuit.
13. This product has no user-serviceable parts. Do not dismantle. Refer all servicing to qualified personnel only.
14. Do not use this product near any heat sources like heaters, radiators, stoves, or other appliances that produce heat.
15. If the product has sustained any damage such as from being dropped, do not use again until checked by a qualified electrician. The device must be unplugged to achieve isolation before any inspection or repair to the device is attempted.
16. The plugs of your connected devices are protected when the lid is closed, however the Outdoor Smart Outlet's own plug must be connected to a weatherproof powerpoint or otherwise kept safe from the elements.

Product Overview

Hang Hole



Power Button with Indicator

Power Indicators
(For Plugs 1 and 2)

Surge Protection
Indicator



Power Cord and Plug

Plug 1

Plug 2



Reset Button



Weatherproof
Lid

Cable Pass
Through



Configuring The Outdoor Plug (Smart Control)

Important: Outdoor Plug must be connected to an active Wi-Fi connection for smart control.

Smartphone or tablet app (as explained below) is required for controlling the sockets using your phone or tablet.

1. Either scan one of the QR codes below with your phone/tablet camera, or search for 'Tuya Smart' or 'SmartLife' on your smartphone/tablet's app store and install one of these two apps. The apps are very similar, either will work.



Tuya Smart



SmartLife

2. Open the newly installed app and create a new account (or log in with an existing account).
3. On the app page, tap '+' to add a device. Tap 'Electrical' and choose 'Power Strip (Wi-Fi)'.
4. Plug in your Smart Outdoor Plug to a mains outlet. The Indicator Light on the Power Button will blink fast. This means that the device is ready to begin pairing.
Note: If the Indicator Light is not blinking, try resetting the device. Press and hold the Power Button for 5 seconds, then release. The Indicator Light should now blink fast.
5. Follow the prompts on the app to pair the Outdoor Plug to your account. When prompted, select your Wi-Fi network and enter your password. Note that connection is only possible via a 2.4GHz Wi-Fi connection.
6. Once the Smart Outdoor Plug has connected to your home Wi-Fi, setup is complete. Once complete, you can control the Sockets via the app whenever you have a data connection.

Operation

Important notes for outdoor use:

- . The unit must be installed vertically in the direction marked by the arrow on the unit Rating Label.
- . Power Cord of the unit must be inserted into a suitable weatherproof wall outlet.
- . Power Cords of connected devices must be passed through the holes on the Lid, and Lid must be closed securely.

1. Plug in your Outdoor Plug to a suitable Mains Socket. The red Surge Protection Indicator and the green Power Button Indicator turns on.
2. Connect devices as required to Plugs 1 and 2 as required. Run the cables through the Cable Pass Through and close the Lid securely.
3. Hang the unit on a suitable screw.
4. Press the Power Button to turn on Plugs 1 and 2.
5. Use the app on your smartphone or tablet to control the Plugs individually.
6. After use, press the Power Button to turn off the Plugs. Unplug the Outdoor Plug from the Mains Socket to disconnect it from power completely.

Technical Specifications

Input: 240V~ 50Hz

Mains Outlet: Max 10A, 2400W

IP Rating: IP54

Troubleshooting

Problem	POSSIBLE CAUSE/ SOLUTION
Wi-Fi is not connecting	<ul style="list-style-type: none">• Only 2.4GHz Wi-Fi is supported. 5GHz Wi-Fi is not supported.• Ensure there is adequate WiFi signal at intended location
I am not getting notifications on my smartphone	<ul style="list-style-type: none">• Make sure you have turned on notifications for the installed app, in your smartphone settings.

Warranty

Our product is guaranteed to be free from manufacturing defects for a period of 3 years.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim. Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

Distributed by:

Electus Distribution
Address: 46 Eastern Creek Drive, Eastern Creek, NSW 2766
Ph: 1300 738 555