

IP Video 9100

User Guide



User Guide



IP Video 9100
Manual version: 2.1
Date: June. 30, 2004

Caution: Any changes or modifications not approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for FCC and CE. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in commercial environment.

Important Notice

1. IP Video 9100 is for indoor use only.
2. IP Video 9100 is not waterproof. Therefore we will not hold any damage responsibility if IP Video is used under raining condition.
3. Be sure to use the DC adapter that is provided by your dealer. We will not hold any responsibility if wrong DC adapter is in use.
4. Be caution in handling IP Video 9100 for physical shocks may occur serious damage.
5. If IP Video 9100 does not operate properly, please contact your local dealer for after sale service. In all cases, you are prohibited to disassemble the product. If so, we do not hold any responsibility for mal-function nor service warranty.

Table of Contents

1. PRODUCT OVERVIEW..... 4
 FEATURES
2. PHYSICAL DESCRIPTION 5
 SPECIFICATION
 SYSTEM MINIMUM REQUIRNMET
3. PANEL DESCRIPTION.....6
 FRONT PANEL.....
 BACK PANEL.....
4. INSTALLATION.....7
 PREPERATION.....
 HARDWARE INSTALLATION
 SOFTWARE INSTALLATION
5. INTERNET SET UP 14
 LAN SET UP
 INTERNET SET UP.....
6. FUNCTION.....16
 SIMPLE FUNCTION
 VIDEO ADJUSTMENT.....
 SECURITY SETTING
 MOTION DETECTION FUNCTION.....
7. OTHER FUNCTIONS.....26
8. AOUTHORITY.....26
 ADMINISTRATOR
 NORMAL USER
9. CAUTION.....29
 ADDITIONAL INFORMATION : FAQ.....

1. Product Overview

IP video 9100 has an IP digital web server inside. With this great gadget you can put up **4 different sources** with only one set of IP, for example (live security observing, online education, TV shows, video games and etc) make remote locations immediately accessible through standard web browsers. IP video 9100 is equipped with cutting edge technology, includes 4 video in, 1 video out, a web server, and physical Ethernet connection. Therefore it does not need to plug in front of computer, you can simply just plug into an internet line and start observing or broadcasting from any where in the world.

FEATURES

IP Video 9100 features :

1. **Embedded Web Server**
2. **Pass image to Displays - TV, PDP, HDTV. LCD TV**
3. **Support MSN & YAHOO Messenger**
4. **Can input 4 different sources.**
5. **Multi – video or video source from different area.**
6. **Layout 1x1, 2x2, 3x3, 4x4**
7. **Resolution - True 640x480, 352x288, 320x240, 176x144,
& 704 * 576, 160 *120**
8. **Video Quality - Low, High**
9. **Color adjustment: Brightness, Contrast, Hue, and Saturation**
10. **Motion Detection - Three-Sensitivity Level.**
11. **E-mail the Detected Images to preset e-Mail address.**
12. **FTP the Detected Images to preset FTP server.**
13. **Support Network - Fixed IP, DHCP, PPPoE and DDNS.**
13. **Default HTTP Port supported-**
14. **Changed to fit different network.**
15. **Browser by Internet - IE (Internet Explore)**
16. **Support Java Applet support and Active X control.**
17. **A Linux based server**
 - 10/100BT LAN supported
 - Built in JPEG Decoder
 - Motion detection

 - User may setup his email address in the system, let the system notice the user when an event occur
 - Provide some GPIOs for different application
19. **Support GlobalSign – no need to lower security level.**
20. **Work with MSN& Yahoo Messenger, AMCAP, and WMCAP & VIDCAP program**

2. Physical Description

BOX CONTENT

IP Video 9100 package content :

! 1 x *IP Video 9100*



! 1 x RJ 45 internet line



! 1 x DC Power adopter (5V, 110~220V)

! **2 x Composite Cable (RCA jacks)**

! 1 x CD (a. IP Editor program b. User Manual book)

! 1 x Quick Installation Guide

Minimum Requirement

- $\geq 300\text{MHz}$ Intel Pentium II and above
- Windows 98 / SE / 2000 / ME / XP, or LINUX, MAC system
- $\geq 64\text{MB}$ memory
- VGA Card : support Hi - Colors and above and direct draw
- Internet card - RJ 45 (CAT 5)
- Internet Hub / Router
- Internet : one set of IP provided by your ISP


EX: xxx.xxx.xxx.xxx

3. Panel Description

Side Panel: 4 Video Input

Back Panel: from left to right:

1. Reset Button
2. DC Power - 5V, 110 ~ 240.
3. Power On / Off
4. Network - RJ 45
5. Video Out

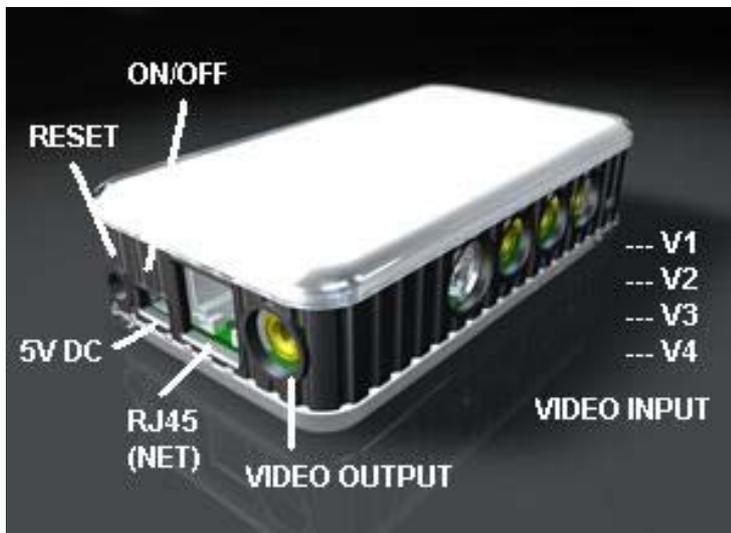

4. Installation


Before using IP Video 9100, follow bellow:

Before installation:

- Reconfirm your package content
- Prepare a Hub for Internet monitor
- Electricity 110 ~ 240 V

Hardware installation


1. Plug in IP Video 9100 Power
2. Plug in RJ 45 line to a HUB
3. Connect the HUB to Internet modem (ADSL/XDSL modem)
4. Connect Video source for IP Video box.
5. Turn you computer on


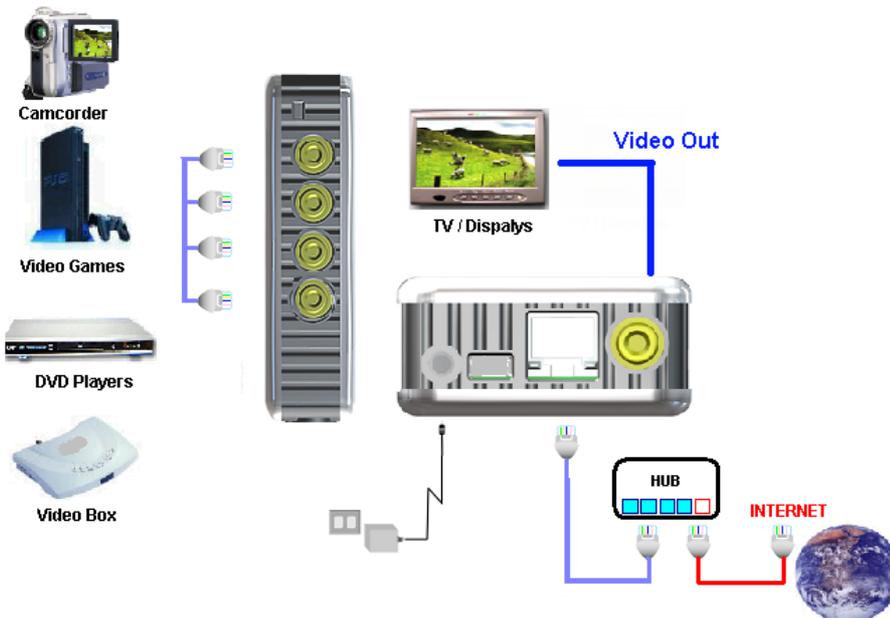



SOFTWARE INSTALLER

After connecting the power and RJ 45 line, following the steps below to install the software.

Step 1: Install IP KAM by executes Setup.exe in the CD; choose setup language and the install shield Wizard will help finish the program.

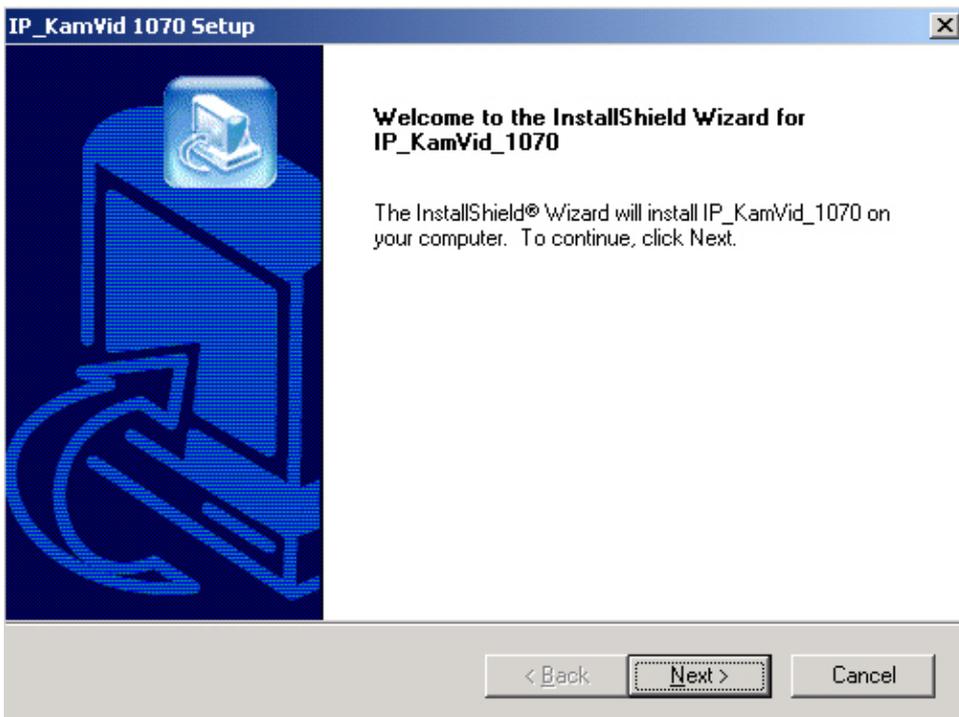


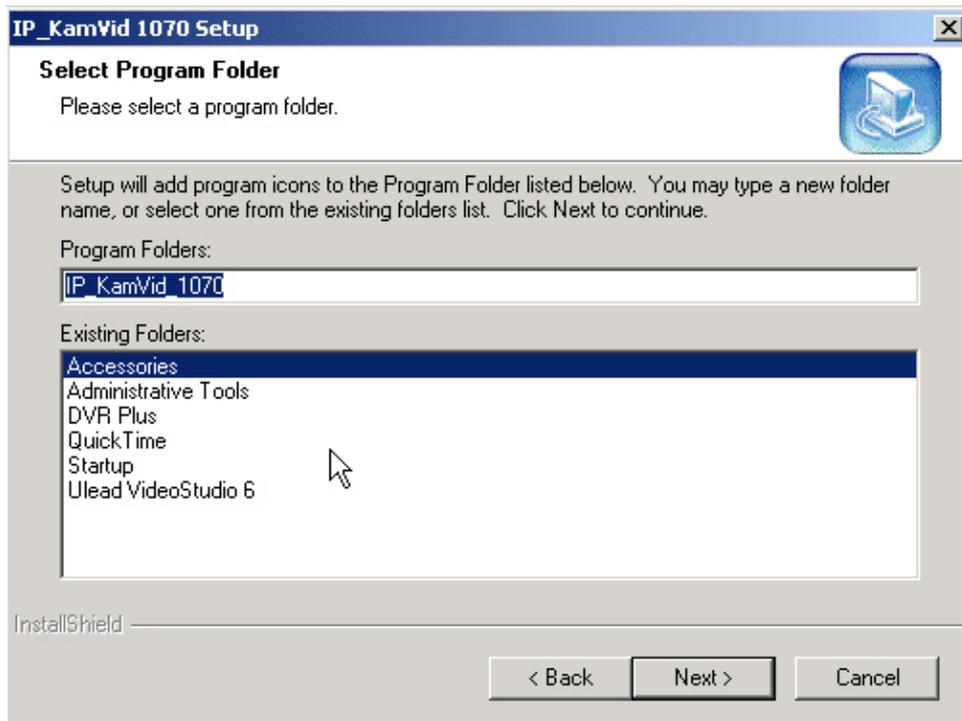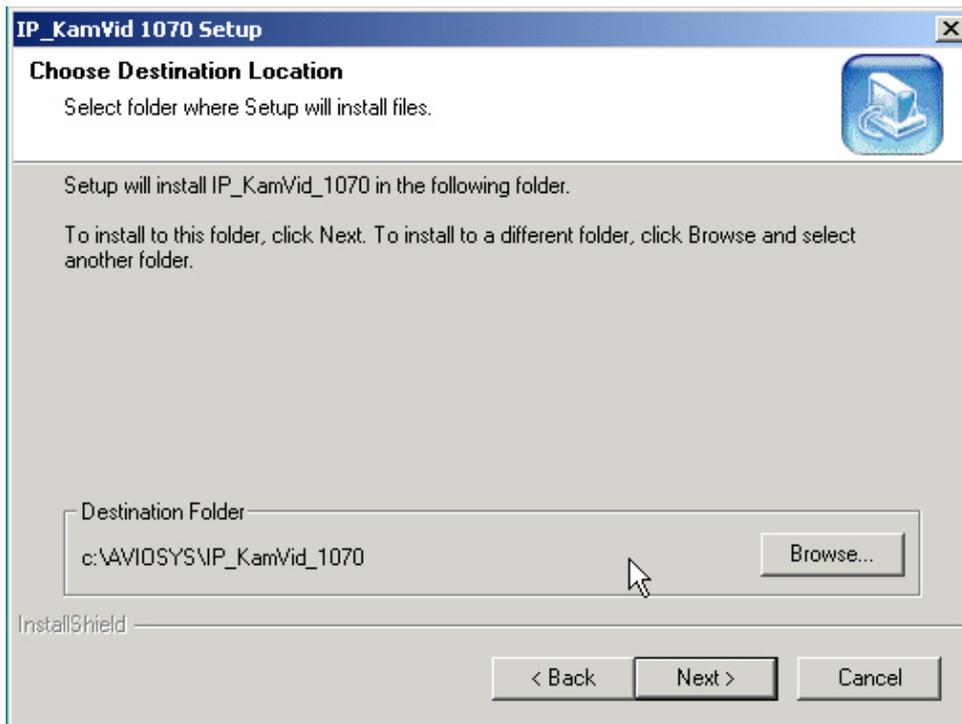

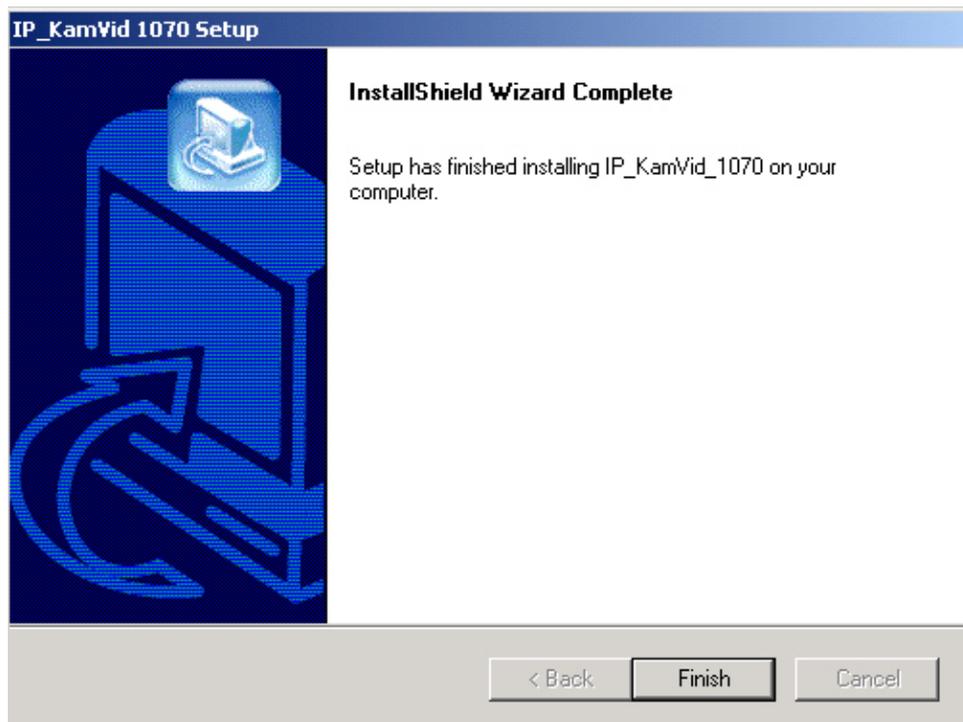


Step 2: Then you can see shortcut icon "IP KamVid 1070 "on desktop, click this icon.

Note: Be sure that the power is turn on and the RJ45 line is properly connected.

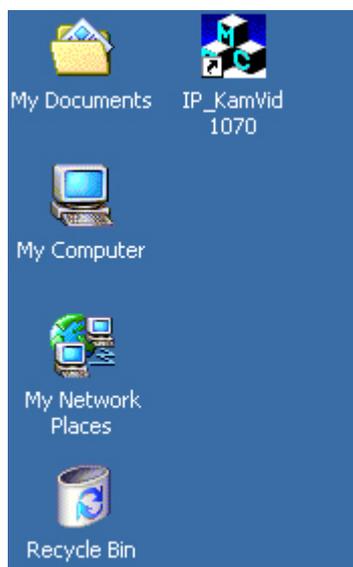


Step 3: The KIPEDIT program will detect all the active IP9000s or IP9100s in the same local Ethernet, and display the findings in the window.

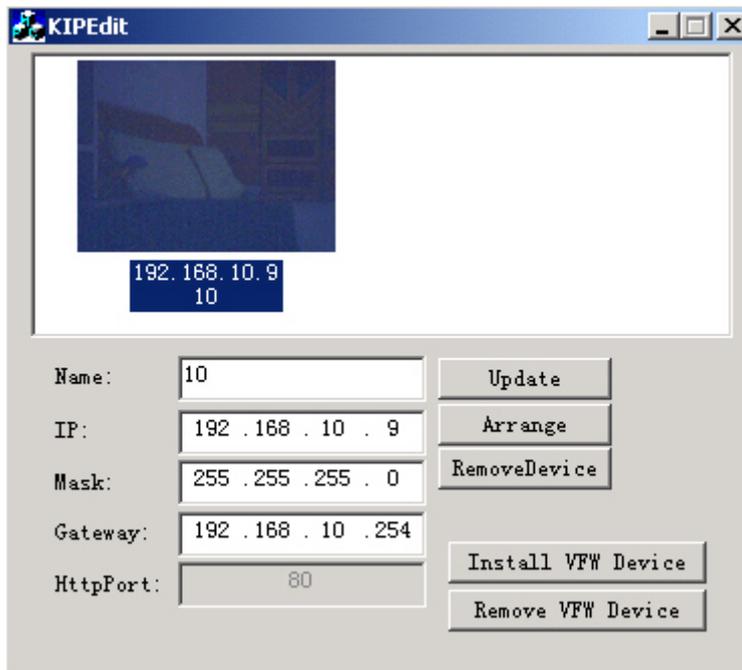

Step 4: Click the one you want to set, its name, IP will be displayed below. You can change its name (please use numbers or letter) or IP (please set in the same subnet as your PC) in the text windows. Then click **Update**. After about 20 seconds, the new setting will work.

Step 5: Double click the picture in the window of **KIPedit** or type the IP address in the IE browser, you can open the web page of IP9000. If you can not open the web page of IP9000, be sure that you have installed IE 6.0 with SP1 or later version.

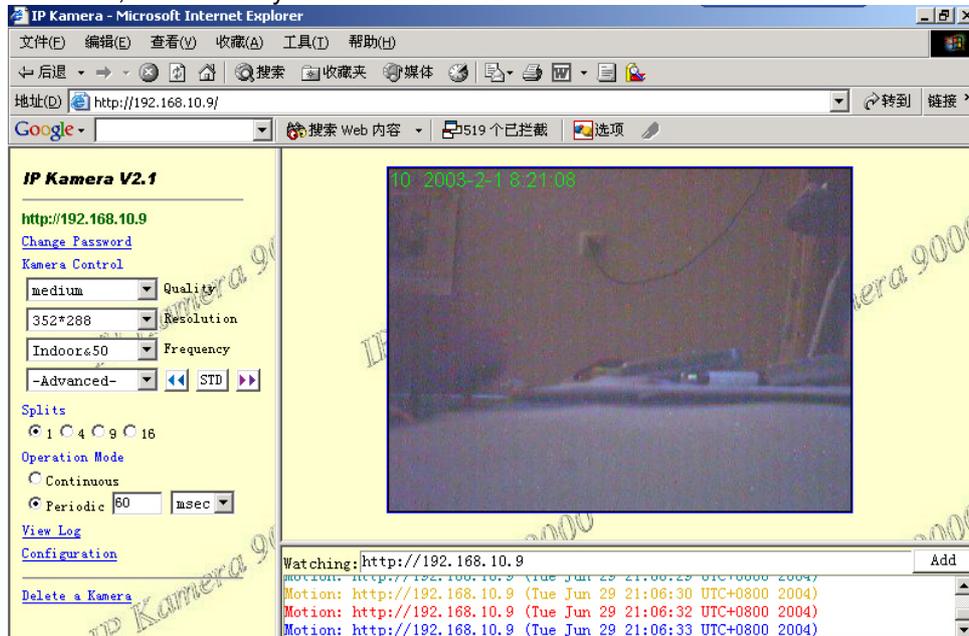

NOTE:

1. After you have installed IP9000 on your PC, the IP9000 was registered in DirectX. IP9000 can be used as local camera by any software that supported DirectX, such as MSN, Amcap, Media encoder, Yahoo Messenger as long as you not change the directory path of ipcam's driver.

2. For those software that only supported old VFM driver, such as Vidcap and netmeeting, please click **install VFM device**, then you can get the captured images from IP9000 (you should be the administrator at the first install process)

3. For those not totally compatible with VFM, such as QQ and POPO, you should click **remove device** button first, then click **install VFM device**, then you can get the captured images from IP9000.

Work with Yahoo /MSN Messenger


1. Work with Yahoo /MSN Messenger: We use Yahoo for instance. Select the friend you would like to send your video. For instance, we pick up YahooHelper.



2. Choose Webcam then system will ask your Internet connecting speed.



3. Then My WEBCAM will jump up. Please go to “file “ → “Preference” → “Camera Setting” to select your prefer video to transfer.

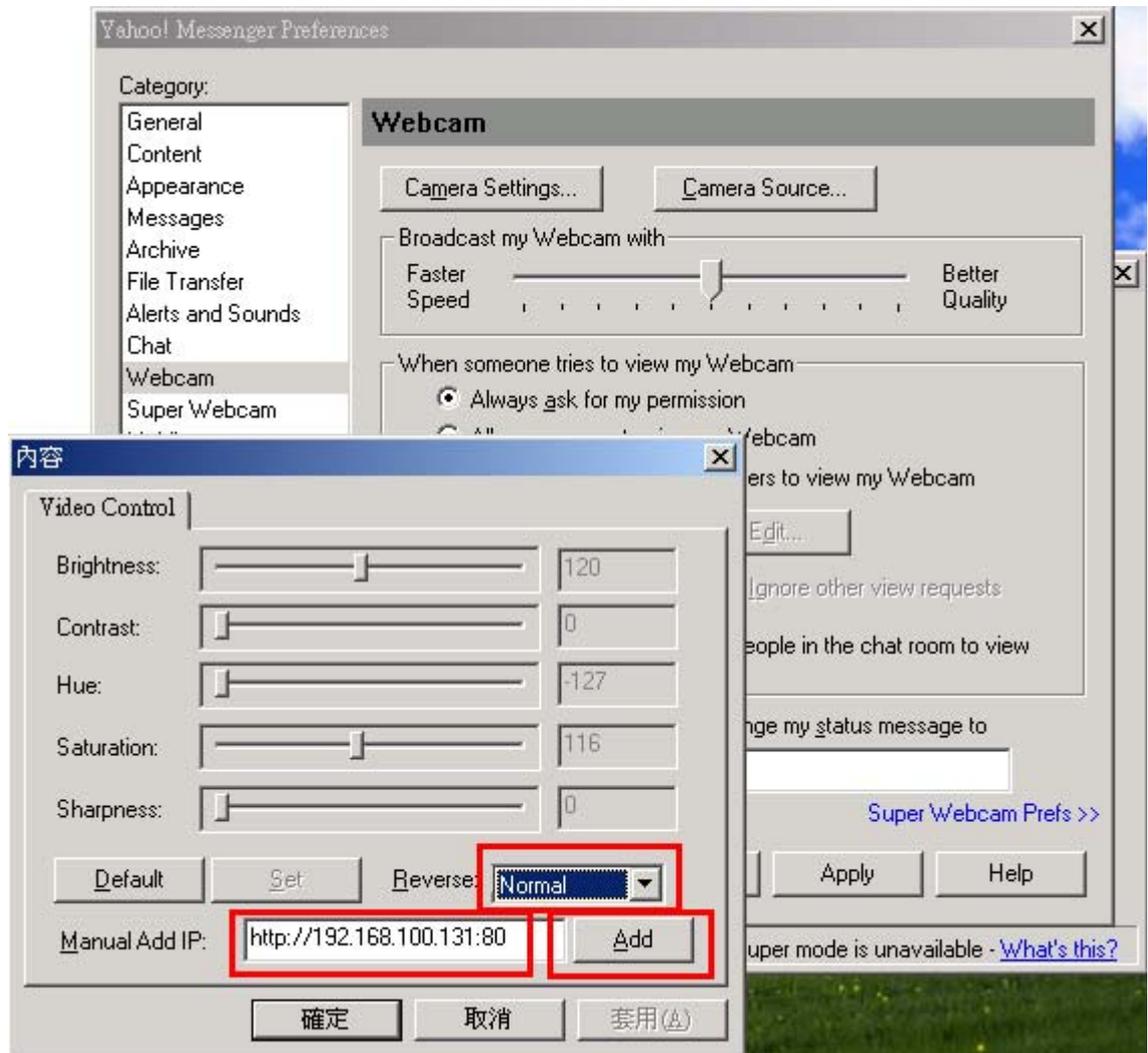

4. You can type in appointed IP address (No matter Real IP or Dynamic IP) and confirm by click “Add” and choose if reverse the out streaming video.

We support

- A. Normal
- B. Flip Vertical
- C. Flip Horizontal
- D. Rotate 180

If the video is upside down, you can choose D to get rotate video.

And also adjust the video color ; Brightness, contrast, Hue, Saturation, Sharpness

Note



1 : for safety issue , as transfer video by Yahoo /MSN, only Administrator can do the video streaming. You have to type the username and password.

2 : Work with Yahoo/ MSN , the streaming speed is depend on Yahoo .MSN server.

5. Network Set up

From our Network set up, users can view live video from any where in the world, with just a computer.

Click on Network set up: this area is authorized by administrator only.

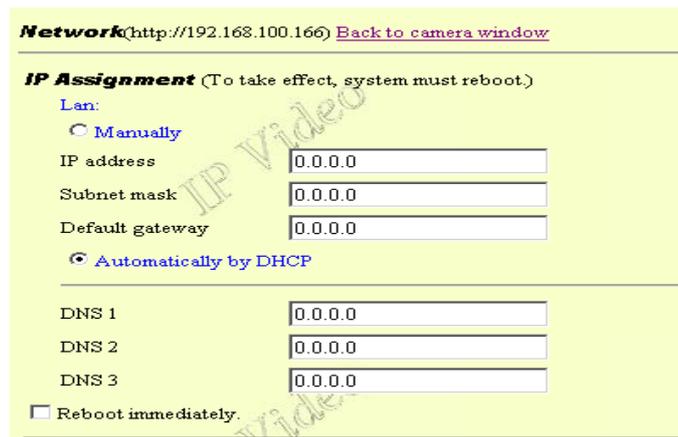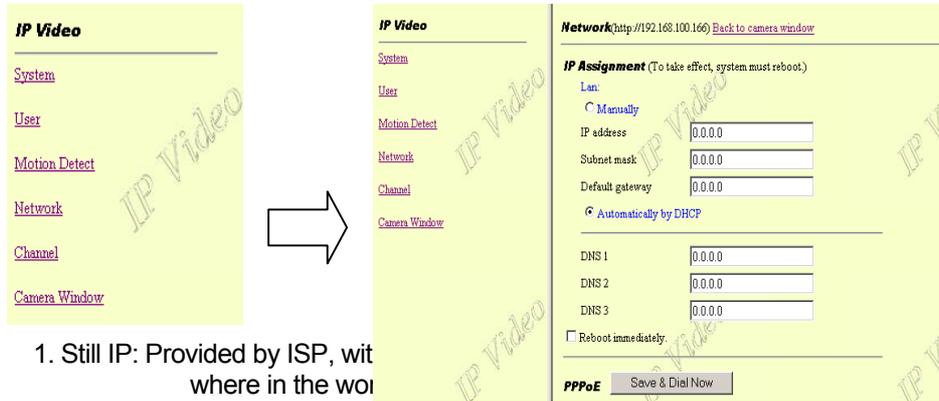

1-1 : Using Still IP: list your still IP address

1-2 : Choose “Reboot immediately”. Please close your browser and reboot again and type in your IP address once again.

If using DHCP , please choose ‘ Automatically by DHCP’

*And please use IP EDITOR program (Find users exact IP) that’s included in the CD ROM

2. DHCP setup- ADSL / xDSL: ISP will provide your exact IP address, please enter your Username and password for your provider.

PPPoE

Dial On Power Up

Username

Password

Send mail after dialed.

Mail server

Username on mail server

Password

Sender email

Receiver email

Subject

2-1 Enter your user name, password, mail server, mail name (pass word), sender e-mail, and receiver e-mail.

PPPoE

Dial On Power Up

Username

Password

Send mail after dialed.

Mail server

Username on mail server

Password

Sender email

Receiver email

Subject

2-2 Choose Save & Dial Now, by using PPPoE it can automatically dial to your ISP, and ISP will provide exact IP address in your mail.

2-3 Turn off your browser of IP Video 9100 and restart

PPPoE Disconnect

Dial On Power Up

Username

Password

Send mail after dialed.

Mail server

Username on mail server

Password

Sender email

Receiver email

Subject

Save

Local IP: 61.229.200.141

Remote IP: 61.229.192.254

DNS 0: 168.95.1.1

DNS 1: 168.95.192.1

DNS 2: 0.0.0.0

Gateway: 61.229.192.254

Net Mask: 255.0.0.0

6. Functions

Please refer to all the function on the left side of IP Video 9100 AP; most of its configuration can only be use by Administrator.


Functions:

1. IP address
2. Change Password
3. Camera Control:
 - Picture Quality - Low, High, Medium, Clarity& Motion
 - (Resolution) - 640*480,352*288,320*240,176*144
 - Frequency – Indoor 50, Indoor 60 & Outdoor
4. Image (Split) - 1x1, 2x2, 3x3, and 4x4
Note – split image are focus into a single image.
5. Operation Mode:
 - Continues mode
 - Period – refresh 1 - 60 second
6. View Log: check on visitors IP

7. Configuration: System, User, Motion detection, Network, Channel, and DDNS

8. Right click function: Record, Snap,

3-1. Frequency: indoor, outdoor&50, outdoor&60

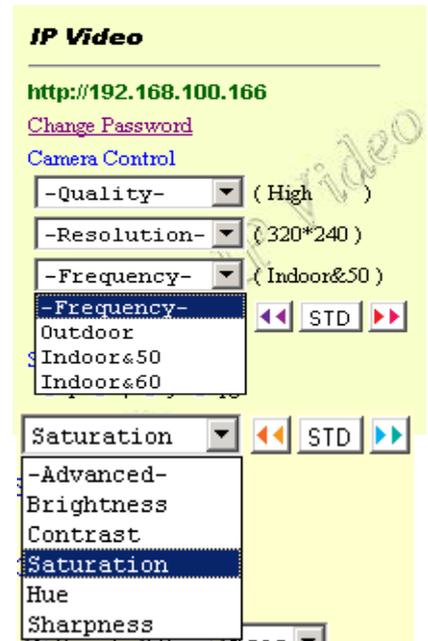

3-3: Color Adjust

: Brightness Contrast, Saturation, Hue, Sharpness

STD –Default color

4. Splits – 4 / 9/ 16 screen

 
4-1: 4 screen



4-2: 9 screen



4-3:16 screen



5. Operation Mode:

Continues mode: Video will display continues

Period – Video will refresh 1 - 60 per millisecond or per second

Operation Mode



Continuous
 Periodic msec

6. View Log – view which IP has been visiting your Live image

Note: View/Log / Camera Window

As in View Log, the video will not show on windows, to get the video back


Please click Camera Window.

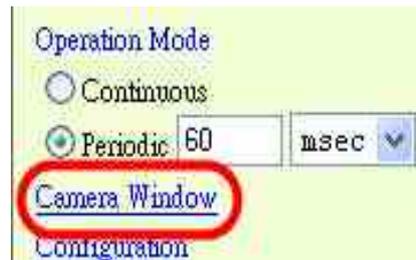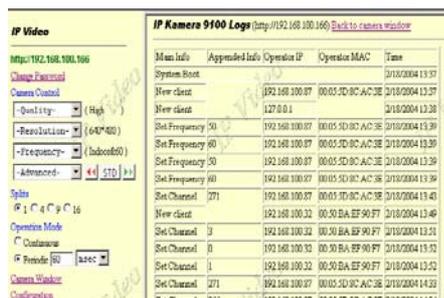


7. There are Video setting in Configuration:

- * System
- * User
- * Motion Detection
- * Network
- * Channel
- * DDNS

Kamera Window: Click to go back to Application main page.


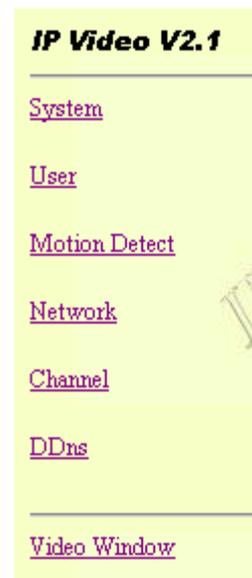


7-1 System Setting: Setup Name , Time , show on Windows,

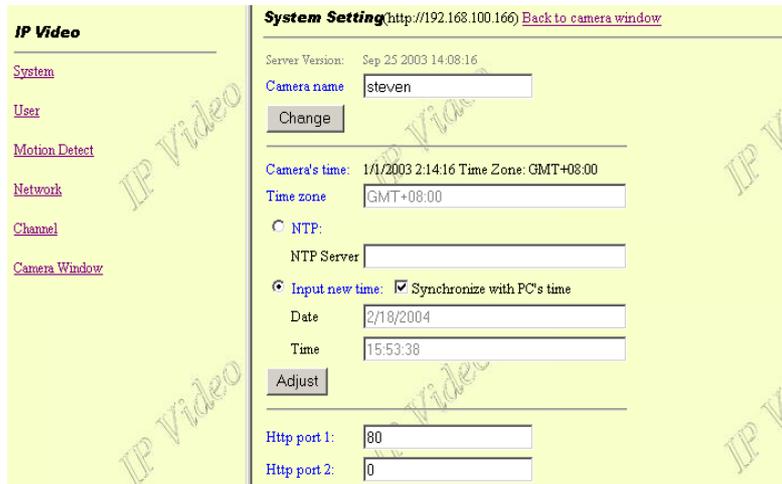

7-1-1 : Camera name, time and date setup

 
Note: maximum 18 English characyers

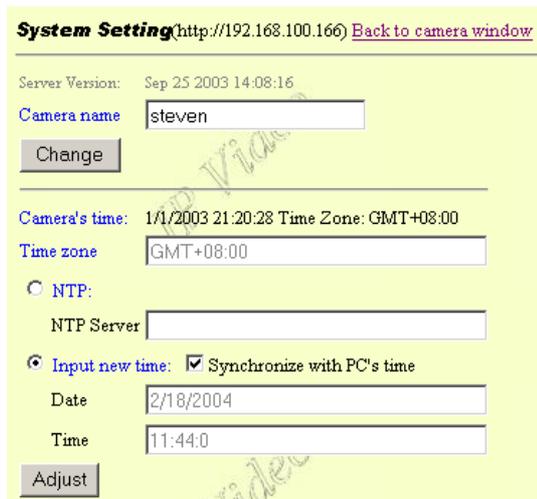

7-1-2 : Http Port setup : For customer with

IP Sharer device can setup the share port

Please check the setup in the IP Share device and type the port number in this area.

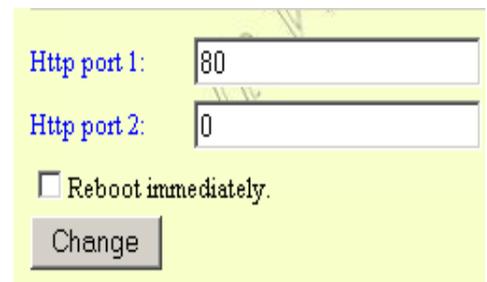

7-1-3 : Reset to factory configuration

7-1-4 : Restart IP Video 9100

7-1-5 : Renew its firmware



7-2. User Management:

Can choose user authorization require optional

Choose if viewers need a password or not.

Yes - Viewers needs a password

No - Open to all viewer who logs in to users IP

User authorization required:

Yes No

Set

7-2-2: Add user by adding a username and a password and you can add a current users list.

Add a user or change password:

Username:

Password:

Confirm:

Set/Change

Username:

Delete

Current users list:

- guest
- guest1
- administrator

7-2-3: You can also delete a user by selecting its name and press delete.

Delete user:

Username:

Delete

Current users list:

- 1: guest
- 2: guest1
- 3: administrator

Current users list:

- 1: guest1
- 2: administrator

7-3: Motion detection: when motion detection is triggered, it will automatically send video or image to user E-mail or FTP site.

IP Video

System

User

Motion Detect

Network

Channel

Camera Window

Motion Detection Setting (http://192.168.100.166) Back to camera window

Motion Detect

Enable Disable

Sensitivity

Mail Setting (for sending images detected)

Mail server

Username

Password

Sender email

Receiver email

Subject

Interval(ms)

Send mail when motion detected.

FTP Setting (for uploading images detected)

Ftp server

Username

Password

Account

Upload path

Interval(ms)


Upload images when motion detected.

Save Settings


7-3-1: Choose motion detection:
 Disable -
 Enable: choose – Low / Mid / High




7-3-1-1: Motion Detection Setup:
 Fill sender mail and receiver mail.

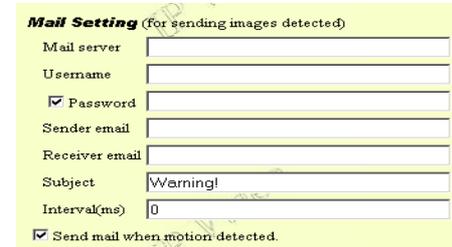

7-3-1-2: When send to FTP, please fill in its FTP server address, user name, password, account and upload path, and click on Upload images when motion detected.

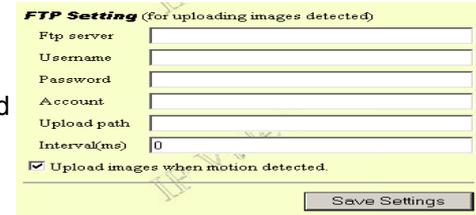


7-4. Channel:
 Fixed: select 1~ 4 for changing every different channel.
 (Only one channel for once.)

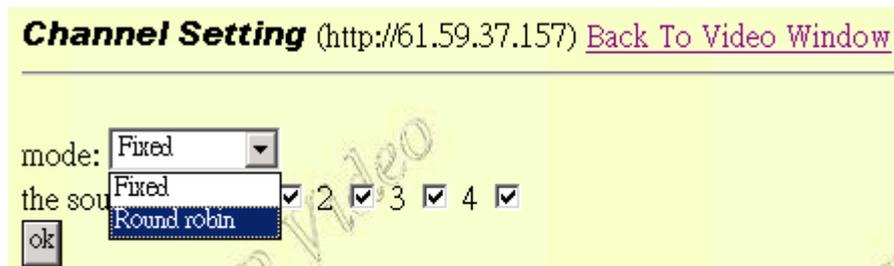

7-4--1 Click Video Window - Go back to the Camera Window, User can try to choose the Splits and the Operation Mood. If you feel the screen throb too fast, You can change the Periodic more than 60, such as 500 or 600 or...

8. Video Window: after click, the left screen will back to Monitor video.

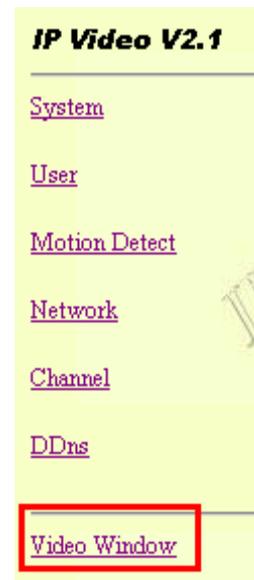

9. When right click mouse, it can also use:


10.

- View
- Splits
- Rotate
- Resolution
- Image Recording
- Save picture




9-1 View

- Resizable: adjust screen size.
- Actual size: default to original size.
- Status Bar: show ip address, and screen size.

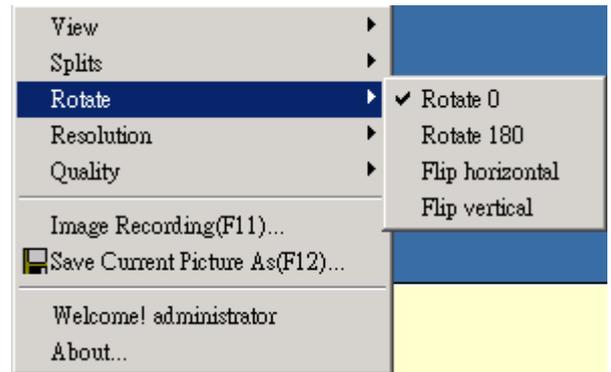


9-2 Split

- 1x1, 2x2, 3x3, 4x4
- Split to 1,4,9,16 continuous screen

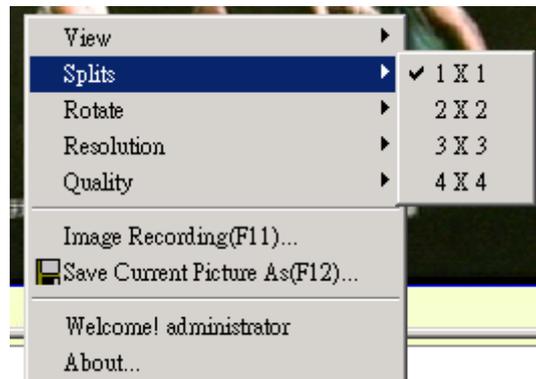

9-3 Rotate

- Rotate 0
- Rotate 180
- Flip Horizontal
- Flip Vertical

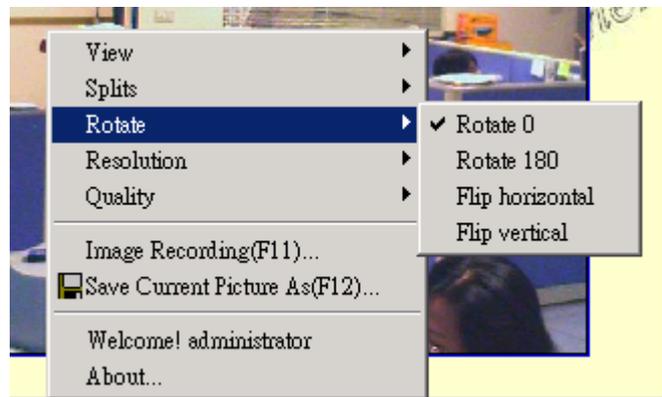


Rotate 0




Rotate 180




9-4 Quality:
Low
High
 Medium
 Clarity
 Motion

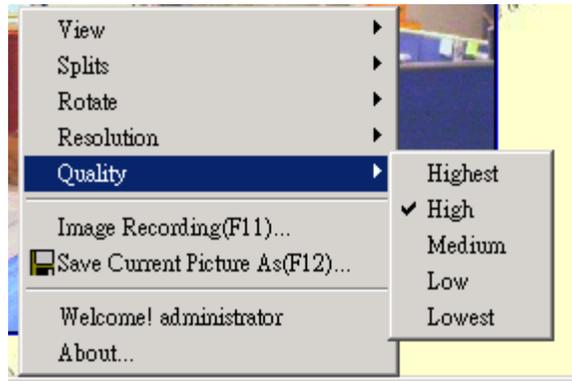

9-5 Resolution
 - 704*576, 640*480, 352*288
 - 320*240, 176*144, 160*120

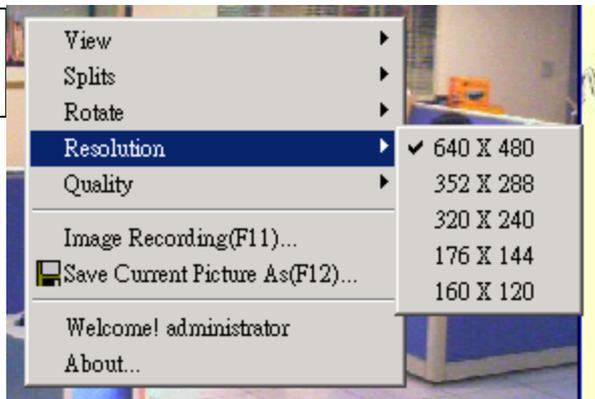


9-5 Image Recording
 - Record image to JPEG and AVI file. Both format can be recorded in the same time.
 JPEG: can select how many pictures taken in each file. And time frame.

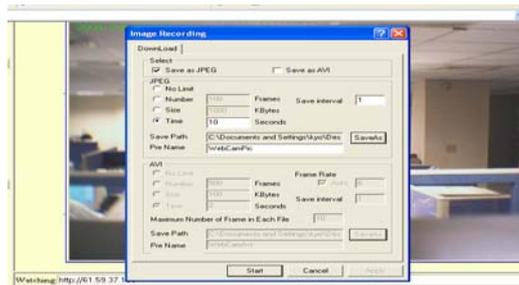

9-5-1 Recording AVI


- Select save as AVI, and then select the maximum number of frame in each file.

Note: If select No limit, it will continue recording until it used up all memory space.

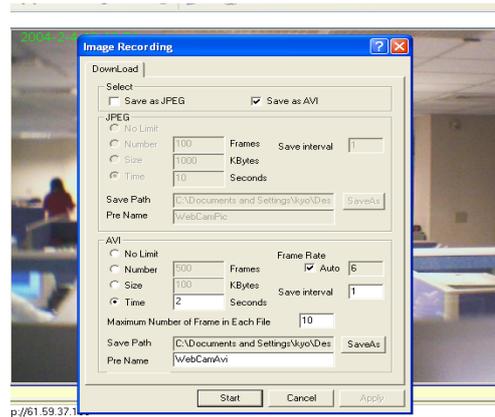

9-6 Save current picture as

- Take a snap shot on current images showed on IP Video 9100 AP.

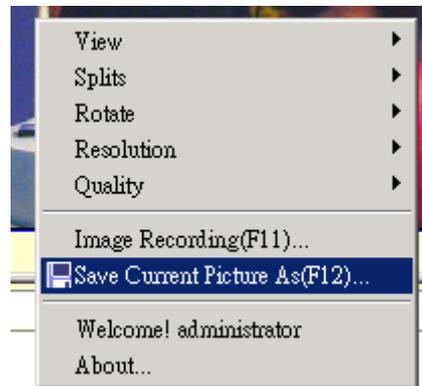

8. Dynamic DNS (DDNS)

When the IP9100 dial up to the Internet network, your IP provided by your ISP is random. So the user may difficult to find your IP9100 because the ip is changing at every time it dial up.

The Dynamic DNS service is provided by www.DynDNS.org for free.

First, user can logon the www.DynDNS.org to apply a domain name for each IP9100, then fill in the follow textbox with proper user name, password, domain name, proxy server (because some where can not logon the www.DynDNS.org directly, user may find a proxy server first, such as 210.0.212.98). Click **Submit** to confirm the settings. Then, every time the IP9100 dial up to the internet network, it will send a data package including its IP to the www.DynDNS.org, so www.DynDNS.org will set the domain name you have applied before for this IP9100 pointing to this IP.

So, user can type the domain name in the IE browser to find the IP9100 without knowing its exact IP.




9. Firmware update



User can update the firmware.
 First, click **Firmware update** and it will pop up Firmware Update window.
 Then, click **Browse** to select the new firmware.
 At last, click **Upload** to update the firmware.

7. Other Functions

1. IP Video 9100 can view 9 different IP at the same time.

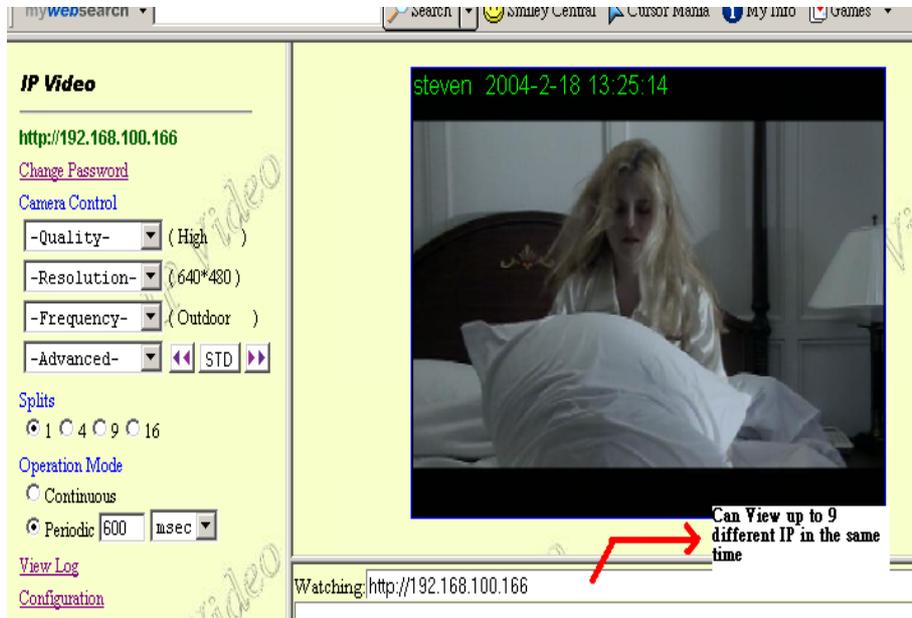

8. Authorization

In IP Video 9100 factory set up: factory setting

Username: administrator

Password: 1234

*Is recommended to change its factory setting password and user name

1. Administrator:

Change Password:

Camera Control:

(Quality) - Low, High, Advance

(Resolution) - 640*480, 352*288, 320*240, 176*144

- **& 704 * 576, 160 *120**

(Split) - 1x1, 2x2, 4x4, and 8x8


(Operation Mode):

Continues

Period: 1-60 sec

View Log: view visitor IP


Configuration: System, User, Motion detection, Network, Channel & DDNS
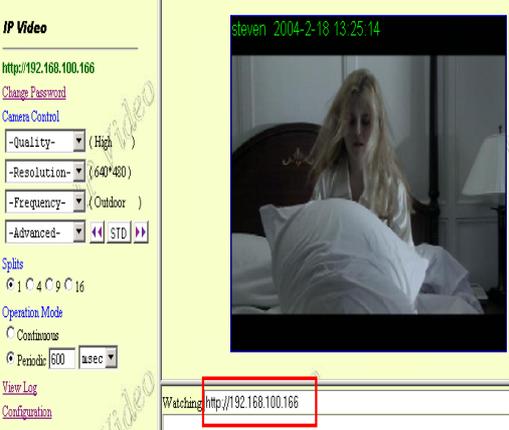
<p>1-1 Adding IP address Please add in a different IP in “ Watching and press enter”</p> <p>Note1: please type in http:// before your IP.</p> <p>Note2: when selecting different views, it will show different IP addresses in Watching.</p>	<p>A. Add in another IP address</p>  <p>B. Press AD”</p>  <p>C. Another view open up</p> 
<p>1-2 When cancel IP address, please select the camera you want to delete and select “Delete a video ”</p>	

2. Visitor Authorization:

- Change its own password
- View log: check other visitors IP address
- Add / delete camera


2-1 USER:
- When non-administrator entered ip
addresses to view its AP, it will ask
for a user ID and PASSWORD.

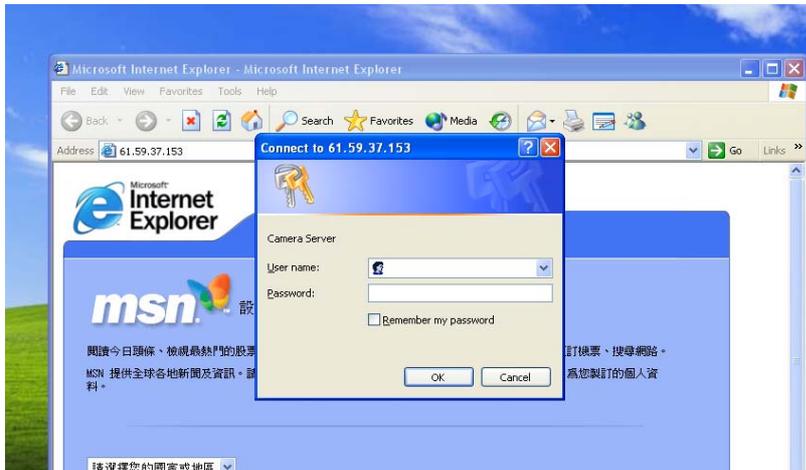

2-2

- Users entered IP Video 9100's AP, it will automatically request for Administrator's Password. If user or other visitors don't have the rights to use Administrator authorization password, press, "CANCEL" to ignore the inquiry.

Note: IP Video's AP confirming Administrator

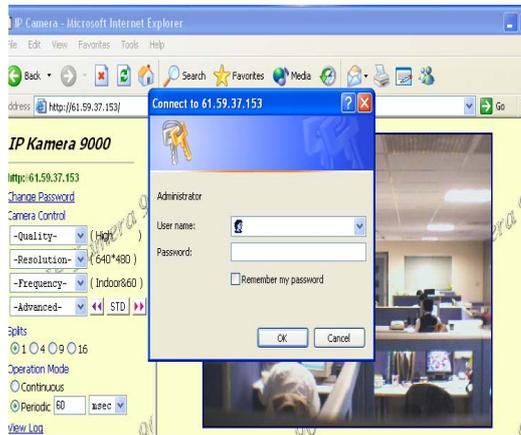

2-3

- Non-administrator enter "system, user, motion detect, and net work" which are under configuration mode, are require to enter administrator name and password to adjust these functions.

9. Caution

FAQ

Q 1: I forgot the ID and password for the administrator account, so I cannot log into the Administration Page.

A: Make sure IP Video 9100 is powered on and press the “reset” button behind IP video 9100 for at least 10 seconds, to help default camera setting to factory setting.

*Note: Factory Administrator ID and Password

ID: administrator

Password: 1234

Q 2 : The Web Camera does not launch?

A: Upgrade Internet Explorer or Netscape to 5.0 or higher version. Sometimes the web camera base cannot bring 'index.html' from the web Camera when the Internet Explorer version is at 4.0. And remember to adjust Internet default level to low when launching IP Video's AP for the first time.

Q 3: The Image recording cannot stop immediately?

A: If your IP is virtual IP, than it will not be happened. If your IP is true IP (EX: PPPoE or FIX IP...), than it might be happened. You need to wait for a second and it will be return to normal.