

# 4K UHD Wi-Fi Action Camera



Model:  
**QC8073**



R-NZ

Please read and save all instructions to ensure safe and effective use of this product.

## Instruction Manual

## GENERAL INFORMATION & SAFETY INSTRUCTIONS


- It is a high-precision product, do not fall or crash.
- Do not expose the unit to strong magnetic objects, such as magnet and electrical motor. Avoid strong radio waves. Strong magnetic fields may cause the products breakdown or images and sounds damage.
- Never leave the products exposed to high temperatures and direct sunlight.
- Please choose branded Micro SD card. Neutral cards are not guaranteed to work normally.
- Do not place Micro SD card near strong magnetic objects to avoid data loss.
- In case of overheating, smoke, or unpleasant smell in the process of charging, unplug your device immediately to prevent fire hazard.
- While it is charging, keep the product out of children's reach. Power line may cause children accidental suffocation or electric shock.
- Keep the device in cool, dry and dust-proof places.

**WARNING: The manufacturer is not responsible for any potential injury from misuse**

## FEATURES

- A water-resistant casing that allows you film fascinating water sports; water-resistant up to 30 meters under water.
- High definition screen that displays and replays fascinating videos record.
- Detachable battery that is easy to replace and prolongs your camera's service life.
- Video recording while charging.
- Video recording with battery.
- 12-megapixel HD wide-angle lens.
- HDMI HD output
- Web camera.
- Support storage cards up to 32GB maximum.
- Multiple video recording formats: 1080FHD/1080P/720P/WVGA/GA/QVGA.
- Recorded in AVI format.
- Multiple photo shooting modes: single shot, snapper.
- Video encryption enabled.
- Mini appearance, diversified colors available
- Open WiFi button within the menu, it will be more convenient to operate the machine by using a mobile phone

## PRODUCT DIAGRAM

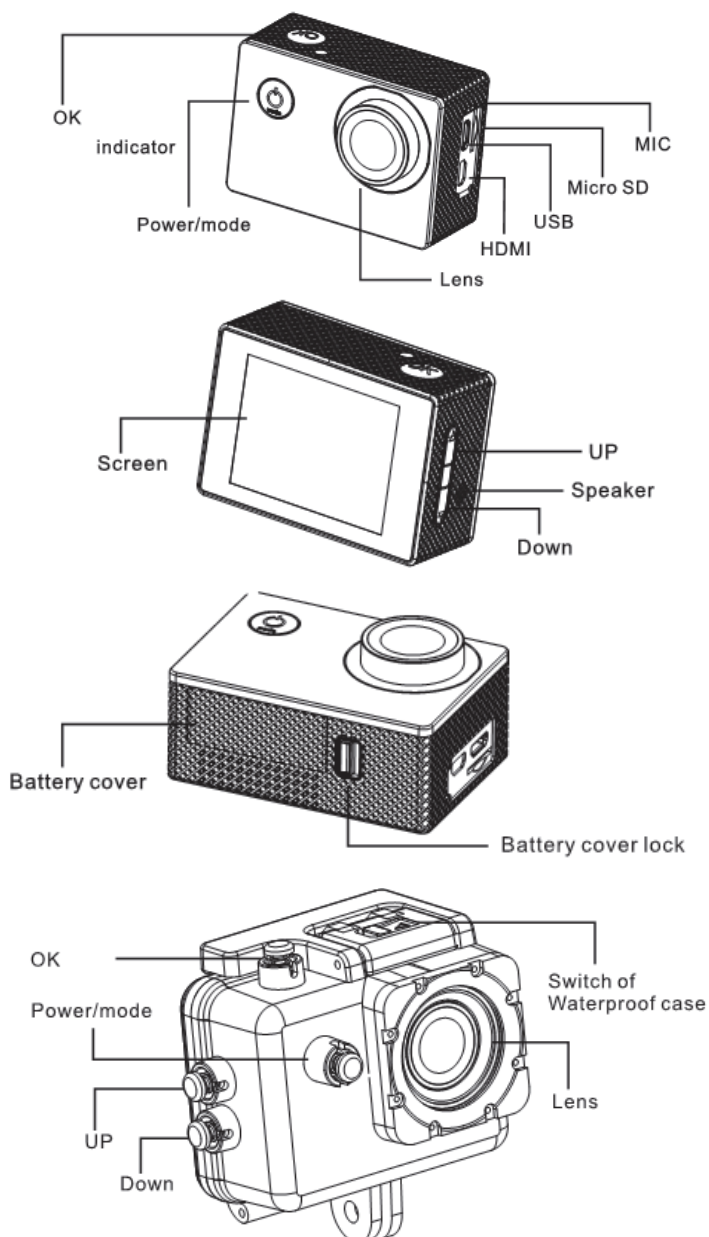

## USAGE INSTRUCTIONS

### 1. Inserting Micro SD cards

Note: Please choose branded Micro SD card and format it on computer before use. Neutral cards are not guaranteed to work normally.

### 2. Installing and removing batteries

- Press on battery cap to open it.
- Correctly install battery into camera as indicated by +/- symbols and direction of arrows marked on battery until it's in place.
- Battery gauge: please refer to diagram.
- Remove battery: open cap to take battery out.

### 3. Charging

- Charging can be done by either connecting power adaptor to computer or power adaptor.
- Charge on vehicle by connecting it to car charger.
- It can record video while charging.

Note: When it is connected with power and automatically video recording, charging can be done even when long press power switch.

### 4. Switching camera on and off

Press and hold power switch for 3 to 5 seconds to turn it on /off.

Short press DOWN button to turn on Wi-Fi.

### 5. Mode Switching

Switch between video recording / photo shooting / playback /menu by pressing "Power On-Off button.

### 6. How to record videos and configure recording setting

#### a. Video Recording

Switch to recording mode and there'll be an STBY icon in the upper left corner of screen. Press OK to start recording and the REC icon in the upper left corner will start to flash. Press "OK" again if you want to stop.

Resolution of videos recorded: 4K/2.7K/1080FHD/1080P/720P/WVGA/VGA/QVGA

Note: The default recording mode is loop. Not enough storage space available for the recording, the later files will overwrite to the earlier ones. Please choose and adjust your modes according to the menu.

#### b. Photo Shooting & Setting

Switch the camera on and press "Mode" to select "Photo shooting Mode", there'll be an STBY icon in the upper left corner of display screen and camera is in photo shooting

mode. Press "OK" to take photos.

Shooting Pattern: Single shot / Self-timer (3S/5S/10S/20S) / Continuous Shooting

### **c. File Storage & Playing**

After you are done recording, use a USB cable to export the videos onto a computer to play. Or you take Micro SD card out and access the image data with a card reader.

## **7. Install and use WiFi**

Wi-Fi connection (for WiFi model)

Please download and install "GoPlus Cam" application on your smart phone before starting Wif function. P Android, please download at Google Play IOs, please donwload at Apple Store I he domestic can be downloaded in the mobile phone 360

Connecting step:

- A, When turned UP, press and hold the button appears on the wifl icon, then the wifi light blinks;
- B, Finding out "GoPlus Cam" network on your smart phone, then connecting it oy entering the original password: 12345
- C, Operating the GoPlus Cam application
- Now you can preview in real time and remote control your camera on your phone, also you can download Tiles from the camera to your phone

Setting Wifi password:

You can re-set the wifi password in the setting mode

Disconnecting the Witi connection:

press and hold the UP button until the "Waiting for wifi connection..." disappearing on the screen

## SPECIFICATIONS

<b>Hardware</b>	
<b>LCD</b>	2 inch screen
<b>Lens</b>	Wide angle 170 degree
<b>Storage Memory</b>	Up to 32GB
<b>Audio Input/ Output</b>	Built-in Mic/Speaker
<b>USB Port</b>	USB2.0, 5 Pin USB
<b>Battery</b>	900mAh Removable Li-ion battery
<b>Camera Size</b>	59x29x40mm
<b>Camera Weight</b>	65g
<b>Waterproof Case Depth</b>	30 Meters
<b>Software</b>	
<b>Wifi Control</b>	yes
<b>APP</b>	Goplus
<b>Video Resolution</b>	4K@30fps, 2.7K@30fps, 1080P@60/30fps, 720P@60/30fps
<b>EV</b>	-1,-2,0,1,2
<b>Motion Detection</b>	Support
<b>Video File Format</b>	MOV
<b>Cycle Record</b>	off/one minutes/two minutes/three minutes/five minutes/ten minutes
<b>Record Audio</b>	Support
<b>Date Label</b>	Support
<b>Image Size</b>	16M/12M/10M/8M/5M/3M/2M/1.3M/VGA
<b>Image Quality</b>	Fine/Normal/Economy
<b>Capture time</b>	Single,3s timer,5s timer,10s timer,20s timer
<b>Acuity</b>	Strong/Normal/Soft
<b>White Balance</b>	Auto/sunlight/cloudy/tungsten/fluorescent

Screen Savers	off/ one minutes/three minutes/five minutes/
Auto Power Off	off/one minutes/three minutes/five minutes
Data setting	Support
Delete	Delete this/delete all
File is locked	lock this/lock all/unlock this/unlock all
Beep Sound	on/off
Photo Brust	off/3 sequece/5 secquence/10 sequence
Format	yes/no
Restore Factory	yes/no
Language	Chinese, English, Japanese, Russian, Korean, Spanish, French, Italian, Portuguese, Dutch, Nederland, Polska

## WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555