 


1 Important Safety Instructions

Read all instructions carefully before use. Keep these instructions for future reference.


1. This unit is intended to be installed on a vehicle dashboard.
2. The unit must be used under cover at all times. Do not immerse.
3. This unit is not a toy. Young children must be supervised to ensure they don't play with the unit.
4. Note on vehicle battery drain: This unit can be set to record loop videos to a connected microSD card whenever the unit has power. On some cars, the DC port supplies power even when the engine is off. This may lead to vehicle battery draining. In such cases, unplug the unit from the DC port when the engine is off.

2 Product Overview

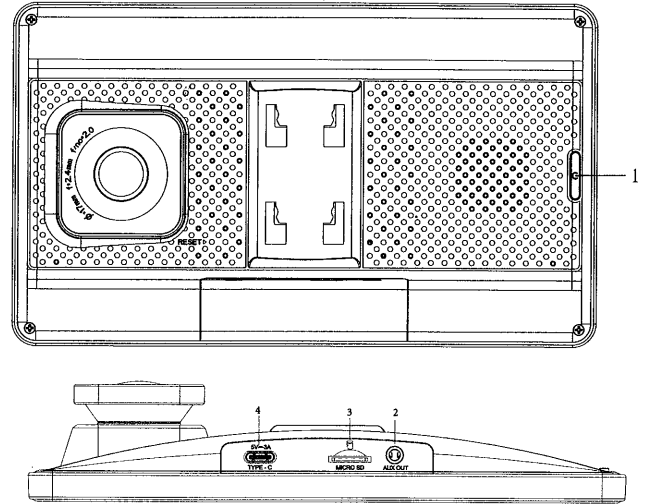


1. Power Button
2. AUX OUT
3. Micro SD(TF) card slot
4. Type-C USB Port(power connection)


Installation

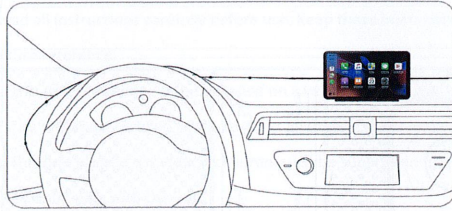

1. Align the notches on the mount and the rear of the unit, then push the unit down until it clicks. Make sure the unit is securely attached.
2. Adjust the angle as required using the screw on the mount.
3. Choose a suitable location on the dashboard of your vehicle making sure the cable can reach the DC 12-24V port on your vehicle. Clean the area with a cleaning wipe so that it will stick properly.
4. Use the adhesive sticker to stick the mount to the chosen surface.
5. Connect the Type-C end of the included Car Adaptor to the Type-C Port on the unit; connect the Car Adaptor to the DC 12-24V port on your vehicle.

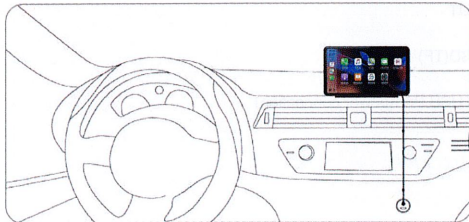

3 System Usage Introduction

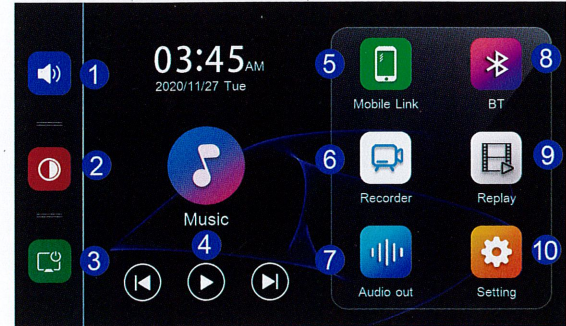

- | | |
|----------------------|---------------------------------|
| 1. Volume adjustment | 2. Screen brightness adjustment |
| 3. Turn off screen | 4. Music playback |
| 5. Mobile Link | 6. Recorder |
| 7. Audio out | 8. Bluetooth |
| 9. Replay | 10. Setting |

To adjust any settings, touch the Setting icon on the bottom right corner.


3.1 Mobile Link

Mobile internet connection methods

Included: ♦Carplay(for iPhone)

- ♦Android auto(for Android phone)
- ♦Apple Airplay (for iPhone)
- ♦Wifi info

Click on the "mobile link" icon to enter Carplay/Android auto/ apple Airplay interface.

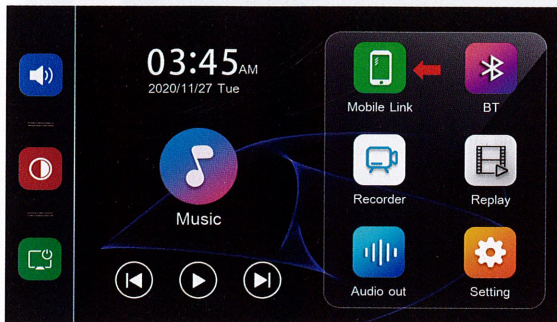

Please read the following information before operating

How to open wifi and bluetooth?

1. Open the BT icon to connect to the device's Bluetooth.

Bluetooth name: Aiwa AWCA1007


2. WiFi details for the unit are as below:

WiFi name: Aiwa AWCA1007


WiFi password: 12345678

► Carplay connection method(for iPhone):


Click on Carplay to open Carplay connection.

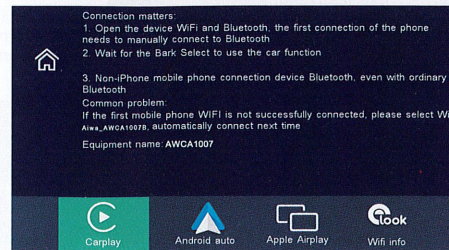


1. On your phone, connect to the device's WiFi and Bluetooth.
2. Once connected, wait for the pop-up window on your phone asking if you want to use Carplay. Confirm to use Carplay.
3. Your phone is now connected to the unit, the screen display is as shown below. You can navigate, listen to music, check messages etc. on the unit.

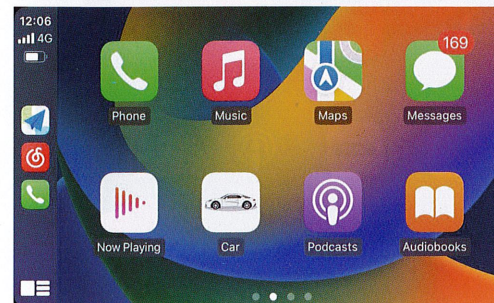

► Android Auto(for Android Phone)

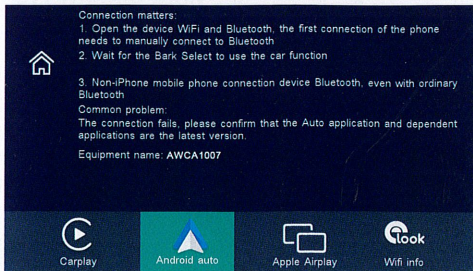 


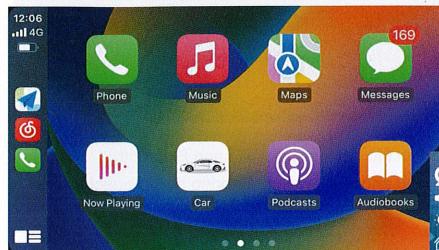
1. On your phone, connect to the device's WiFi and Bluetooth.
2. Open Android Auto on your phone to start.
3. Your phone is now connected to the unit, the screen display is as shown below. You can navigate, listen to music, check messages etc. on the unit.

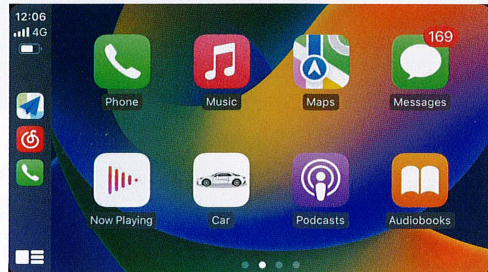


► How to exit CarPlay and Android Auto

Method 1: Turn off your phone's Bluetooth and Wi-Fi

Method 2: Click on any blank area of the screen as shown above. A menu bar appears in the lower right corner. Click  to return to the home screen.



 ► Apple Airplay connection method:(for iPhone)

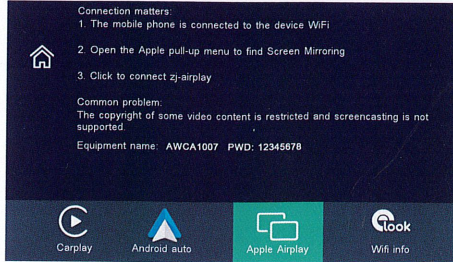


1. On your phone, connect to the device's WiFi and Bluetooth.
2. Open the pull-up menu and find Screen Mirroring and connect to zj airplay.



3. Your phone screen will now be mirrored on the unit.




4. To stop mirroring, select 'Stop Mirroring' on your phone.

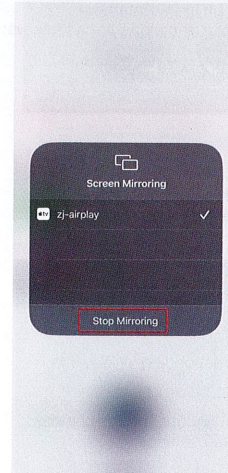


5. Please note that some video content / apps cannot be mirrored due to copyright restrictions.

► WiFi info and APP download connection method:

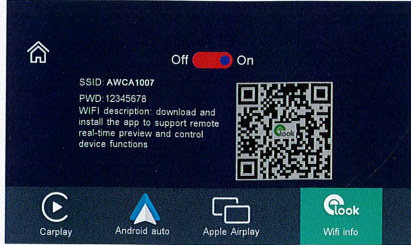

View Wi-Fi information and turn Wi-Fi on and off in this interface. You can also download the app on this interface, the steps are as follows:

(1).Scan the QR code on the machine to download ELook Pro

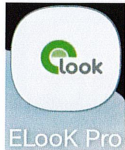


(2) When installing the APP, please choose to agree to the pop-up content. Otherwise, after connecting to WIFI, the machine will display that the WiFi connection is successful but can't be used.

(3) Turn on the WiFi on the unit, find the corresponding WiFi name on the phone, and enter the password.


(4) Start ELook Pro app.In the APP, you can choose to take photos, record videos, play videos, and perform simple settings.

3.2 Bluetooth

To view the Bluetooth information, select the Bluetooth button from the main interface as shown below.

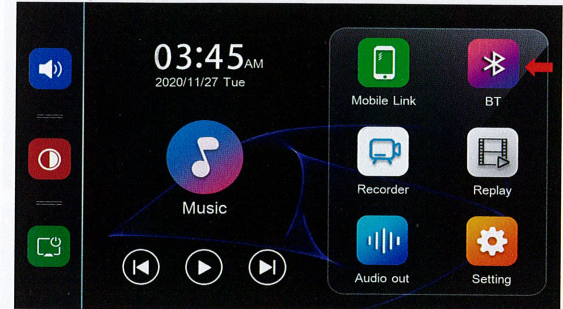


Turn on the Bluetooth switch, the phone can connect to Bluetooth. You can also modify the Bluetooth name in this interface

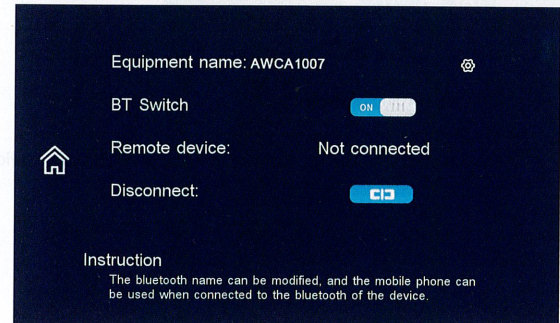


3.3 Recorder


Note: A microSD card must be inserted into the microSD slot on the unit to perform any recording.

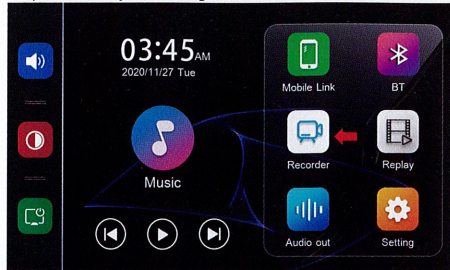



Enter the recorder to take pictures or videos.





Click  to start recording or stop recording.

Click  to take a picture.

 
 
 :Lock/unlock(It can be locked manually or automatically when the device is shaken)

 :turn on/off sound recording

 :Switch front/rear camera(without rear camera,not support)

 :Mobile preview

3.4 Replay

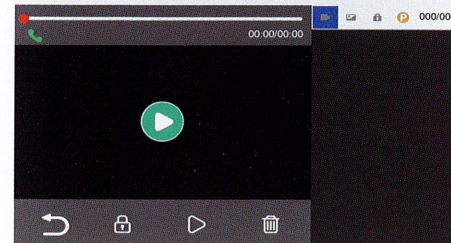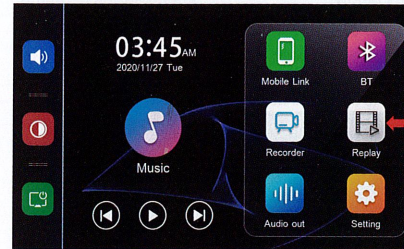

1. Play back video files

Select the video file you want to play back and click Start to start playing the video

2. Picture playback


Select the image you want to play back to continue viewing

3. Click to view locked video files


3.5 Audio out

The audio options are as below:

- ◆ Local speaker
- ◆ FM wireless launch
- ◆ AUX wired original car audio
- ◆ Bluetooth - Phone connected to the unit as well as car audio via Bluetooth

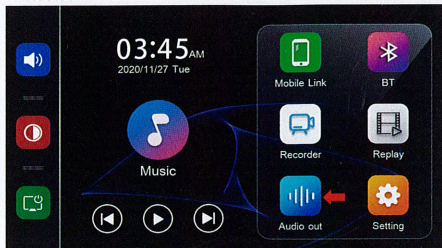

Click Audio Output to enter the following interface

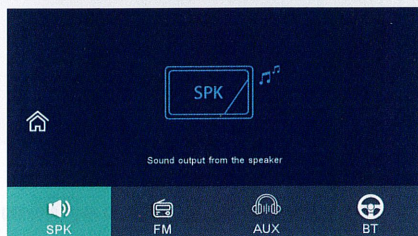

▶ Local speaker

Sound output from the unit speaker




▶ FM wireless launch

Adjust the unit and car to be on the same FM frequency to play source audio on car speakers.


Note: To avoid interference, do not set it to city channel frequencies.

Adjustment range: 87.5 - 108.0 MHz

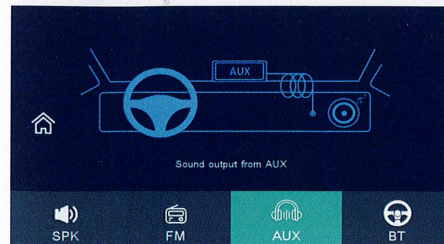

▶ AUX (Sound from AUX)

Use an AUX cable (not included) to connect the unit to the car speakers.

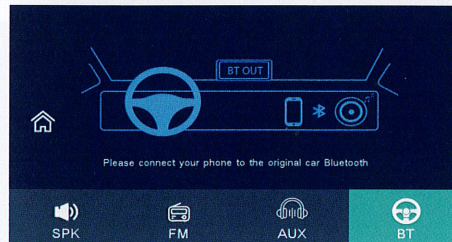


▶ BT-OUT


Connect your phone to your car speakers via Bluetooth to play audio on the car speakers.

3.6 System Settings


Click  icon

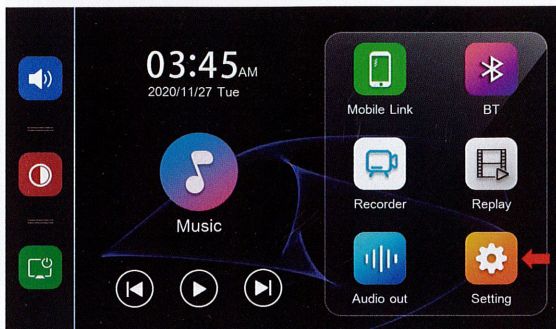


After entering the system setting interface, the following functions can be operated:

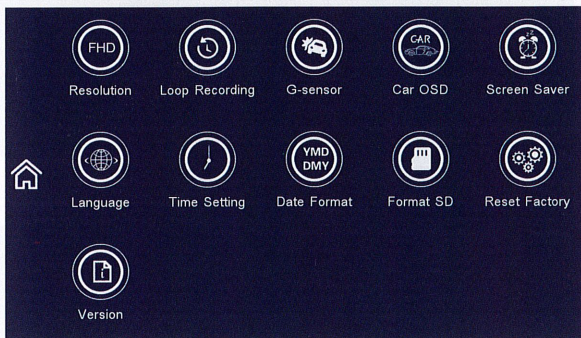


► Resolution


Click  You can choose the video resolution of the front camera

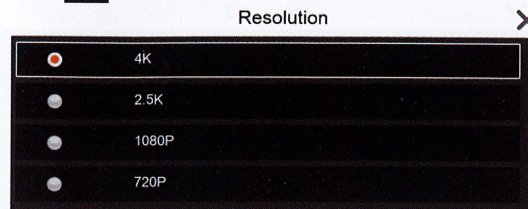


► Loop Recording


Click  to choose the loop recording time .

This function can ensure that the machine will not stop recording when the SD card is full. 1min/3min/5min represents the length of each video saved in the SD card

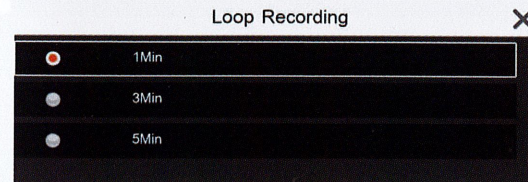


► G-sensor


Click  to enter the sensitivity setting options:

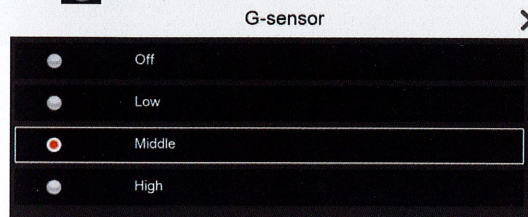


This function ensures that when the vehicle is hit or vibrated while driving, the video will be automatically locked to prevent the video from being deleted during loop recording.


► Car OSD

Click  The set license plate can be displayed in the watermark of the playback video

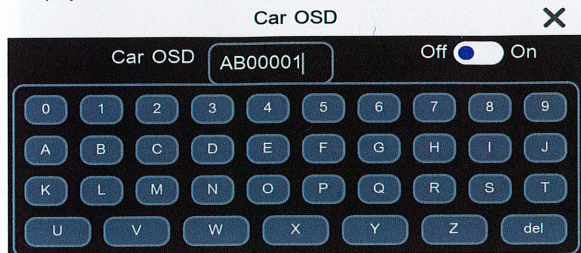


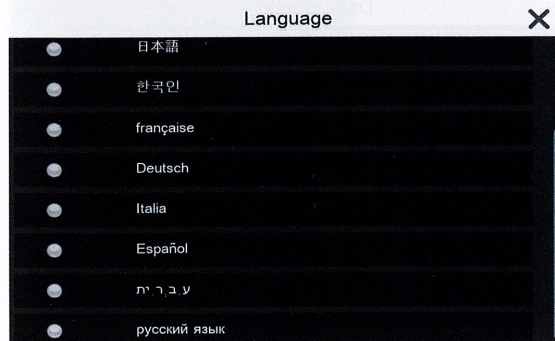 
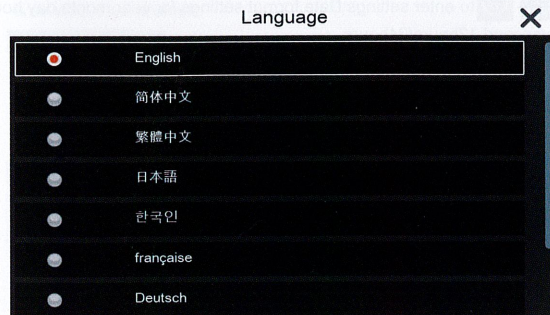 
► Screen Saver

Click  to choose screen off time

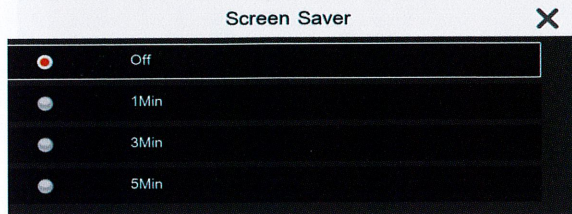



 
► Language setting

Click  to choose languages (included 11 languages)




► Time setting&Date Format


Click   to enter settings:Date format settings for year,month,day,hour, minute/second,12hours/24hours.

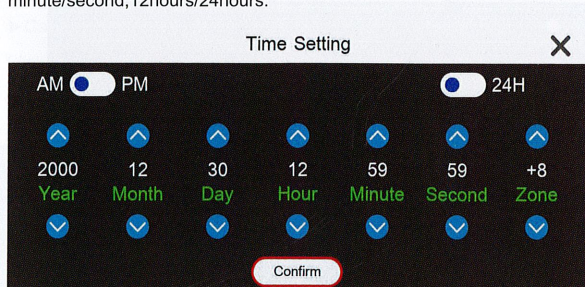


Date Format

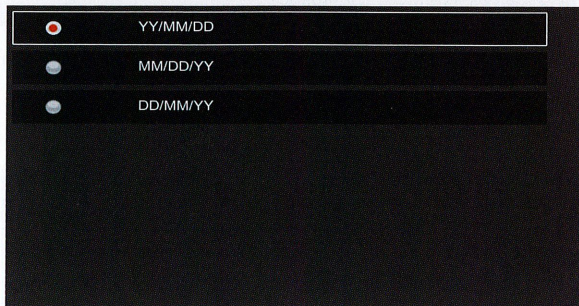 


► Format the micro SD card.

Click  to format card settings:

 
If no card,it will prompt:



If a card has been inserted into the microSD slot, it will prompt:

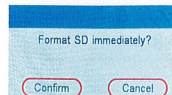


► Reset Factory

Click  Input settings:



 Reset factory at once?



This function restores all functions to factory default settings.
(Note:It will delete all videos)

► Version information

Click  to enter

This option views the version information of the current software

4 Technical Specifications

Viewing screen	7.0 inch
Video resolution	4K/2.5K/1080P/720P
Video format	MP4
Picture format	JPG
Memory card	Up to 128GB (max)
Picture format	JPG
Audio format	MP3/AAC