

# Multi-Function AC Power Meter Module with LCD Display User Manual

#### A. Features

- 1. Electrical parameter measurement (voltage, current, active power, consumed energy)
- 2. Settable overload alarm (backlight and "Power" reading flashes).

QP2325

- 3. Retains data when power off.
- 4. Large-screen LCD (displays voltage, current, active power, consumed energy simultaneously).
- 5. Switchable Backlight.
- 6. Auto-ranging Power and Energy Readings

#### B. Display and Key Functions

#### I. Display format

- 1. Power: test range: 0~4.5kW: Less than 1KW, display format is 0.0~999.9W; 1KW and above, display format is 1000~4500W.
- 2. Energy: test range: 0~9999kWh: Less than 10KWh, display format is 0~9999Wh; 10kWh and above, display format is 10~9999kWh.

3. Voltage: test range: 80~260V: Display format: 80~260V

4. Current: test range: 0~20A: Display format: 0.00~20.00

#### II. Key Functions (Pen or similar pointed device required)

Note: "Long Press" means press and hold the key. "Short Press" means just " jab" the key.

#### 1. Backlight Control

Short press the key to turn the backlight on or off. (The backlight remembers the setting when power is disconnected).

#### 2. Reset Accumulated Energy Reading

- Step1: Long press the key for 5 seconds until the number in energy display window starts to flash, then release the key.
- Step2: Short press the same key, the energy value will be cleared to zero. If you don't want to clear it, long press the key for another 5 seconds until the number stops flashing.

### 3. Set Power Alarm Threshold (The range of active power threshold is 0.0~4.5kW)

- Step1: Long press the key until the LCD screen displays "SET CLr", (about 7 seconds) then release the key.
- Step 2: The "Power" digits now display the current power alarm value with the last digit flashing. Short presses then cycle that through the digits 0-9. After 3 seconds with no further presses, it will switch to the next digit position; repeat the process for all digits
- Step3: When you've finished setting, long press the key for 5 seconds to store and exit.

#### C. Caution


- 1. This module is only intended indoor use, please do not use outdoors except in a suitable waterproof housing.
- 2. Applied load must not exceed the rated power.
- 3. Ensure all wiring is correct.
- 4. For very heavy loads (>2 kW) solid conductor wire is recommended for the power connections.

#### D. Specifications


Power Measurement Range: 0-4.5kW
Energy Measurement Range: 0-9999kWh
Voltage Measurement Range: 80-260V
Current Measurement Range: 0-20A
Operating Frequency: 45-65Hz
Weight: 60g


Display Dimensions:  $51(W) \times 30(H)mm$ Cutout Dimensions:  $84.6(W) \times 44.6(H)mm$ Overall Dimensions:  $90(W) \times 50(H) \times 24(D)mm$ 


#### E. Wiring diagram

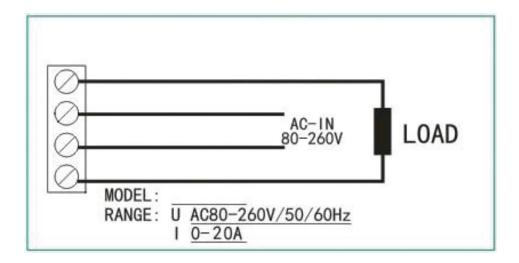

## F. Dimension Diagram (mm)

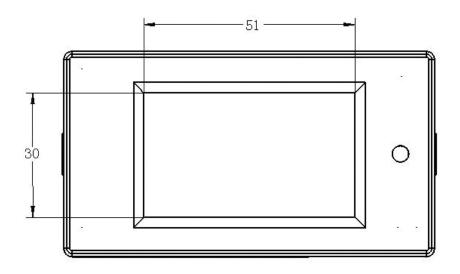

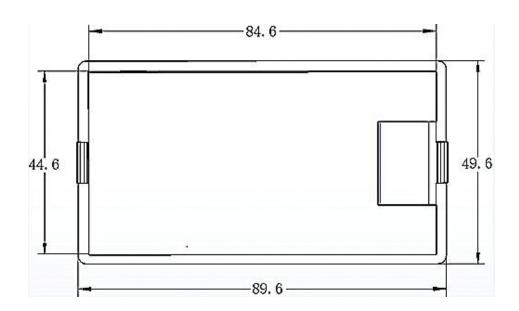

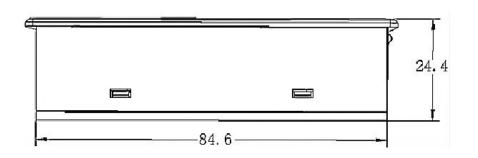

Distributed by: TechBrands by Electus Distribution Pty. Ltd. 320 Victoria Rd, Rydalmere NSW 2116 Australia

Ph: 1300 738 555 Int'l: +61 2 8832 3200 Fax: 1300 738 500

www.techbrands.com

Made in China