

# digitech

## 5-In-1 Ball, Waterwave, Laser, UV & Strobe Party Light



**User Manual**  
**SL-3542**

# Box Contents:

- 1 x 5-In-1 Party Light
- 1 x Infrared Remote Control
- 1 x Mounting Bracket
- 1 x Mains Power Cable
- 2 x Laser Lock Keys

# Product Diagram:



<b>#</b>	<b>Feature:</b>	<b>Description:</b>
1.	Infrared Port	Used for the infrared remote control
2.	LED Screen (Rear)	Displays the current mode and DMX channel
3.	Function Buttons (Rear)	Menu, up, down and enter buttons to change the menu and channels
4.	Microphone (Rear)	Listens to the beat of the music for sound activation mode
5.	DMX Input	Connect a XLR cable to the DMX input socket if you're using a DMX controller
6.	Mains Power Socket (Rear)	Connect the mains power cable to the power socket located on the rear of the unit and plug into a 240VAC wall socket
7.	DMX Output	Connect a XLR cable to the DMX output socket if you're using a DMX controller
8.	Waterwave Light	Displays a red, green, blue and white colour LED Waterwave light
9.	Adjustable Knob	Adjust the tightness for the mounting bracket
10.	Ball Light	Displays red, green and blue colours
11.	UV/Strobe	4 LEDs that display ultra violet (UV) and white colour strobe
12.	Laser	Red and green twin lasers

## **Installation:**

1. Unscrew the adjustable knobs on each side of the party light.
2. Attach the mounting bracket and align it with the screw holes.
3. Insert the adjustable knobs on each side and tighten in place.

**Note: It is suggested to use a safety cable and attach it the safety rope ring located on the rear of the unit when attaching to a lighting stand.**

5. Insert the mains power cable in to the rear power socket of the unit and the opposite end of the cable to a 240VAC mains wall socket.

## **Operation:**

1. Press the power switch located on the rear of the unit to on.
2. The unit will start operating in automatic mode once turned on; you can change the modes by press the menu, up and down buttons. Please refer to the function table in the manual to see all the functions available.

# Remote Control:

<b>Feature:</b>	<b>Description:</b>
Power	Press to turn the unit on or off
Mode	Change between automatic and sound activation modes
Sen+ / Sen-	Press to increase or decrease the light sensitivity
Flash	Press to activate the flashing of the strobe light
Speed+ / Speed-	Press to increase or decrease the flashing of the strobe light
Laser	Press to activate the laser light
Colour	Select the colour between red and green lasers
Speed	Press to change the speed of the lasers
LED	Press to select the disco ball LED
Red / Green / Blue / White	Press to select between the different colours of the LEDs
Jump	Press to jump between one colour to another for the disco ball LED
Gradual	Press to change the colour slowly for the LED disco ball
Flash	Press to change the flash of the disco ball LED
Motor	Change the motor speed of the LEDs

# Functions:

NO	Main menu	Sub menu	Function
1	PU**	PUON	UV ON
		PUOF	UV OFF
2	LA**	LAoF	LASER OFF
		LAAu	LASER AUTO
		LA r	RED
		LA G	GREED
		LArG	RED+GREED
		LA01~LA20	RED/GREED
		SP 1~9	SPEED
3	LE *	LE 1	LED 1
		LE 2	LED 2
		LE 3	LED 3
		LE 4	AUTO1
		LE 5	AUTO2
		LE 6	STROBE
		LE 7	AUTO3
		Sd 1~9	SOUND1
		SP 1~9	SOUND2
4	FL**	FLoF	STROBE OFF
		FL 1~9	STROBE ON
5	PA *	PA 1	LED 1
		PA 2	LED 2
		PA 3	LED 3
		PA 4	LED 4
		PA 5	AUTO1
		PA 6	AUTO2
		PA 7	STROBE
		PA 8	AUTO3
		Sd 1~9	SOUND1
		SP 1~9	SOUND2
6	Au 1	Au 1	AUTO1
7	Au 2	Au 2	AUTO2
8	S1**	S101~S120	SOUND1
		uoL1~uoL9	SEED
9	S2**	S201~S220	SOUND2
		uoL1~uoL9	SEED
10	A***	A001~A512	DMX

Channel	DMX Value	Function
1	0~9	water wave LED OFF
	10~255	water wave LED ON
2	0~9	WHITE OFF
	10~255	WHITE ON
3	0~9	BALL LED OFF
	10~44	BALL LED RED
	45~79	BALL LED GREED
	80~114	BALL LED BLUE
	115~149	BALL LED RED+GREED
	150~184	BALL LED GREED+BLUE
	185~219	BALL LED RED+BLUE
	220~255	BALL LED RED+GREED+BLUE
4	0~9	LASER OFF
	10~99	LASER RED
	100~199	LASER GREED
	200~255	LASER RED+GREED
5	0~9	UV OFF
	10~255	UV ON
6	0~255	MODER
7	0~9	STROBE OFF
	10~255	STROBE ON
8	0~9	water wave MOTOR OFF
	10~255	water wave MOTOR ON
9	0~9	BALL MOYOR OFF
	10~255	BALL MOTOR ON
10	0~9	LASER MOTOR OFF
	10~127	LASER MOTOR ON 1
	128~255	LASER MOTOR ON 2
11	0~50	1-8CH
	51~150	AUTO1
	151~200	AUTO 2
	201~250	SOUND1
	251~255	SOUND2

# Safety:

1. Do not open the case of the party light to avoid damage and injury.
2. Keep the party light away from high temperatures as it may cause damage to the unit.
3. Do not expose the party light to water or liquids to prevent the unit from damage.
4. The unit must be installed in a well ventilated area.
5. It is suggested to use a safety cable when fixing this unit to a mounting stand or wall to prevent the unit from falling.
6. It is suggested to clean the unit's lenses every 2-3 months with a soft cloth so the unit can display the light properly.
7. Keep the remote control away from children as it contains button cell batteries which may be harmful. Contact a doctor immediately if swallowed.



## WARNING

### KEEP BUTTON BATTERIES OUT OF REACH OF CHILDREN

- If swallowed a lithium button battery may lead to serious or fatal injury in as little as 2 hours, due to chemical burns and potential perforation of the oesophagus.
- Non-lithium button batteries battery can cause serious injuries if it is swallowed or placed inside any part of the body.
- All button batteries must be kept away from children regardless if they are new or used.
- If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poisons Information Centre on 13 11 26 (Australia) or 0800 764 766 (New Zealand) for fast, expert advise.
- If your child is having difficulty breathing contact 000 (Australia) or 111 (New Zealand).
- Dispose of used button batteries immediately and safely out of the reach of children. A battery can still be dangerous even when it can no longer operate the device.
- As soon as you have finished using a button battery, put sticky tape around both sides of it. This will make it harder for children to swallow the button battery and avoid the risk of the battery catching fire.
- Immediately dispose of button batteries immediately out of reach of children, or recycle using a child resistant container and take used cells to your local battery collection centre.



# Specifications:

LED: 6 x 3W RGB (Ball)

1 x 5W RGBW (Waterwave)

4 x 3W WUV (Strobe/UV)

Laser: 120mW (Red), 30mW (Green)

Modes: Automatic, Sound Activated, DMX

Remote Control Battery: 1 x CR2025 (Included)

Power: 240VAC, 50-60Hz

Power Consumption: 30W

Dimensions: 270(W) x 170(D) x 114(H)mm

Distributed by:  
Electus Distribution Pty. Ltd.  
320 Victoria Rd, Rydalmere  
NSW 2116 Australia  
Ph: 1300 738 555  
Int'l: +61 2 8832 3200  
Fax: 1300 738 500  
[www.electusdistribution.com.au](http://www.electusdistribution.com.au)