

digitech

LED Party Lighting Kit With Stand




User Manual
SL-3550

Box Contents:

- 1 x Party Lighting Kit
- 1 x Infrared Remote Control
- 1 x Light Stand

Product Diagram:

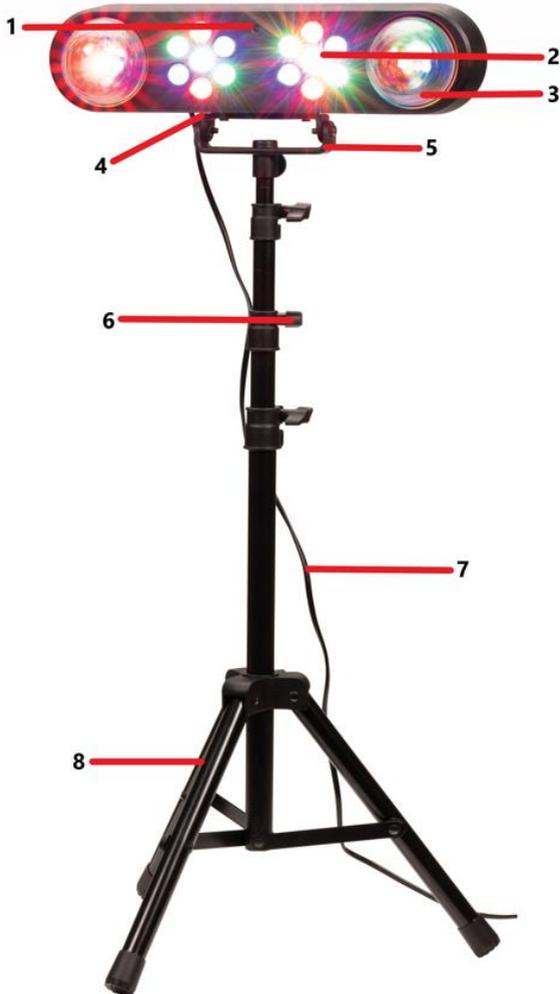

#	Feature:	Description:
1.	Infrared Port	Used for the infrared remote control
2.	PAR Light	Displays red, green, blue and white colours
3.	Ball Light	Displays red, green, blue and white colours
4.	Mode Switch (Rear)	Select between automatic and sound activated modes
5.	Mounting Bracket	Attaches the party light to the stand
6	Adjustable Knob	Adjust the tightness for the mounting bracket
7.	Mains Power Cable	Connect the mains power cable and plug into a 240VAC wall socket
8.	Adjustable Stand	Used to hold the party lighting kit

Installation:


1. Unscrew the screws on each side of the party light.
2. Attach the mounting bracket and align it with the screw holes.
3. Insert the screws on each side and tighten in place.
4. Connect the mains power cable to a 240VAC mains wall socket.
5. Undo the adjustable knobs on the lighting stand and adjust to your desired height. Tighten the adjustable knobs once the stand has been adjusted.

Note: It is suggested to use a safety cable so the stand won't fall over.

Operation:

1. Press the power switch located on the rear of the unit to on or press the on button located on the infrared remote control.
2. Press the mode switch to automatic if you wish for the party light to operate automatically and cycle through the PAR and disco ball LEDs.
3. Press the mode switch to sound activation if you wish for the party light to operate to the beat of music played nearby.
4. Use the remote control for additional functions.

Remote Control:

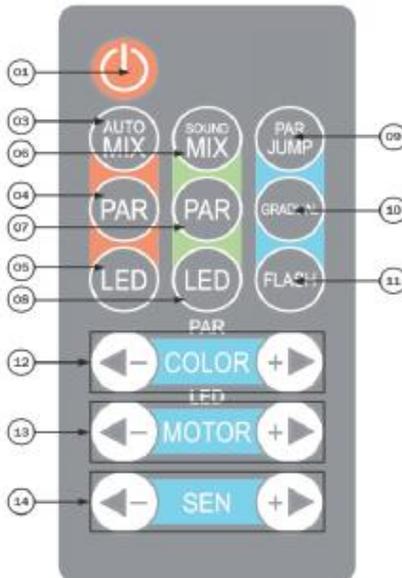

#	Feature:	Description:
1.	Power	Press to turn the unit on or off
2.	N/A	N/A
3.	Auto Mix (Automatic Mode)	Press to switch to automatic lighting mode
4.	PAR	Press to run the PAR lights in automatic lighting mode
5.	LED	Press to run the effects in automatic lighting mode
6.	Sound Mix (Sound Mode)	Press to switch to sound activated mode, it will operate according to the beat of music played nearby
7.	PAR	Press to run the PAR lights in sound activated mode
8.	LED	Press to run the effects in sound activated mode
9.	PAR Jump	Press to change the colours of the PAR lights, use PAR colour to adjust speed
10.	Gradual	Press to change the colour fade of the PAR lights, use PAR colour to adjust speed
11.	Flash	Press to change the flash of the PAR lights, use PAR colour to adjust speed
12.	PAR Colour+/Colour-	Press to increase or decrease the speed of the LEDs
13.	LED Motor+/Motor-	Change the motor rotation of the LEDs
14.	Sen+/Sen-	Press to increase or decrease the sound sensitivity

Safety:

1. Do not open the case of the party light to avoid damage and injury.
2. Keep the party light away from high temperatures as it may cause damage to the unit.
3. Do not expose the party light to water or liquids to prevent the unit from damage.
4. The unit must be installed in a well ventilated area.
5. It is suggested to clean the unit's lenses every 2-3 months with a soft cloth so the unit can display the light properly.
6. Keep the remote control away from children as it contains button cell batteries which may be harmful. Contact a doctor immediately if swallowed.



WARNING – KEEP BUTTON BATTERIES OUT OF REACH OF CHILDREN

- If swallowed a lithium button battery may lead to serious or fatal injury in as little as 2 hours, due to chemical burns and potential perforation of the oesophagus
- All button batteries must be kept away from children regardless if they are new or used.
- If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poisons Information Centre on 13 11 26 (Australia) or 0800 764 766 (New Zealand) for fast, expert advice.
- If your child is having difficulty breathing contact 000 (Australia) or 111 (New Zealand).
- Dispose of used button batteries immediately and safely out of the reach of children. A battery can still be dangerous even when it can no longer operate the device.
- As soon as you have finished using a button battery, put sticky tape around both sides of it. This will make it harder for children to swallow the button battery and avoid the risk of the battery catching fire.
- Immediately dispose of button batteries immediately out of reach of children, or recycle using a child resistant container and take used cells to your local battery collection centre.

Specifications:

LED: 3 x 3W RGBW (Each Ball)

7 x 1W RGBW (Each PAR)

Modes: Automatic, Sound Activated

Remote Control Battery: 1 x CR2025 (Included)

Power: 240VAC, 50-60Hz

Power Consumption: 60W

Dimensions: 380(W) x 100(H) x 60(D)mm (LED Light)

1.48m (Stand)

Distributed by:
Electus Distribution Pty. Ltd.
46 Eastern Creek Drive, Eastern Creek
NSW 2766 Australia
Ph: 1300 738 555
Int'l: +61 2 8832 3200
Fax: 1300 738 500
www.electusdistribution.com.au