



ST3221

Camping Lantern



Instruction Manual

WARNINGS & SAFETY INFORMATION

Please read through these operating instructions carefully and thoroughly. These instructions form part of the product and contain important start-up and handling information. Always observe all the safety instructions. Please keep these instructions in a safe place, and pass them on, if necessary.

Warning


- This product contains a recyclable battery. Please follow local recycling regulations or return the battery to an approved recycling facility.
- The unit can be powered by either:
 - 1 × 3.7V 1,000mAh Li-Po rechargeable battery, or
 - 3 × AAA dry cell batteries (not included).
- To remove either battery type, refer to the image on page 3 of this manual.
- The light source contained within this product must only be replaced by the manufacturer, an authorised service agent, or a similarly qualified technician.
- Dispose of all packaging materials in accordance with local environmental and waste disposal regulations.
- Products marked with the crossed-out wheeled bin symbol must not be disposed of with household waste. These products must be taken to an approved collection or recycling centre. Contact your local council or waste management provider for further information.
- Fully charge the battery before first use.
- Do not use a modified, damaged, or incompatible charger.
- Do not operate the lantern while it is charging.
- Do not leave the lantern connected to the charger for more than 24 hours.
- Do not disassemble the product or attempt to replace the rechargeable battery.
- If the product is stored for an extended period, recharge the battery at least once every six months.
- This product contains a rechargeable lithium-ion battery. Improper use may cause the battery to rupture, ignite, or result in serious injury.

Intended Use

- This camping lantern is designed for general-purpose illumination in a variety of environments, including outdoors, fishing, camping, construction sites and other similar types of work areas.
- The product is suitable for rugged use; however, it is not designed for use in extreme or harsh environmental conditions.
- The light source is non-replaceable. When the light source reaches the end of its service life, the entire lantern must be replaced.

Battery Instructions

- DO NOT place batteries or the device in fire or expose them to high temperatures.
- DO NOT tamper with battery wiring or connections.
- DO NOT puncture, crush, or otherwise damage the batteries.
- DO NOT use batteries that show signs of damage, swelling, leakage, or deformation.
- DO NOT immerse batteries in water or expose them to excessive moisture.

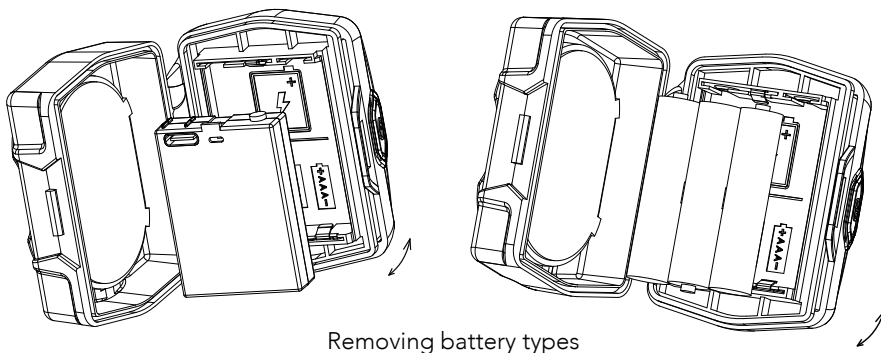

USAGE INSTRUCTIONS

1. Before first use, fully charge the lantern using the supplied USB-C charging cable.
2. Plug the USB-C end of the charging cable into the lantern and the other end of cable into a suitable charger.
3. Battery Status Indicator
 - Red light: Charging in progress
 - Green light: Battery fully charged

TECHNICAL DATA

	Mode	Brightness (lm)	Li-po battery Run time (h)	Dry battery Run Time (h)	Beam distance (m)
Press once	Amber High	300	2.5	3	10
Press twice	Amber Mid	100	4	4	-
Press three times	Amber Low	5	>80	>80	-
Press four times	Red	-	4.5	4.5	-
Press five times	Red Flash	-	4.5	4.5	-

SPECIFICATIONS

Input Voltage:	5V DC
Input Current:	1A
Battery:	3.7V 1,000mAh Li-Po or 3xAAA (not included)
Power:	3W
Charge Time:	3 Hrs
Run Time:	Up to 80 hrs (Low Amber Light Mode)
Cable Length:	30cm via USB-C
Weatherproof:	IP54 Rating

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555