MODEL: ST-3600

USER MANUAL



Distributed by:

TechBrands by Electus Distribution Pty. Ltd.

320 Victoria Rd, Rydalmere

NSW 2116 Australia

Ph: 1300 738 555

Int'l: +61 2 8832 3200

Fax: 1300 738 500


www.techbrands.com

Unpacking

Open the package to see if any damage has been caused in the transportation. Before turning it on, ensure that the light is safe and there are no exposed wires. Please make sure the main voltage is within 100-240V, otherwise the lifetime of the LED will be reduced.

Display Panel

Boot and press MENU to enter the main menu, press up or down to select submenu, then press ENTER to select.

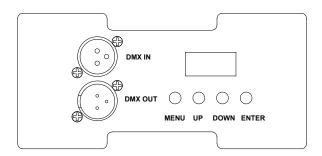

Display	Mode	Description
d001	D512	3CH mode
A001	A512	7CH mode
FF01	FF99	RGB color gradual change
CC01	CF99	RGB Color jump
r000	r255	Red light brightness
G000	G255	Green light brightness
b000	b255	Blue light brightness
u000	u255	RGB light brightness
dEoo	dEoo	Demo mode
SoUd	Soud	Sound-activated
SLAu	SLAu	Master-Slave

DMX Control Setting

3 Channel mode

Channel	Value	Description
CH1	0	red off
	1 ~ 255	from dark to bright
CH2	0	green off
	1 ~ 255	from dark to bright
СНЗ	0	Blue off
	1 ~ 255	from dark to bright


7 Channel mode

Channel	Value	Description
CH1	0 ~ 255	dimming
CH2	0	red off
	1-255	from dark to bright
СНЗ	0	green off
	1~255	from dark to bright
CHA	0	blue off
CH4	1-255	from dark to bright
CH5	1-255	Flash from fast to slow
	1-63	Color gradual change: Channel 7 control speed
СН6	64-127	pulse change: Channel 7 control speed
	128-191	Color jump: Channel 7 control speed
	192-255	Sound-activated open
CH7	0-255	Speed

Master-slave set

Two or more identical lamps connected with 3-pin signal cable, set any of a host as demo program, gradual or jump, other lamps will receive address set as SLAu.

Remote Control

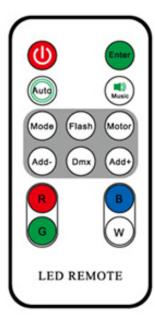

Power: turn on or turn off the light

Enter: memory the current state, power on to restart this status Auto: implementation of the internal procedures under DEMO

Music: Sound-activated

Mode: working mode choice
Flash: Color gradual change

Motor: no use

Add-: working mode of decrease switch

Dmx: adjust DMX mode

Add+: working mode of increase switch

R: adjust red brightness B: adjust blue brightness G: adjust green brightness W: adjust RGB brightness

Additional Safety Information

- •Please make sure to turn off the PAR light before installation and maintenance.
- •Please make sure when operating the light you have good ventilation.
- •This light is designed for indoor use. Please keep it dry whenever in use.
- •Don't use other voltage that does not comply with the instruction shown.
- •Don't stare at the lighting source; it may damage your eyes.
- •Don't operate unless there is stable voltage.
- •Don't use it in a moist environment.





WARNING KEEP BUTTON BATTERIES OUT OF REACH OF CHILDREN

- If swallowed a lithium button battery may to lead to serious or fatal injury in as little as 2 hours, due to chemical burns and potential perforation of the oesophagus.
- · Non-lithium button batteries battery can cause serious injuries if it is swallowed or placed inside any part of the body.
- All button batteries must be kept away from children regardless if they are new or used.
- If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poisons Information Centre on 13 11 26 (Australia) or 0800 764 766 (New Zealand) for fast, expert advise.
- If your child is having difficulty breathing contact 000 (Australia) or 111 (New Zealand).
- Dispose of used button batteries immediately and safely out of the reach of children. A battery can still be dangerous even when it can no longer operate the device.
- As soon as you have finished using a button battery, put sticky tape around both sides of it. This will make it harder for children to swallow the button battery and avoid the risk of the battery catching fire.
- Immediately dispose of button batteries immediately out of reach of children, or recycle using a child resistant container and take used cells to your local battery collection centre.