


IF MOTOR RUNS BACKWARDS  
(IE GOES FORWARD WHEN IT'S SUPPOSED TO BE REVERSE),  
SWAP THE A1 AND A2 CONNECTIONS

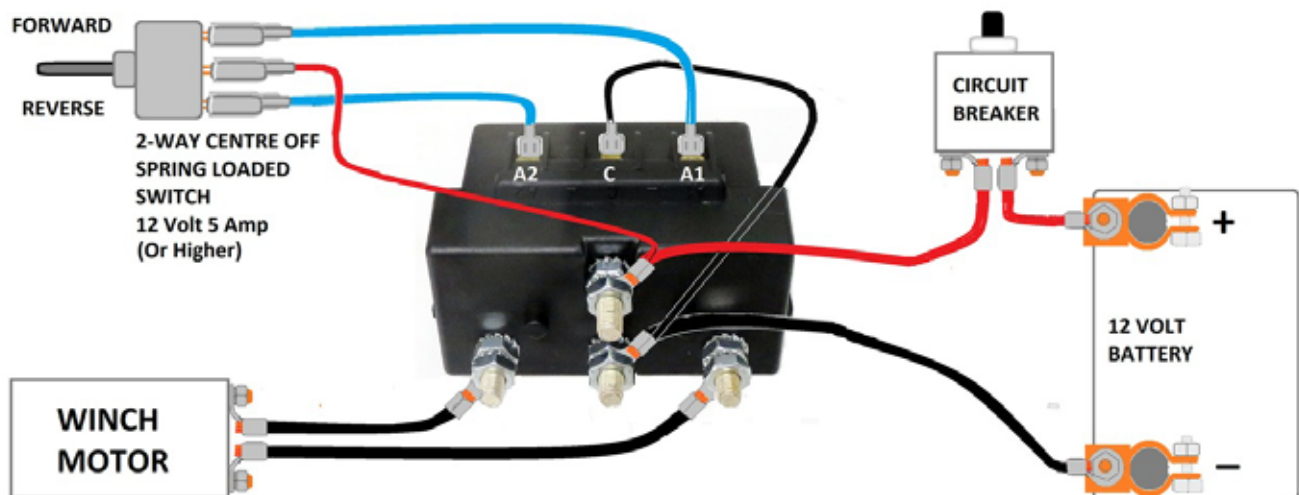

## CONNECTIONS FOR 2-WIRE WINCH MOTORS