



TFI304

#### BEFORE USING FOR THE FIRST TIME

 
To ensure safety and maintain the high quality of the product, we recommend that you read and follow the instructions carefully.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge unless they are closely supervised and instructed concerning the use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electrical shock, or injury.
- Do not open pressurized (aerosol-type) cans.
- Do not open cans of flammable liquids such as lighter fluids.
- Do not submerge in water, wash under running water or wash in dishwasher.
- Do not dismantle the product.
- Do not use for extended periods of time.
- Keep away from flammable, explosive gas.
- Improper use of the product in a manner not described in this instructions guide may void warranty

#### FEATURES

- Easy Operation: Open almost any cans with our electric can opener; press the button to start; cuts cleanly along the side of cans leaving smooth edges; press the button again to stop
- Thoughtful Gift Idea: A practical and versatile gift for family and friends; suitable for kitchen enthusiasts and anyone seeking convenience
- Smooth Edge Design: The blade cuts along the side of the can, reducing food contact; prevents spills and leaves smooth, rounded edges
- User-Friendly Design: Ergonomic design allows for strain-free use; ideal for elderly individuals and those with limited hand strength
- Convenient Cooking: Save energy and simplify meal prep with a tool designed for easy and efficient use

#### PRODUCT DESCRIPTION

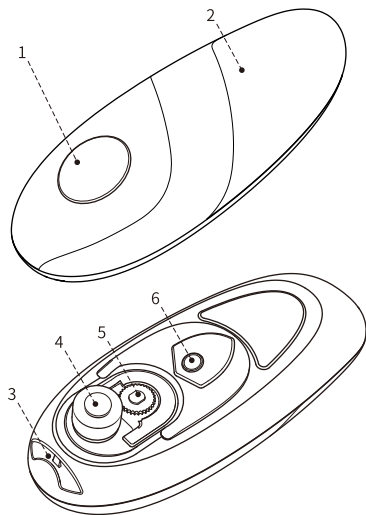


- |                  |               |
|------------------|---------------|
| 1. ON/OFF Button | 4. Blade      |
| 2. Battery Cover | 5. Metal Gear |
| 3. Lid Remover   | 6. Magnet     |

#### HOW TO INSTALL THE BATTERIES

 - Hold the main body of the opener firmly with one hand, and place the finger of the other hand on the buckle of battery cover. Gently lift upwards with force to remove the battery cover.




- Insert 4 pieces of AA alkaline batteries according to the positive and negative terminals. Close the battery cover.

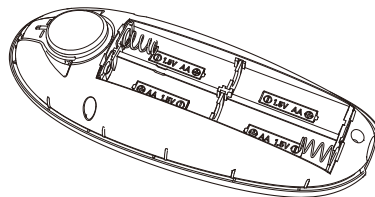


#### HOW TO USE THE CAN OPENER

 
Place the can opener on top of the can, making sure that the can edge is between the blade and the metal gear.

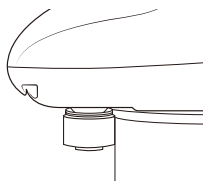

 Press the button and let it rotate around the can on its own. After one rotation around the can, press the button again to stop. The can opener will automatically detach from the edge of the can.

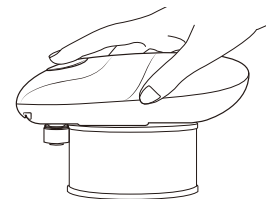

 Lift the lid and remove the can opener. If the magnet fails to lift the lid, you can try to pry it open with the lid remover.

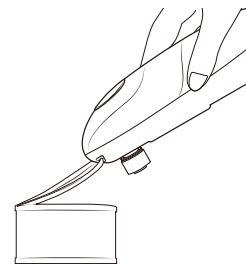

#### CAUTIONS

- The blade of the can opener is sharp. Do not touch it with your fingers.
- After one rotation, press the button to stop immediately to prevent excessive cutting that may cause metal to shred.
- Please store this product out of reach of children.

#### TROUBLESHOOTING

If the opener does not work or stops during canning:

- Please check that the batteries are alkaline batteries.
- Please check that the batteries are installed correctly.
- Please confirm there is sufficient battery power.

- Please make sure that it is in the right position. Check the can for any dents or bendson the edges. If there are no problems with the can, restart the can opener.

If the lid remover can't pry the lid, it may be some canned food adheres to the lid due to moisture. You can manually lift the lid up to open.

If the above operations are all correct and the opener still works abnormally, please contact the vendor for maintenance service.

#### SPECIFICATIONS

Power: 7W - 4 x AA batteries (not included)  
Main material: ABS, stainless steel  
Product Size: 177 x 68 x 68mm  
Product Weight: 330g (+20g)

#### WARRANTY

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by: Electus Distribution  
46 Eastern Creek Drive, Eastern Creek NSW 2766  
Ph. 1300 738 555