

protech

Mini Turbo Fan

HOBBYIST



User Manual



Please read and save all instructions to ensure safe and effective use of this product.

TH2634

CONTENTS

GENERAL INFORMATION & SAFETY INSTRUCTIONS	3
BOX CONTENTS	4
PRODUCT OVERVIEW	4
BEFORE FIRST USE	5
OPERATING INSTRUCTIONS	5
CLEANING, CARE & STORAGE & MAINTENANCE	6
TROUBLESHOOTING	7
SPECIFICATIONS	7
WARRANTY	8

GENERAL INFORMATION & SAFETY INSTRUCTIONS

- To reduce the risk of malfunction, electric shock, injury, fire, death, and equipment or property damage, please be sure to follow the following safety precautions.
- Please store this product out of reach of children and pets.
- Please store in a dry environment.
- Do not leave this product in high temperatures, temperature locations over specified ranges.
- Do not overcharge or discharge the battery. Otherwise, it will cause damage to the battery cell.
- Please regularly remove any attachments from the dryer and suction port.
- Do not use nails or sharp objects in the air outlet/inlet.
- Do not use alcohol, nail polish remover, or detergent to clean this product, as this may cause malfunction, breakage, or fading.

Charging Cable


- Do not use the charging cable if it is damaged. Replace the cable immediately.
- Do not unplug or use the turbo fan when your hands are wet, as this may cause in electric shock and injury.
- Do not damage, modify, forcefully bend, pull, or twist the charging cable; otherwise, it may cause an electric shock or fire due to short circuits.
- If the charging cable is damaged, it must be replaced to avoid an electric shock.

Exception or Failure


- When an abnormality or malfunction occurs, if there is no air flow, frequent stops, internal redness, or smoke, please immediately stop using this turbo fan.

WARNING: The manufacturer is not responsible for any potential injury from misuse.


BOX CONTENTS

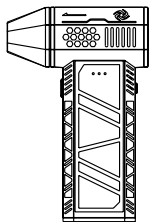

Fan

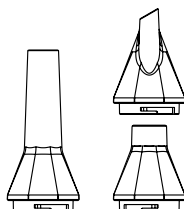


Attachments

 

USB Charging
Cable

NOTE: Before using the product, please ensure you have all accessories listed in this manual.

 PRODUCT OVERVIEW

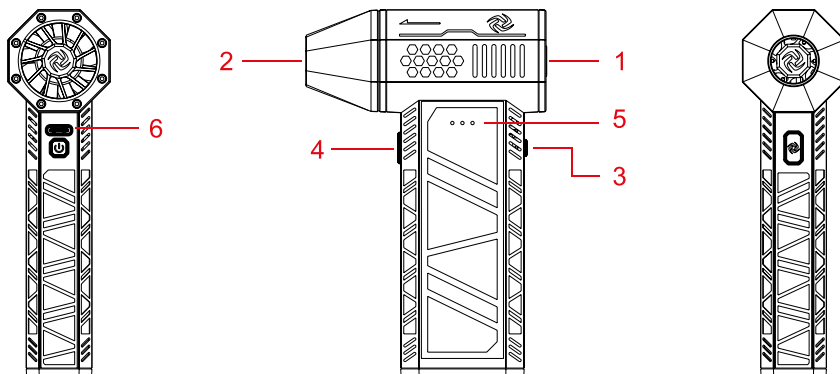

1. Air Inlet	4. Fan power button
2. Air outlet	5. Indicator lights
3. Main power button	6. USB-C charging port

NOTE: The illustrations of products, accessories, and other items in the manual is a schematic diagram for reference only. Due to product updates and upgrades, slight differences may exist between the actual product and the schematic diagram. For accuracy, please refer to the actual product.

BEFORE FIRST USE

Prior to using your product, please read all the safety and operating instructions thoroughly. Please ensure you follow the steps below before using the product. We recommend you keep the original packaging for storing the product when not in use.

Please pay close attention to the section entitled Important Safety and General Instructions. Find a safe and convenient place to keep this instruction manual for future reference.

Unpack the product but keep all the packaging materials until you have made sure your new product is undamaged and in good working order. Ensure you have all accessories listed in this manual. Plastic wrapping can be a suffocation hazard for babies and children so ensure all packaging materials are out of their reach.

NOTE: The product cannot be used and charged at the same time.

NOTE: Fully charge the unit via the included charge cable and a free USB-A port or USB-A power supply (not included) before first use.

OPERATING INSTRUCTIONS

All features and functions must be covered in this section, using as many images or screenshots as required to clearly convey how a specific feature works.

Powering on the unit

Press and hold the power button (3) for two seconds to turn on or off.

NOTE: The unit will automatically shut down after 3 minutes of standby.

Starting the fan

In low & medium speed modes, tap the fan power button (4) to start the fan. Tap it again to turn the fan off.

In high speed mode, the fan power button (4) must be held to turn the fan on.

Adjusting fan speed

After turning on unit, tap the main power button (3) to adjust the fan speed. The current fan speed is shown on the LED indicator lights (5).

NOTE: 3 lights indicates high, 2 indicates medium, and 1 indicates low speed.

Changing nozzles

To remove the installed nozzle, hold the installed nozzle (2) and twist in an anticlockwise direction.

To install a new nozzle, hold the new nozzle against the air outlet and twist in a clockwise direction.

Charging

To charge the Mini turbo fan, use the included charge cable and a free USB-A port or USB-A power supply (not included). The charge socket (6) is located above the main power button (3).

NOTE: Before use, fully charge the unit via the included charge cable and use a free USB-A port or USB-A power supply. Note: Power supply is not included.

NOTE: The product cannot be used and charged at the same time.

CLEANING, CARE & STORAGE & MAINTENANCE

- Do not block or insert foreign objects into the Air inlet or air outlet ports during operation, as this may damage the product.
- Do not immerse this product in water.
- Do not use this product in damp environments. Please keep this product dry.
- Do not use with wet hands.
- Do not use near petroleum gas or other flammable materials (such as volatile agents, paint thinners, sprays, etc.); otherwise, it may cause an explosion.
- Do not store in a highly humid area.
- Do not store it in reach of children and infants.

TROUBLESHOOTING

Unit will not turn on	Ensure the unit has been fully charged, and the unit has been powered up as per the instructions on page 7 of this manual.
Unit will not charge	Check the USB cable is free from damage & the indicator lights (5) are flashing.

NOTE: If the unit is still not working as corrected, please contact the place of purchase or our after sales support line.

SPECIFICATIONS

Fan speed:	Low: Up to 30,000 RPM Medium: Up to 80,000 RPM High: Up to 130,000 RPM
Wind speed:	Low: Up to 14m/s Medium: Up to 36m/s High: Up to 45m/s
Wind pressure:	Up to 180G (High mode)
Input:	5V/2A (via USB-C)
Battery:	7. 4V 2500mAh Li-Ion
Run time:	Up to 100 minutes
Charging time:	Up to 2.5 hours
Product size:	143 x 93 x 39mm
Product weight:	310g

WARRANTY

Our product is guaranteed to be free from quality and manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim. Should you not be able to provide proof of purchase with a receipt or bank statement, identification showing name, address and signature may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution
46 Eastern Creek Drive,
Eastern Creek NSW 2766
Ph. 1300 738 555