

**digitech**

# Digital Sports Stopwatch



Model:  
**XCO275**

# Instruction Manual

## FEATURES


- Normal Time
- Time of Day in Hours, Minutes and Seconds
- Calendar with Day, Month and Date
- Daily Alarm and Chime
- 12/24 Hour Time Options

## BOX CONTENTS

1x Digital Sports Stopwatch

## PRODUCT DIAGRAM

**B** Split/Reset

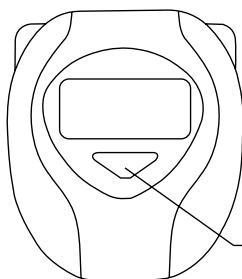


**A** Start/Stop

**C** Mode

## OPERATING INSTRUCTIONS

Switching between modes

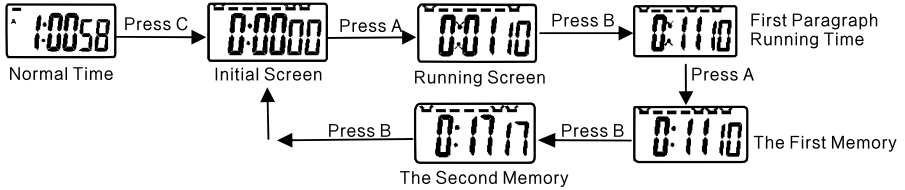

### Alarm set up steps

In Normal Timer Mode, press [C] two times to enter the alarm Settings, hour starts flashing. Press [A], the flashing value increases by "1". Press and hold [A] for 2 seconds, flashing value increase automatically. After setting the hour, press [B], minutes start flashing, then press [A] to set minutes values. After setting all the parameters, press [C] to return to the Normal Timer Mode.

### Time set up steps

In Normal Time Mode, press [C] three times to enter the time setting. Press [A] adjust values. Press [B] to continue the setting process in the following sequence: seconds > minutes > hours > day > month > back to week.

In setting hours, system will switch to the 12/24 hour automatically.

After setting, press [C] to return to Normal Timer Mode.

### Operation Details

- In Normal Time Mode: press and hold the [A] button to review month, day, week.
- In Normal Time Mode: press and hold the [B] button to display the alarm time.
- In Normal Time Mode: Hold down the [B] button and press the [C] button to turn on or turn off the "hourly chime function"
- In alarm mode, press the [A] button to enter repeat alarm mode, it will repeat alarm after five minutes if you need, press the [B] button to stop the alarm.

## MAINTENANCE

- The battery is user replaceable. These take 1x AAA battery.
- This stop watch is not water resistant, avoid immersing or exposing it to water, rain, or other forms of moisture.

## WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555