

RS485 Loop Test

- 1. Two converters should be in the same domain but with different IP address.
- 2. Both converters select RS485 option.

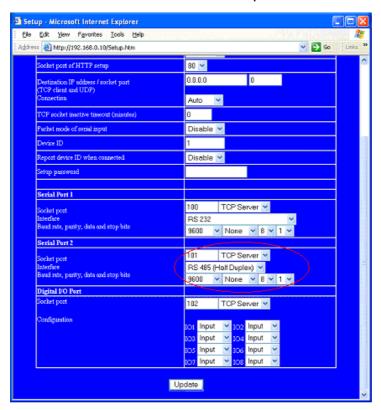

3. Open a hyper terminal file

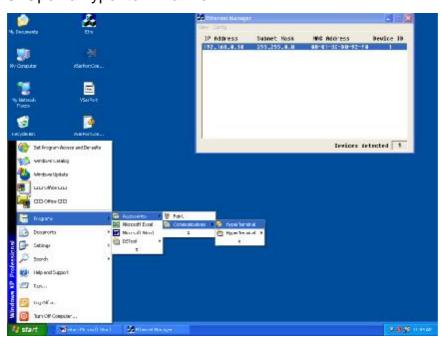

- 4. Name the Hyper Terminal. (Example: test)
- 5. Select "OK" button of Connection Description.



6. Press OK button of connect To.



7. Select TCP / IP item in connect using.




8. Press OK button of Connect To.




- 9. Fill converter's IP address and socket data in Host address and Port number items in Connect To.
- 10. Press "OK" button of Connect To.



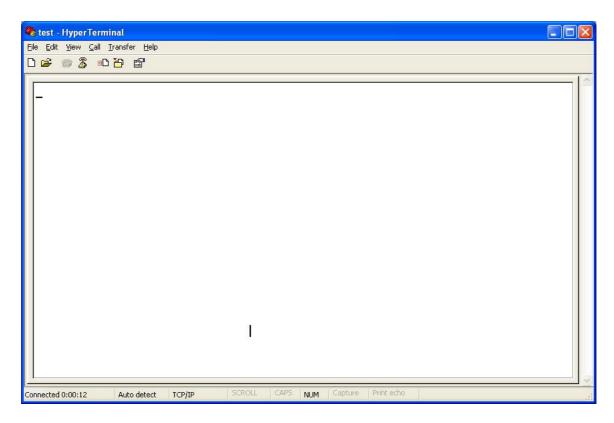

- 11. Repeat step 2 and open an additional hyper terminal file for the second converter
- 12. Please short D+ & D+/D- &D- of RS485 connector of converter.

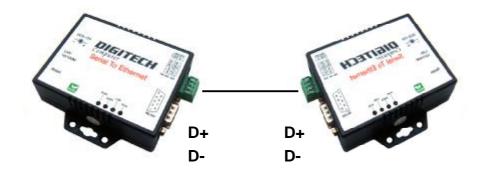

13. Both the converters can be assumed as working if you type any characters on Hyper Terminal of PC 1 & see on PC 2 and similarly, type any characters on Hyp Term of PC 2 & see on PC1.

