
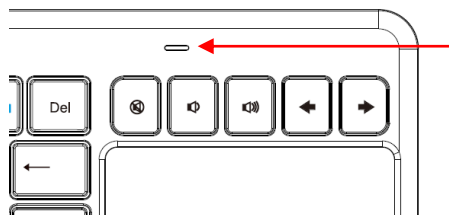



NEXTECH

Wireless All-In-One Keyboard and Touchpad

XC5137 User Manual

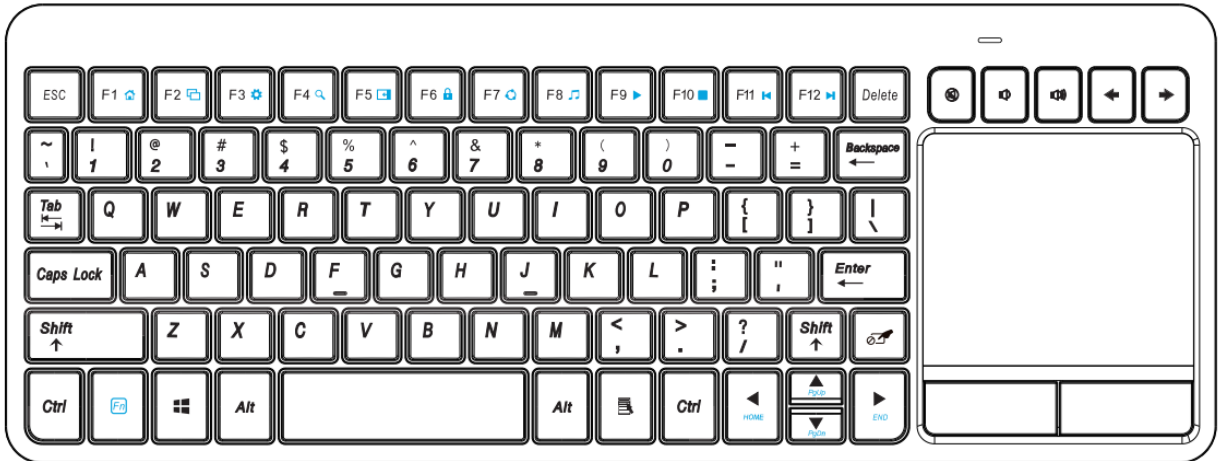

LED Indicator

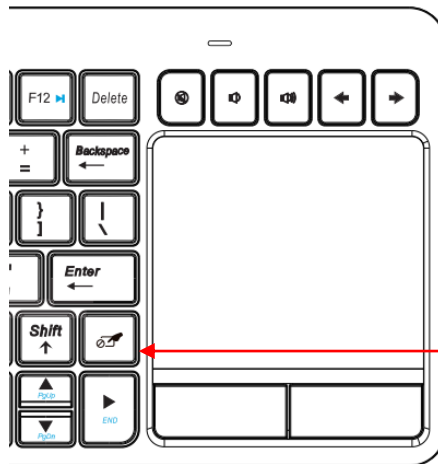

LOCK key

**Disable/activate the touchpad
and left/right buttons**

1. Overview

1. Up to 10m 2.4G wireless rang
2. Built-in high resolution touchpad & left/right buttons
3. 5 Separate hot keys; 12 shortcuts
4. nano USB Receiver
5. 2 AAA Battery

2. Package contents

1. Wireless Touchpad Keyboard
2. Nano USB Receiver
3. 2 AAA Battery
4. Quick Guide

3. Specifications

Interface: USB2.0

Dimensions: Keyboard: 327.6x 123.8 x 16.3 mm

Transmission Distance: Up to 10 meters (depend on user environment)

4. System requirements

1. USB Port
2. Windows XP/VISTA; Win 7 / 8 / 8.1 / 10
Android OS
Mac OS
Smart TV (with keyboard/mouse support) / PS3 / PS4 / Xbox One

5. Installation













1. Open the battery cover underneath the keyboard.
2. Insert the batteries according to the markings in the battery compartment.
3. Set the on-off switch to ON to activate the keyboard.
4. Connect the USB receiver to an available USB port on your PC.
5. The computer will detect and install the drivers automatically. A message window will appear once installation is complete.

NOTE




1. When you insert the dongle into the PC/TV, the device will automatically connect with PC/TV.
2. When you power on the keyboard, the LED indicator flashes once in red.
3. The LED indicator flashes in red every 5s when the battery is low power. Please replace with new batteries.



6. Product Function

1). Fn Shortcuts Description (under Windows 10 OS)





Fn Keys	Function
Fn+F1 	Open Internet Browser
Fn+F2 	Open Task view
Fn+F3 	Open Settings
Fn+F4 	Open Search
Fn+F5 	Open Action Center
Fn+F6 	Lock Your PC
Fn+F7 	Open the Share Charm
Fn+F8 	Open Music Player
Fn+F9 	Play/Pause
Fn+F10 	Stop
Fn+F11 	Previous Track
Fn+F12 	Next Track

2). Media Keys

Hot Key	Function
	Mute
	Volume Down
	Volume Up

Hot Key	Function
	Back
	Forward

3). Gesture Functionality Support

Finger Gesture	Finger Action	Mouse Function
	Single-finger slide	Mouse cursor manipulation
	Single tap	Click at cursor location
	Two-finger slide vertically	Vertical scroll (mouse wheel)
	Pinch on the touchpad with two fingers for zooming. Pinch open to zoom in or pinch close to zoom out.	

Distributed by:

Electus Distribution Pty. Ltd.

320 Victoria Rd, Rydalmere

NSW 2116 Australia

www.electusdistribution.com.au

Made in China