

# NEXTECH

# XC5140



\*Tablet not included

# Bluetooth<sup>®</sup> Media Keyboard with Holder

## Instruction Manual



R-NZ

Please read and save all instructions to ensure safe and effective use of this product

## CONTENTS

General Information & Safety Instructions.....	3
Box Contents .....	3
Product Diagram .....	4
Before First Use .....	4
Operation Instructions.....	5
Multimedia Buttons.....	8
Cleaning, Care, Storage & Maintenance.....	10
Troubleshooting.....	10
Specifications.....	11
Warranty Information.....	12

## GENERAL INFORMATION & SAFETY INSTRUCTIONS

Read this manual thoroughly before first use, even if you are familiar with this type of product. Please keep this user manual in a safe place along with your purchase receipt and gift box for future reference.

- Do not attempt to repair, disassemble or modify the keyboard.
- Keep the keyboard away from high temperatures or open flame as it may damage the device.
- Never immerse the keyboard in any liquids or pour liquid onto it.
- Turn off the keyboard when not in use to preserve the battery life.

**WARNING: The manufacturer is not responsible for any potential injury from misuse**

**NOTE: Fully charge the keyboard before the first use.**

## BOX CONTENTS




1 x Bluetooth® Media Keyboard with Holder



1 x USB Micro B Charging Cable

## PRODUCT DIAGRAM

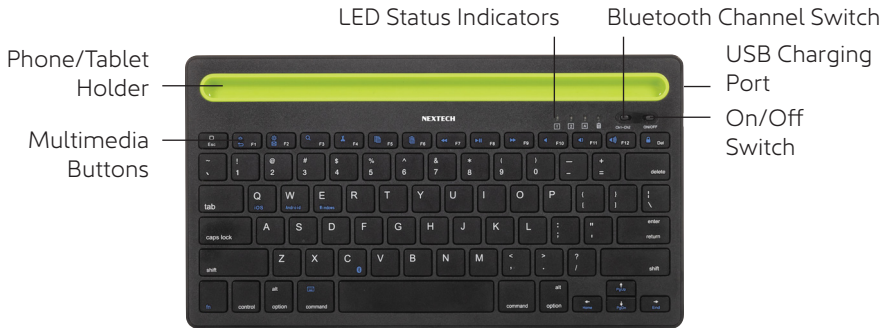

## BEFORE FIRST USE

Prior to using your product, please read all the safety and operating instructions thoroughly. Please ensure you follow the steps below before using the product. We recommend you keep the original packaging for storing the product when not in use. Please pay close attention to the section entitled Important Safety and General Instructions. Find a safe and convenient place to keep this instruction manual for future reference.

Unpack the product but keep all packaging materials until you have made sure your new product is undamaged and in good working order. Ensure you have all accessories listed in this manual.

**WARNING: The manufacturer is not responsible for any potential injury from misuse**

**NOTE: Fully charge the keyboard before the first use.**

**NOTE: Place the product on a dry, flat, even surface.**

## OPERATION INSTRUCTIONS

**NOTE: Fully charge the keyboard before the first use.**

1. Turn on the media keyboard by pressing the on/off switch. The LED status indicator will begin flashing blue.
2. Press the “fn” and “C” buttons simultaneously on the keyboard to begin the Bluetooth® pairing process.
3. Refer to the instructions below depending on the operating system of the device such as PC (Windows), Android or iOS™.

**NOTE: The media keyboard will enter standby mode after it has been inactive for 10 minutes. Press any key to disable standby mode.**

### PC (Windows):

1. Click on the start menu and find settings located on the left hand control panel.
2. Click on the devices menu which will display a list of current Bluetooth® devices.

**NOTE: Bluetooth® must be turned on in order for the media keyboard to connect.**

3. Click on the “Add Bluetooth® or other device” button and select Bluetooth® devices to begin scanning.

**NOTE: The PC must be Bluetooth® enabled in order to connect to the media keyboard otherwise a Bluetooth® adaptor is required.**

4. Select “BT5.0 Keyboard” from the devices list in order to pair. The LED status indicator will begin flashing slowly while pairing.

**NOTE: Ensure the media keyboard is turned on and the LED status indicator is flashing blue.**

5. The LED status indicator will stop flashing blue once the media keyboard has been paired successfully.
6. Press the “fn” and “E” (Windows) buttons simultaneously on the keyboard at the same time to activate the multimedia key function.

**NOTE: If you do not activate the multimedia key function; then the multimedia keys will not work correctly.**

**NOTE: If the device or media keyboard has been turned off, press any key and wait for up to 10 seconds for the connection to be established.**

### **Android (Smartphone & Tablet):**

1. Open the settings on the smartphone or tablet.
2. Click on the connected devices menu which will display a list of current Bluetooth® devices.

**NOTE: Bluetooth® must be turned on the smartphone or tablet in order for the media keyboard to connect.**

3. Click on the "Pair new device®" button which will begin scanning for Bluetooth® devices.
4. Select "BT5.0 Keyboard" from the devices list in order to pair. The LED status indicator will begin flashing slowly while pairing.

**NOTE: Ensure the media keyboard is turned on and the LED status indicator is flashing blue.**

5. A pop up menu will display asking to pair with the current device. Press the pair button to finish pairing.
6. The LED status indicator will stop flashing blue once the media keyboard has been paired successfully.
7. Press the "fn" and "W" (Android) buttons simultaneously on the keyboard to activate the multimedia key function.

**NOTE: If you do not activate the multimedia key function; then the multimedia keys will not work correctly.**

**NOTE: If the device or media keyboard has been turned off, press any key and wait for up to 10 seconds for the connection to be established.**

### **iOS™ (iPhone® & iPad®):**

1. Open the settings on the iPhone® or iPad®.
2. Click on the "Bluetooth®" button which will display a list of current Bluetooth® devices.

**NOTE: Bluetooth® must be turned on the iPhone® or iPad® in order for the media keyboard to connect.**

3. Scroll down to "other devices" which will which will begin scanning for new Bluetooth® devices.
4. Select "BT5.0 Keyboard" from the devices list in order to pair. The LED status indicator will begin flashing slowly while pairing.

**NOTE: Ensure the media keyboard is turned on and the LED status indicator is flashing blue.**

5. The LED status indicator will stop flashing blue once the media keyboard has been paired successfully.
6. Press the “fn” and “Q” (iOS™) buttons simultaneously on the keyboard to activate the multimedia key function.

**NOTE: If you do not activate the multimedia key function; then the multimedia keys will not work correctly.**

**NOTE: If the device or media keyboard has been turned off, press any key and wait for up to 10 seconds for the connection to be established.**

### **Bluetooth® Channel Switch:**

The media keyboard supports two Bluetooth® devices to be connected at the same time. One device may be connected to channel 1 and a second device connected to channel 2.

**NOTE: The Bluetooth® connection may take up to 10 seconds when pressing the Bluetooth® channel switch to change to a different device.**

### **Charging**

1. Connect the USB Micro B charging cable to the USB charging socket of the keyboard.
2. Connect the opposite end of the USB Micro B charging cable to a USB mains power adaptor or a computer USB port.
3. The LED status indicator will turn red while charging and turn off when charging is complete.

**NOTE: The LED status indicator will flash red when the keyboard has a low battery.**



















## MULTIMEDIA BUTTONS

**NOTE: The multimedia buttons need to be activated in order for it to work on PC, Android or iOS™. Refer to the instructions on page 5-7 to setup up the multimedia buttons depending on which operating system is being used.**

PC (Windows):



















	Back To Home Page		Previous Song		Cut
	Windows Menu		Play/Pause		Copy
	Search		Next Song		Paste
	Not Applicable		Mute		Not Applicable
	Not Applicable		Reduce Volume	<b>Fn</b>	Auxiliary Function
	Not Applicable		Increase Volume		Lock Screen

Android (Smartphone & Tablet):

	Back To Home Page		Mute	<b>Fn+End</b>	Cursor To End
	Not Applicable		Decrease Volume	<b>Fn+PgUp</b>	Cursor To Top
	Search		Increase Volume	<b>Fn+PgDn</b>	Cursor To Bottom
	Return To Parent Dir.		Cut	<b>Ctrl+C</b>	Copy
	Not Applicable		Copy	<b>Ctrl+X</b>	Cut
	Mailbox		Paste	<b>Ctrl+V</b>	Paste
	Previous Song		Not Applicable	<b>Ctrl+Z</b>	Undo
	Play/Pause	<b>Fn</b>	Auxiliary Function		Lock Screen
	Next	<b>Fn+Home</b>	Cursor To Top		Paste



iOS® (iPhone® & iPad®):

	Back To Home Page		Increase Volume	<b>Fn + Home</b>	Cursor To Front
	Not Applicable		Mute	<b>Fn + End</b>	Cursor To End
	Search		Reduce Volume	<b>Fn + PgUp</b>	Cursor To Top
	Not Applicable		On-Screen Keyboard	<b>Fn + PgDn</b>	Cursor To Bottom
	Reduce Screen Brightness		Cut	<b>Cmd + A</b>	Select All
	Increase Screen Brightness		Copy	<b>Cmd + C</b>	Copy
	Previous Song		Paste	<b>Cmd + X</b>	Cut
	Play/Pause		Not Applicable	<b>Cmd + V</b>	Paste
	Next Song		Lock Screen	<b>Ctrl + Spacebar</b>	Switch Language
				<b>Fn</b>	Auxiliary Function

**NOTE: Some devices using Windows, Android or iOS™ may not be compatible with certain multimedia keys.**

## CLEANING, CARE, STORAGE & MAINTENANCE

- Always turn off the keyboard and remove the charging cable before cleaning the keyboard.
- Only use a soft cloth when cleaning the keyboard, do not use a damp sponge or cloth.
- Store the keyboard in a clean and dry place.
- Turn off the keyboard when not in use to preserve the battery life.

## TROUBLESHOOTING

<b>The keyboard will not turn on.</b>	Ensure the battery is fully charged, connect the USB Micro B charging cable to a suitable USB mains power adaptor or a computer USB port. Ensure the power switch is turned on.
<b>Battery is not charging.</b>	Ensure the charging cable is in working order and it is connected to a USB mains power adaptor or a computer USB port using 5VDC,500mA.
<b>Bluetooth® won't connect.</b>	A Bluetooth® enabled device is required when using this keyboard, otherwise a Bluetooth® USB or PCIE adaptor is required when using Windows. Ensure the Bluetooth® is turned on when using Android or iOS™. Connect to the Bluetooth™ name "BT5.0 Keyboard" and make sure the keyboard has the correct channel switch.
<b>Some multimedia keys are not working.</b>	The Multimedia function needs to be activated by pressing the "fn" and either the "Q", "W" or "E" buttons simultaneously depending on which operating system is being used. Refer to the instructions on page 5-7 to this function. Some devices using Windows, Android or iOS™ may not be compatible with certain multimedia keys.

## SPECIFICATIONS

<b>Bluetooth® Version</b>	5.0
<b>Bluetooth® Range</b>	Up to 10m
<b>Run Time</b>	Up to 40 Hours
<b>Charge Time</b>	2-3 hrs
<b>Battery</b>	3.7V Li-po, 250mA
<b>Power</b>	5VDC, 500mA (USB Micro B)
<b>Dimensions</b>	291(L) x 159(H) x 16(D)mm

## WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555