


## User Manual

# Waterproof Portable Rechargeable Speaker

## XC-5219

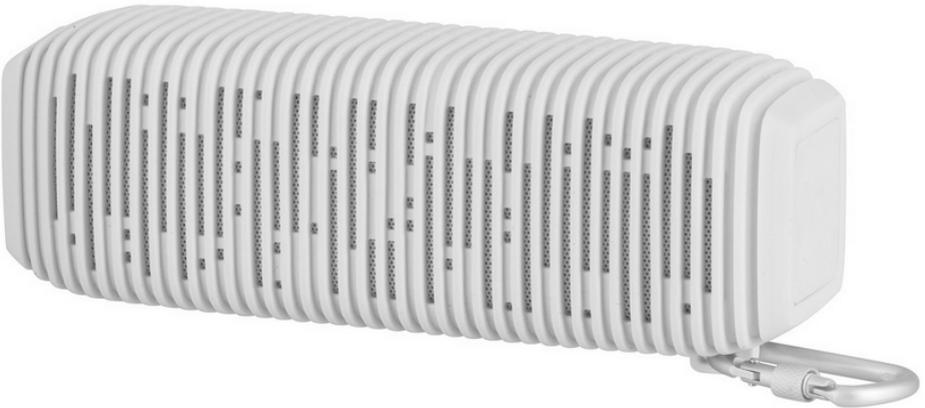

Distributed by:  
TechBrands by Electus Distribution Pty. Ltd.  
320 Victoria Rd, Rydalmere  
NSW 2116 Australia  
Ph: 1300 738 555  
Int'l: +61 2 8832 3200  
Fax: 1300 738 500  
[www.techbrands.com](http://www.techbrands.com)

### Specifications:

Weatherproof rating:	IPX4
Output Power:	2 x 3 WRMS
Frequency response:	9Hz-18kHz
Impedance:	4 Ohm
Sensitivity:	80dB±2dB
S/N Ratio:	≥65dB
Distortion:	≤1%
Charge time:	3.5-4.5 hours
Use time:	4-5 hours
Power:	1800mAh Li-ion Battery
Dimensions:	186(L) x 62(H) x 56(D) mm

### Charging the battery:

- Open the protective cover on the side of the unit.
- Plug the charging cable into the charging port, and the other end into a USB power terminal. The LED indicator will turn red.
- Once the charging is completed, the LED indicator will turn off.

### Bluetooth® pairing:

- Press and hold the power button to turn on the speaker.  
*Press it again to turn off.*
- The blue LED will flash along with a 'beep' sound to indicate it's in Bluetooth mode and ready for pairing.
- Turn on the Bluetooth® function of your device and search for "XC5219", select to pair, and if prompted for a password type "0000". After the connection is successful the blue LED will stop flashing.
- Select the music to play from your device, or use as per the Operation Instructions below.

### NFC (Near Field Communication):

1. To use the NFC function, you must have an NFC enabled device. Ensure that the NFC on your device is turned on, and hold your NFC enabled device over the NFC logo on the speaker.
2. This will connect your device to the speaker, and any previous devices that were connected will be disconnected.
3. Select the music to play from your device, or use as per the Operation Instructions below.

### AUX Link:

1. After powering on the unit, use a 3.5mm audio cable to connect your music device with the speaker. The LED on the front will turn red.
2. Select the music to play from your device, or use as per the Operation Instructions below.

*The call control buttons will not work in AUX link mode.*

### Button Description:



Press once to skip to the previous track  
Press and hold to decrease the volume



Press once to skip to the next track  
Press and hold to increase volume



Press once to pause or play the music  
Press and hold to disconnect the Bluetooth®



Press to pick up/hang up phone call  
Press twice quickly to redial the last phone number



Switch the speaker On/Off