

digitech

Mini Rechargeable Speaker with Bluetooth® Technology



Model:
XC5234

Instruction Manual

CONTENTS

Before First Use	2
Box Contents	2
Product Diagram.....	3
Operation	4
Troubleshooting.....	6
Safety.....	6
Specifications.....	7
Warranty Information.....	8

BEFORE FIRST USE

Prior to using your product, please read all the safety and operating instructions thoroughly. Please ensure you follow the steps below before using the product. We recommend you keep the original packaging for storing the product when not in use.

Find a safe and convenient place to keep this instruction manual for future reference.

Unpack the product but keep all packaging materials until you have made sure your new product is undamaged and in good working order. Ensure you have all accessories listed in this manual.

BOX CONTENTS




1 x Mini Rechargeable Speaker



1 x USB Charging Cable

PRODUCT DIAGRAM

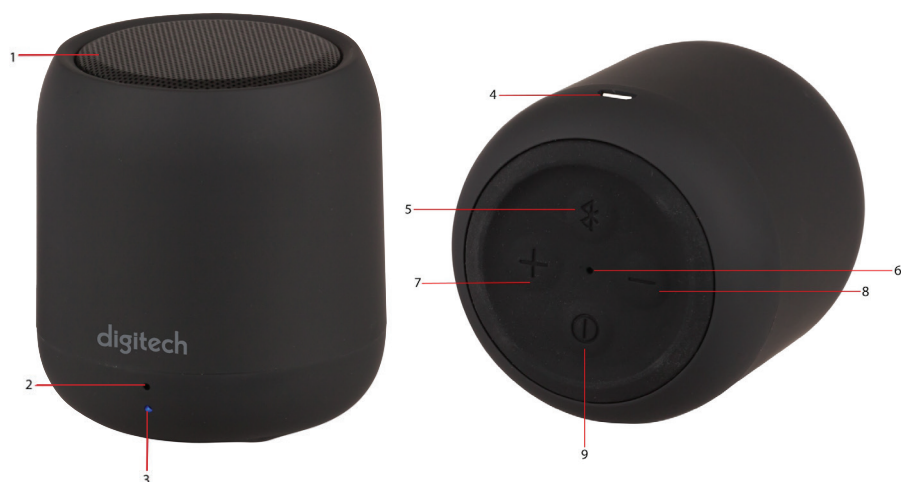

#	Feature	Description
1	Speaker	Sound is distributed through the top
2	Microphone	Use to speak in to while connected to a call
3	LED Status Indicator	Indicates the current Bluetooth® connection and charging status
4	USB Power Socket	Connect to the USB micro B charging cable and suitable USB charger
5	Play/Pause/Call	Press to play, pause or receive an incoming call
6	Reset	Press and hold the button to reset the speaker
7	Volume Up / Next Track	Press once to turn the volume up Press and hold to skip to the next track
8	Volume Down / Previous Track	Press once to turn the volume down Press and hold to skip to the previous track
9	Power On/Off	Press and hold the button to turn the unit on or off

OPERATION

Bluetooth® Pairing:

1. Press and hold the power button located on the bottom of the speaker to turn the unit on. It is suggested to plug the USB charging cable in and charge the speaker for up to 2 hours on first time use.
2. Once the speaker is powered on; it should start automatically flashing in Bluetooth® mode.
3. Open the settings of your smart phone or tablet and ensure Bluetooth® is turned on.
4. Once your Bluetooth® is enabled; scan for devices and the Bluetooth® name Digitech XC-5234 should appear. If the name doesn't appear then please ensure the speaker is correctly powered on.

Bluetooth® Name: Digitech XC-5234

5. Press the Digitech XC-5234 on the Bluetooth® device list and your smartphone or tablet should show that it is now connected.
6. You can now start playing audio from your smartphone or tablet. The volume can be adjusted from both the speaker and your device.
7. Press and hold the play/pause button to unpair the current Bluetooth® device.

NOTE: The Bluetooth® will automatically be paired to the last connected device when the speaker is turned back on.

Bluetooth® Calling:

Call	Button
Answer	Press the call button once to answer an incoming call
Reject	Press and hold the call button to reject the incoming call
Hang Up	Press the call button once while on the phone call to hang up
Redial	Press the call button twice to redial the last number dialed

LED Status Indicators:

LED	Description
Blue On	Bluetooth® Connected
Blue Flashing	Bluetooth® Pairing Mode
Red On	Charging
Red & Blue On	Bluetooth® Connected & Charging
Red & Blue Flashing	Bluetooth® Pairing & Charging

Charging:

1. Insert the USB micro B plug from the USB charging cable to the power socket of the speaker.
2. Insert the USB charging plug in to a suitable USB mains power adaptor (not included) or USB charging port of a computer.
3. The LED status indicator will be red once charging has started. Charging will be completed in around 2 hours.
4. Once fully charged; the LED status indicator will turn off.

TROUBLESHOOTING

Problem	Solution
Battery Won't Charge Or Power On	Connect the USB charging cable to a USB mains power adaptor or suitable USB charging port.
	Make sure the battery is fully charged up to 2 hours and make sure the LED status indicator has turned off.
	If you have left the USB charging cable connected to the speaker and charging unused for a long period of time; it may have caused damage to the battery.
No Audio	Ensure the volume is correctly turned up depending on the main volume.
	Ensure the volume is correctly turned on your audio device if connected in Bluetooth® mode.
	Try a different audio source; it may be your device not transmitting audio.
Bluetooth® Will Not Pair	Restart the speaker and smartphone or tablet.
	Type in the password "0000" if it asks you for one.
	Make sure the blue LED is flashing in Bluetooth® mode.

SAFETY

- Do not open the case of the speaker to avoid damage and injury.
- Keep the speaker away from high temperatures as it may cause damage to the speaker and battery.
- Do not expose the speaker to water, moisture or liquids to prevent the unit from damage.
- If using a third party mains power adaptor; make sure the voltage matches the specifications as 5VDC.

SPECIFICATIONS

Bluetooth® Version	4.2+EDR
Output Power	3WRMS (5W Power)
Transmission Range	Up to 10m
Frequency Response	150Hz-18KHz
Sensitivity	>75dB
Playback Time	2.5-5 Hours
Charging Time	2 Hours
Battery	Li-ion 3.7V, 600mAh
Power	5VDC, 500mA (Micro B USB)
Power Consumption	300mA (Max)
Dimensions	74(H) x 69(Dia)mm

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555