

# Mini Rechargeable Speaker with Bluetooth® Technology



User Manual XC-5234

# **Box Contents:**



1 x Mini Rechargeable Speaker 1 x USB Charging Cable



# **Product Diagram:**





#	Feature:	Description:
1.	Speaker	Sound is distributed through the top
2.	Microphone	Use to speak in to while connected to a call
3.	LED Status Indicator	Indicates the current Bluetooth® connection and charging status
4.	USB Power Socket	Connect to the USB micro B charging cable and suitable USB charger
5.	Play/Pause/Call	Press to play, pause or receive an incoming call
6	Reset	Press and hold the button to reset the speaker
7.	Volume Up / Next Track	Press once to turn the volume up Press and hold to skip to the next track
8.	Volume Down / Previous Track	Press once to turn the volume down Press and hold to skip to the previous track
9.	Power On/Off	Press and hold the button to turn the unit on or off

# **Operation:**

### **Bluetooth® Pairing:**

- 1. Press and hold the power button located on the bottom of the speaker to turn the unit on. It is suggested to plug the USB charging cable in and charge the speaker for up to 2 hours on first time use.
- 2. Once the speaker is powered on; it should start automatically flashing in Bluetooth® mode.
- 3. Open the settings of your smart phone or tablet and ensure Bluetooth® is turned on.
- 4. Once your Bluetooth® is enabled; scan for devices and the Bluetooth® name Digitech XC-5234 should appear. If the name doesn't appear then please ensure the speaker is correctly powered on.

## Bluetooth® Name: Digitech XC-5234

- 5. Press the Digitech XC-5234 on the Bluetooth® device list and your smartphone or tablet should show that it is now connected.
- 6. You can now start playing audio from your smartphone or tablet. The volume can be adjusted from both the speaker and your device.

7. Press and hold the play/pause button to unpair the current Bluetooth® device.

Note: The Bluetooth® will automatically be paired to the last connected device when the speaker is turned back on.

# **Bluetooth® Calling:**

Call:	Button:
Answer	Press the call button once to answer an
	incoming call
Reject	Press and hold the call button to reject the
	incoming call
Hang Up	Press the call button once while on the
	phone call to hang up
Redial	Press the call button twice to redial the last
	number dialed

#### **LED Status Indicators:**

LED:	Description:
Blue On	Bluetooth® Connected
Blue Flashing	Bluetooth® Pairing Mode
Red On	Charging
Red & Blue On	Bluetooth® Connected & Charging
Red & Blue Flashing	Bluetooth® Pairing & Charging

## **Charging:**

- 1. Insert the USB micro B plug from the USB charging cable to the power socket of the speaker.
- 2. Insert the USB charging plug in to a suitable USB mains power adaptor (not included) or USB charging port of a computer.
- 3. The LED status indicator will be red once charging has started. Charging will be completed in around 2 hours.
- 4. Once fully charged; the LED status indicator will turn off.

# **Troubleshooting:**

Problem:	Solution:
	Connect the USB charging cable to a USB mains power adaptor or
	suitable USB charging port.
Battery Won't	Make sure the battery is fully charged up to 2 hours and make sure
Charge Or Power	the LED status indicator has turned off.
On	If you have left the USB charging cable connected to the speaker
	and charging unused for a long period of time; it may have caused
	damage to the battery.
	Ensure the volume is correctly turned up depending on the main
	volume.
N. A. A.	Ensure the volume is correctly turned on your audio device if
No Audio	connected in Bluetooth® mode.
	Try a different audio source; it may be your device not transmitting
	audio.
	Restart the speaker and smartphone or tablet.
Bluetooth® Will	Type in the password "0000" if it asks you for one.
Not Pair	Make sure the blue LED is flashing in Bluetooth® mode.

# **Safety:**

- 1. Do not open the case of the speaker to avoid damage and injury.
- 2. Keep the speaker away from high temperatures as it may cause damage to the speaker and battery.
- 3. Do not expose the speaker to water, moisture or liquids to prevent the unit from damage.
- 4. If using a third party mains power adaptor; make sure the voltage matches the specifications as 5VDC.

# **Specifications:**

Bluetooth® Version: 4.2+EDR

Output Power: 3WRMS (5W Power)

Transmission Range: Up to 10m

Frequency Response: 150Hz-18KHz

Sensitivity: >75dB

Playback Time: 2.5-5 Hours

**Charging Time: 2 Hours** 

Battery: Li-ion 3.7V, 600mAh

Power: 5VDC, 500mA (Micro B USB) Power Consumption: 300mA (Max)

Dimensions: 74(H) x 69(Dia)mm

#### Distributed by:

TechBrands by Electus Distribution Pty. Ltd. 320 Victoria Rd, Rydalmere

NSW 2116 Australia Ph: 1300 738 555

Int'l: +61 2 8832 3200

Fax: 1300 738 500 www.techbrands.com