

digitech

2-in-1
Waterproof 360° Speaker
with Bluetooth® Technology



Model:
XC5242

Instruction Manual

CONTENTS

Before First Use	2
Box Contents	2
Features	3
Product Diagram.....	3
Bluetooth pairing	4
Bluetooth Operation	5
LED Status Indicator	6
True Wireless Stereo (TWS) Pairing	6
FAQs	7
Specifications.....	7
Warranty Information.....	8

BEFORE FIRST USE

Prior to using your product, please read all the safety and operating instructions thoroughly. Please ensure you follow the steps below before using the product. We recommend you keep the original packaging for storing the product when not in use.

Find a safe and convenient place to keep this instruction manual for future reference.

Unpack the product but keep all packaging materials until you have made sure your new product is undamaged and in good working order. Ensure you have all accessories listed in this manual.

BOX CONTENTS

 
1 x 2-In-1 Waterproof 360° Speaker

1 x 2-Way USB Charging Cable

FEATURES

- 2-In-1 Separated Speaker Design .
- 360° Stereo Surround Sound
- True Wireless Stereo (TWS)
- Waterproof
- Rechargeable Battery
- Hands-free Calls


PRODUCT DIAGRAM

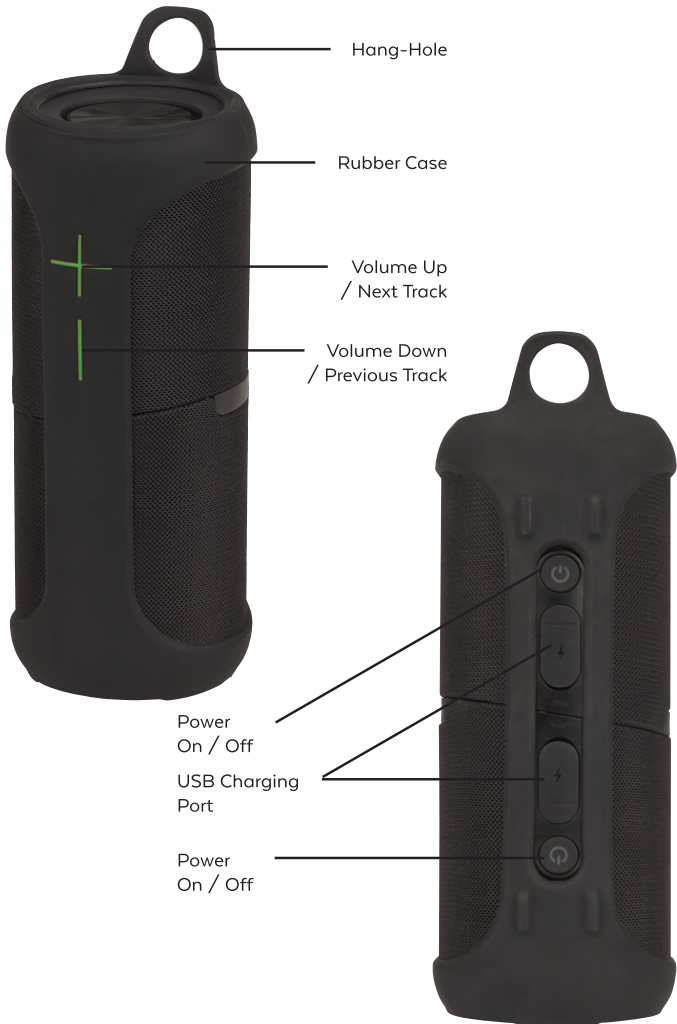

BLUETOOTH PAIRING


1 - Power On:

 Press and hold both the power button U of the master and slave speaker simultaneously for up to 2 seconds. The speaker will turn on, and you will hear a beeping sound. The LED indicator of the bottom (slave) speaker will stay blue and the top (master) speaker will begin flashing.

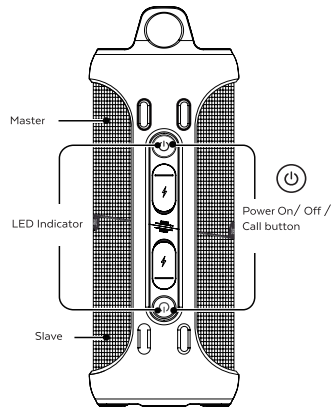


2 - Pair Your Smartphone:

 Open your smartphone settings and ensure Bluetooth® is enabled. Scan for devices and "Digitech XC5242" will appear. Once it appears; press the button and the speaker will connect.

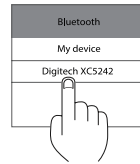


3 - Pairing Successful:

 The blue LED indicator will stay lit once pairing is complete, you can now start playing music.

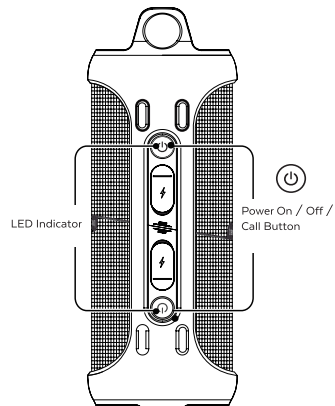

BLUETOOTH OPERATION

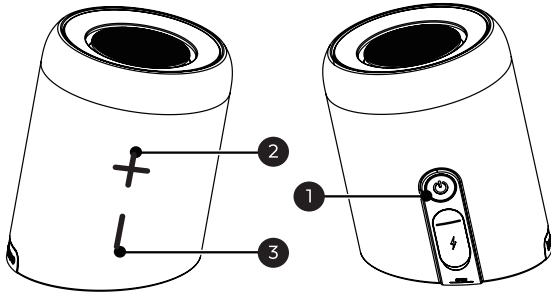 

Power On/Off / Call Button:

Power: Press and hold the power button **1** for up to 2 seconds to power on and off

Play/Pause: Press the power button **1** to play or pause

Accept Incoming Calls: Press the power button **1** to answer an incoming call

Refuse Incoming Calls: Press the power button **1** twice to reject a call

Hang Up: Press the power button **1** to hang up the call once you have already accepted it

Volume Up/ Next Track:

Volume Up: Press the volume up button to turn the music up

Next Track: Press and hold the volume up button to skip to the next track

Volume Down/Previous Track:

Volume Down: Press the volume down button to turn the music down

Previous Track: Press and hold the volume down button to skip to the previous track


TWS Disconnect: Press the power button **1** three times to disconnect the TWS pairing.

Bluetooth® Disconnect: Press the power button **1** two times to disconnect the current Bluetooth® device connected


NOTE: The volume buttons on both speakers control the main volume no matter which speaker you control while they're both connected.

LED STATUS INDICATOR

Blue Flashing	Bluetooth pairing, out of Bluetooth range
Blue On	Bluetooth connected successfully
Red On	Charging
Red Flashing	Low battery
LED Off	Fully charged, power off

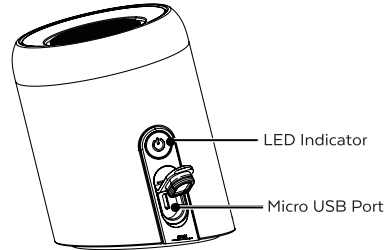 

TRUE WIRELESS STEREO (TWS) PAIRING

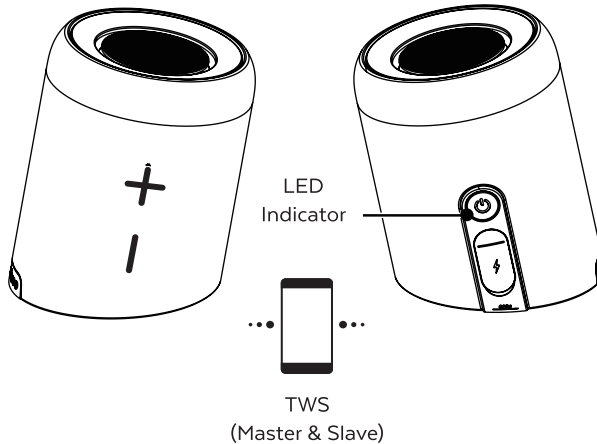 

By default, the speaker is connected as one which can be controlled by the main volume buttons on the front of the speaker. If you take off the silicon rubber cover, twist and rotate the speakers to separate them into two speakers providing you true left and right stereo audio.

Press and hold the power button simultaneously on both speakers for up to two seconds. It will connect automatically to one another once the Bluetooth is successful.

You can also just turn on one speaker if you prefer and control it using the power and volume buttons.

FAQS

What USB charger should i use for the speaker?

Any 5VDC, 1A USB mains power adaptor can be used or a standard USB 500mA computer port.

Why is there background noise when playing music?

The speaker has a Bluetooth® Range of up to 10m, reduce the distance to improve the sound coming from the speaker.

Why does the speaker shut down when it is working?

A: When there is no Bluetooth® device paired or Aux In cable connected to the speaker then it will automatically shut down after 10 minutes to save battery.

Why won't the speaker connect to a phone that has been previously paired?

Remove the speaker's pairing name "Digitech XC5242" from the Bluetooth® device list of your smartphone. Then press the Bluetooth® disconnection button to restart the pairing mode.

Why will the speaker not turn on?

Please leave the speaker plugged in to a charger and try to turn after a few minutes. The battery may be flat.

SPECIFICATIONS

Bluetooth® Version	5.0
Output Power	15WRMS (2 x 7.5WRMS)
Transmission Range	Up to 10m
Frequency Response	68Hz-20KHz
IP Rating	IPX7
Playback Time	3-15 Hours
Charging Time	3-4 Hours
Battery	Li-ion 3.7V, 1500mA x 2
Power	5VDC, 1A (Micro B USB)
Power Consumption	500mA (Max)
Dimensions	210(H) x 84(Dia)mm

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555