



CONCORD

XC-5250

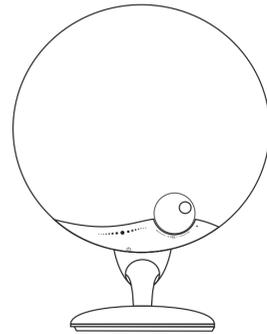


USER MANUAL

Connect to the DC Power

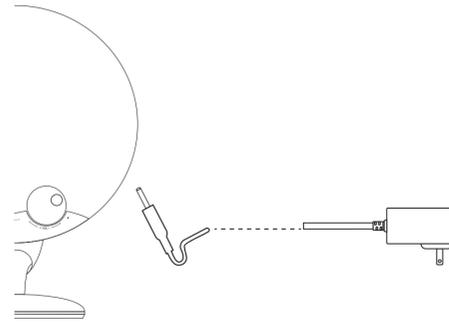

1


Bluetooth Connection

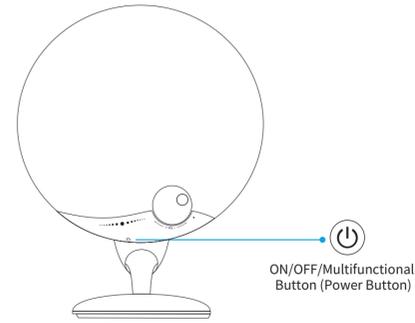

Step1 Power on
Long press  for 3 seconds The Blue LED flashes quickly. The speaker goes into Bluetooth searching mode.


2

Bluetooth Connection

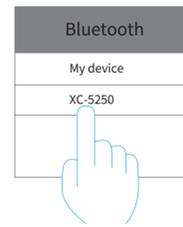

Step2 Choose the device
Turn on the Bluetooth on the phone, and then find the Bluetooth pairing name "XC-5250" to select to pair.

3

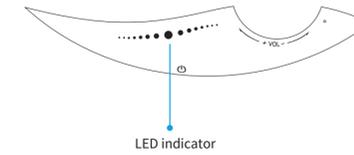


Step3 Pairing Success
The LED stays blue once the pairing is done.

4

Distributed by:
TechBrands by Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere
NSW 2116 Australia
Ph: 1300 738 555
Int'l: +61 2 8852 3200
Fax: 1300 738 500
www.techbrands.com
Made in China

AUX Connection

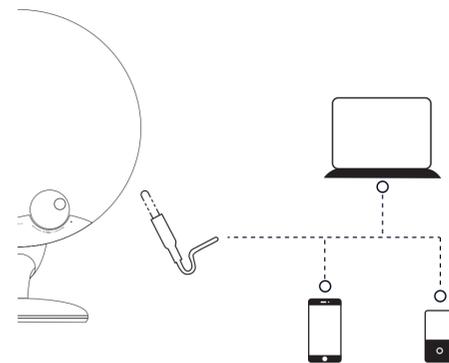

5

Basic Operation

ON/OFF/Multifunctional Button (Power Button)

- Power ON – Long press for 3 seconds
- Quick press the button twice to disconnect the current pairing and the speaker goes into searching mode again.

Touch and Slide Key

- Short touch it to play/pause; when a call comes in or during the call, short touch it to answer the call or hang up;
- Slide to right to reject a call once a call comes in;
- Slide from the right to the left - previous track;
- Slide from the left to the right - next track.

Rotation Key

- Clockwise rotate it to volume up;
- Counter clockwise rotate it to volume down.

6

LED Instructions

Description	LED Definition
Power ON	The default is Bluetooth mode – Blue LED flashes quickly (in searching status). When a 3.5mm AUX cable is inserted, it goes AUX mode automatically, the green LED stays ON.
Bluetooth	Blue LED stays ON in normal status. When it goes out of Bluetooth distance, it goes into searching mode and the blue LED flashes quickly. It will shut down automatically after 10 minutes without pairing.
Searching to pair	Blue LED flashes quickly.
Slide from the right to the left	The left blue LED blinks once.
Slide from the left to the right	The right blue LED blinks once.

7

How to operate TWS pairing function

TWS Pairing

Turn on two devices, short press  respectively and hear TWS prompt sound, both of them will automatically connect. They will connect automatically if they connected before.

The blue LED indicators of master device flash after pairing successfully, another device LED indicator keep on with successfully connected prompt sound, last step is searching and pairing bluetooth and enjoy your musics.

Disconnect TWS Pairing

Short press  and disconnect TWS pairing mode, blue LED indicator quickly flash with prompt sound.
Under TWS pairing status: Short press  any device of them, it will be disconnect TWS pairing made and entering standalone mode.

Attention, Bluetooth pairing should be connected after TWS pairing connected successfully.

8

Specifications

Bluetooth Version:	5.0
Output Power:	29WRMS
Transmission Range:	Up to 10m
Frequency Response:	60Hz-20kHz
Power:	18VDC, 2A
Power Consumption:	≤0.5W(Max)
Audio Sources:	Bluetooth, 3.5mm Aux
Dimensions:	340x 260 x 175mm

9

Frequently Asked Questions

Q: What if there is noise or discontinuous sound when playing?

A: The speaker can be normally used within 10m under no obstruction environment. If it is over 10m or with obstruction, there might be noise or discontinuous sound.

Q: Why will the speaker shut down automatically when it is working?

A: When there is no bluetooth pairing or AUX IN within 10 minutes, the speaker will shut down automatically.

Q: The speaker cannot connect the once-paired cellphone.

A: First, remove the "XC-5250" from the cellphone's Bluetooth list and then short press the Bluetooth Disconnection Button to restart pairing mode.

Q: What is the working sequence of the speaker?

A: The priority is AUX IN input, phone call in Bluetooth mode and then playing music Bluetooth mode.

* This speaker supports mobile phones and tablet PCs etc. Here this User Manual is illustrated based on mobile phones.

10