 


尺寸：85\*125mm  
 材质：128g双铜单色双面印刷(折页)

 
digitech

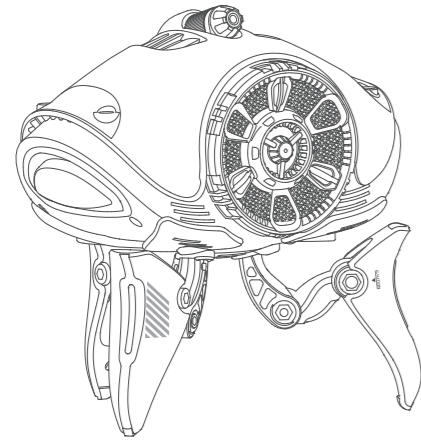

USER MANUAL


SPEAKER AND ACCESSORIES

- A: Speaker
- B: Type-C Charging Cable
- C: 3.5mm Aux In Cable
- D: User Manual

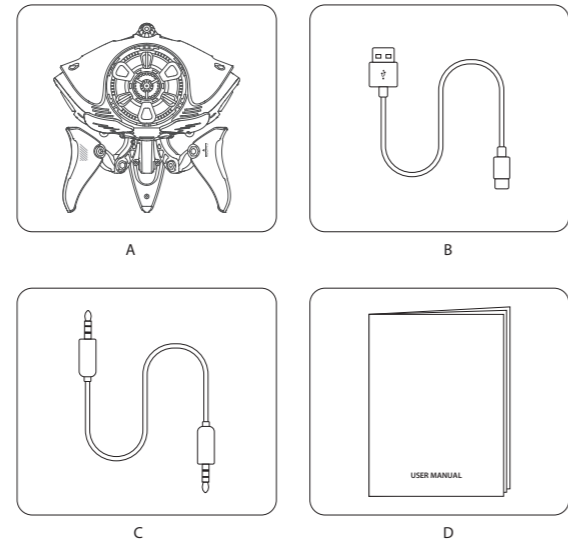

01

 BASIC FUNCTION

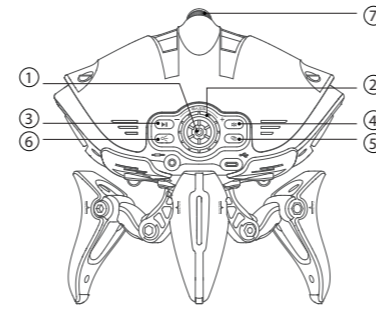

- ① Power Button Long press it 2-3s to power on/off
- ② Bass Rotary Knob Clockwise it to add bass  
Counterclockwise it to reduce bass
- ③ Play/Pause Button Short press it to play/pause during music playing  
Short press it to answer/end a call  
Long press it to reject the call
- ④ Bluetooth Disconnection Button Short press it to disconnect bluetooth
- ⑤ TWS Connection Button Short press it to activate/disconnect TWS
- ⑥ Light Button Short press it to switch between below lighting mode  
(Default mode is body light keeping on, dynamic light keeps flashing during music playing → body light and dynamic light keep on → body light keeps on, dynamic light turn off → body light and dynamic turn off.)
- ⑦ Volume Rotary Knob Clockwise it to increase volume  
Counterclockwise to decrease volume

Note: During TWS mode, master and submaster speaker can be controlled mutually.

02

 
OPERATION INSTRUCTIONS

1. Power on/off

Long press power button "⏻" for 2-3s to power on/off.


2. Bluetooth Mode

After speaker is turned on, it will enter into bluetooth pairing mode with blue indicator flashing at back side. Find "Digitech XC-5252" in your bluetooth list and connect it. There will be a prompt tone to show the speaker is connected successfully. Meanwhile, bluetooth indicator will stop flashing and keep blue. You can feel free to play music now.

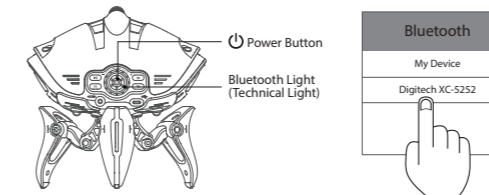

3. Hands Free Feature

 - After bluetooth connection, when you make call from your mobile, speaker will enter into hands free status. You can short press "▶" to answer a call and short press "⏻" to hang up. Also, you can reject the call by long press "▶".
- During a call conversation, short press "⏻" to switch the call from speaker to mobile to protect your privacy, short press "⏻" again to hands free status.

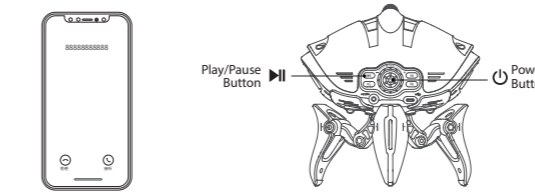


03

OPERATION INSTRUCTIONS

4. TWS Stereo Playing

 
1. Turn on the two speakers and blue indicators will flash quickly.
2. Short press "⏻" buttons from two speakers, the blue indicators will turn to alternately flashing white and blue colors.
3. After 1-2 seconds, the two speakers will pair automatically. Once tws connected, submaster speaker will keep on in blue and white colors and it will be right channel, master speaker will keep flashing in blue and white color, it will be left channel.
4. Open the setting and find "Digitech XC-5252" from mobile, click it and then your mobile will pair with the two speakers and both master and submaster speakers will keep on in blue and white color.
5. Short press "⏻" button again to disconnect TWS.

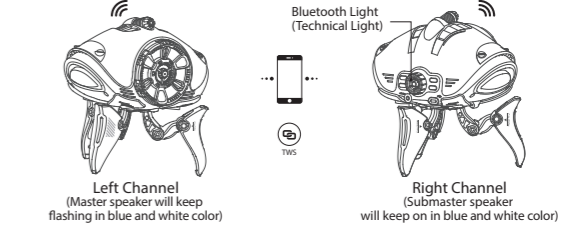

Notice: For TWS pairing, pls make sure two speakers are turned on and under bluetooth pairing status, then let the two speakers connect first. After that, connect the speakers with your mobile phone.

5. Aux In Feature

 The speaker also features 1x AUX audio in port, simply connect the speaker with your device with the 3.5mm jack audio cable and it will switch to AUX mode automatically. The green light will be on, and then you can play music via wired connection.

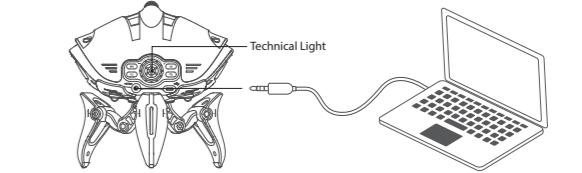


04

OPERATION INSTRUCTIONS

6. TYPE-C Charging Port

Notice:

 
- Do not use the power adapter which is without safety certification.
  - We suggest to use the adapters which is 5V/2A or above.
1. Pls charge the speaker when you hear the low battery prompt tone.
  2. The technical indicator at back side will be red during charging and it will be off once charging completed.

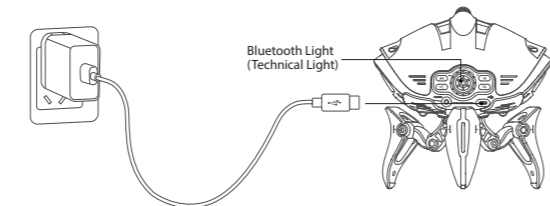

7. Energy Saving

If there is no bluetooth pairing above 10 minutes, or no playing for 30 minutes in aux in mode, the speaker will turn off automatically. You can turn on the speaker again by long press power button.

 
8. Digitech XC-5252 Leg Folding Way

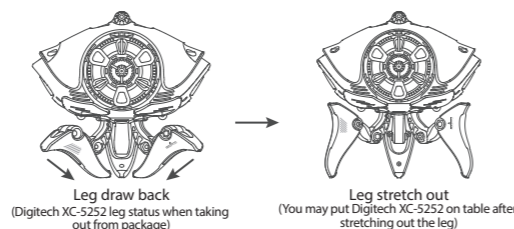

Leg draw back (Digitech XC-5252 leg status when taking out from package)  
 Leg stretch out (You may put Digitech XC-5252 on table after stretching out the leg)

05

 INTERFACE INSTRUCTIONS

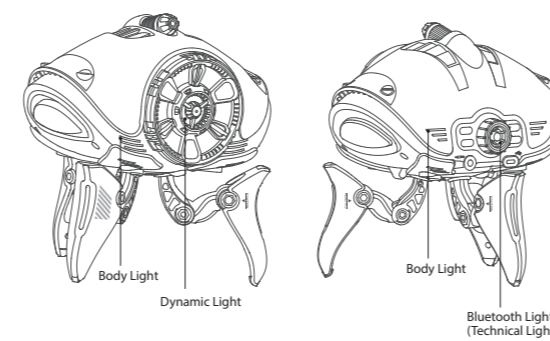

Power On Status	Technical Light	Default mode is bluetooth mode, technical light will flash quickly (bluetooth searching status).
	Dynamic Light	In default mode, dynamic light is off if there is no music playing. When you start to play music, dynamic light will flash along with music rhythm.
	Body Light	Body light keeps on.
Bluetooth Status	Technical Light	Technical light keeps blue when bluetooth is connected, it will flash quickly if it beyonds bluetooth distance. Technical light will flash slowly in blue color during music playing.
AUX Status	Technical Light	Inserted Aux in cable, technical light will keep green.
TWS Status	Technical Light	During TWS pairing, master and submaster speakers will be alternately flashing in white and blue colors quickly. Once TWS connected, master speaker will keep flashing in blue and white colors alternately and submaster will keep on in blue and white colors.
Charging Status	Technical Light	Red light will keep on during charging and be off once charging completed.
Low Battery Status	Technical Light	Red light keep flashing with a prompt tone.
Power Off		When remain battery is less than 10%, the speaker will shut down automatically with a prompt tone.

06

PRODUCT SPECIFICATION

Bluetooth Version:	5.0
Output Power:	17WRMS
Transmission Range:	Up to 10m
Frequency Response:	70Hz-18kHz
Playback Time:	3-10 Hours
Charge Time:	2-3 Hours
Battery:	Li-ion 7.4V,2000mAh
Power:	5VDC, 1.5A (Type C USB)
Power Consumption:	1300mA(Max)
Dimensions:	204.6 x 174.7 x 208mm

07

FREQUENTLY ASKED QUESTIONS

- Q: What kind of charger should we use for the speaker?**  
 A: All common USB chargers can be used, while we suggest the ones 5V/2A or above.
- Q: What if there is noise or discontinuous sound when playing?**  
 A: The speaker can be normally used within 10m under no obstruction environment. If it is over 10m or with obstruction, there might be noise or discontinuous sound.
- Q: Why will the speaker shut down automatically when it is working?**  
 A: When there is no bluetooth pairing for above 10 minutes or no playing for 30 minutes in aux in mode, the speaker will shut down automatically to reduce power consumption.
- Q: The speaker cannot connect the once-paired cellphone?**  
 A: First, remove the speaker's pairing name from the cellphone's Bluetooth list and then short press the power button twice quickly to restart pairing mode.
- Q: What is the priority play order for Bluetooth and Aux mode?**  
 A: Default mode is bluetooth mode, but when insert in aux in cable, aux in mode will have the priority.
- Q: The speaker cannot be started up in a normal situation?**  
 A: Please plug in the charger and try in a few minutes.

PRECAUTIONS FOR USING

1. Pls charge the speaker once a month if you don't use it for long time to avoid excessive battery consumption.
2. Pls use the speaker in ordinary temperature, pls don't use it in dusty, damp and dry environment.
3. Pls avoid to fall or knock the speaker by hard object which will cause appearance or component damage.
4. Pls don't disassemble or repair the speaker, it may cause damage to speaker.

This speaker supports mobile phones and tablet PCs etc. Here this User Manual is illustrated based on mobile phones.

08

Distributed by:  
 TechBrands by Electus Distribution Pty. Ltd.  
 320 Victoria Rd, Rydalmere  
 NSW 2116 Australia

Ph: 1300 738 555  
 Int'l: +61 2 8832 3200  
 Fax: 1300 738 500

www.techbrands.com

Made in China