




Instruction Manual

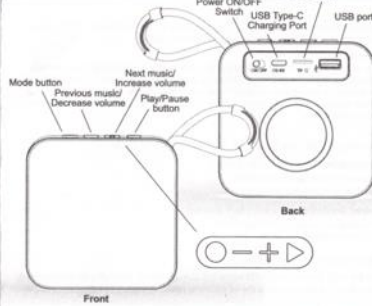

Package Contents

- Portable Wireless Speaker x 1
- USB Type-C Charging Cable x 1
- Instruction Manual x 1

Technical specification

Driver Diameter: 52 mm	Bluetooth Range: 10 Metres
Power Supply: Li-Ion Battery 3.7V 1200 mAh	Bluetooth Version: 5.3
	Charging Method: USB Charging
	USB Type-C Charging Cable Included
	USB Type-C Charging Cable Rating 5V/1A Max

Slide left the ON/OFF button to turn on the speaker.
Slide right the ON/OFF button to turn off the speaker.

Note: Always power off the speaker when not in use.

Pair Wireless speaker with your mobile device

1. Keep the distance between your wireless speaker and mobile phone (or other devices) within 10 Metres.
2. Power on the wireless speaker.
3. Activate the Bluetooth function on your phone within range and select "Awa ASP-0222" from the list shown.
4. You will hear a beep sound when pairing is successful.

Reconnect Wireless speaker to your mobile device

When powered on, the wireless speaker will automatically connect with the last successfully paired device.

Charging your Wireless speaker

⚠ For your safety, please always use appropriate 5V input charger/Adapter to charge the product. **DO NOT USE** Quick Charging USB Adapter to charge the product, as it might damage the product.

1. Use the USB Type-C cable provided with this wireless speaker.
2. Connect the USB Type-C plug to USB Type-C charging port on the speaker, then connect the USB plug to a USB port on a wall adapter to begin charging.
3. The LED indicator will turn red while charging and will turn off once fully charged.

NOTE:

- Use a standard USB adaptor for charging.
- Charge the speaker if it has not been used for more than 6 months.



Functions

Play/Pause button

Short press to play or pause music.

Mode button

Long press to switch between the available modes: BT / FM / microSD (TF) / USB. Short press to switch between the different lighting modes.

FM Mode

When switched to FM mode, short press the Play button to search the FM channels automatically. If you need to stop searching, just short press again. The searched FM channels will be saved automatically. Short press the volume button to select next or previous preset station. Long press volume button to adjust the volume to obtain the desired volume level.

Note:

Please plug-in USB Type-C cable as FM aerial during FM Mode.

Next music/Increase volume (+ Button)

Short press to change to next music
Long press to increase the volume

Previous music/Decrease volume (- Button)

Short press to change to previous music
Long press to decrease the volume

USB/microSD (TF) card reading

Insert the USB drive/microSD (TF) card into the speaker to play MP3 file automatically. Short press +/- button to select the music. Long press +/- button to adjust the volume.

Charging port

Connect the small end of the type-C charging cable (included) to the type-C port of the speaker. Connect the larger end of the cable to an AC adaptor(not included). The LED indicator will turn red while charging. Once fully charged, the red LED will turn off.

Answering phone calls

For incoming calls, click Play to answer the call, click again to hang up the call, long press to reject the phone call.
Double click Play in short time to redial the last number.

FAQ

- If the Wireless speaker cannot be paired with your device, please try the following:
Ensure that your speaker is in pairing mode or reconnection mode.
Ensure that Bluetooth search function of your mobile device is activated.

Safety instructions

Do not disassemble, throw away or damage this product. Consult your local waste collection agency for proper disposal or recycling methods.

- No user-serviceable parts inside. Do not dismantle or modify the speaker.
- Use a soft cloth to clean; do not use harsh or abrasive cleaning products.
- Use only as specified in these instructions. Incorrect usage may lead to injury or product damage.
- This product is not a toy! Children should be supervised to ensure that they do not play with the appliance.
- Do not immerse in liquids.
- For indoor use only. Keep free from dust and away from liquids, heat sources or direct sunlight.
- Do not store the speaker inside a car during hot weather.
- ⚠ Safety instructions for the lithium battery and charging the product
- The input voltage to the product is DC 5V 1A.
- In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product.
- Only charge the product at ambient temperatures between 10°C/ 50°F and 40°C/ 104°F.
- Do not expose to sunlight or throw into fire.
- Switch off the product after use.
- In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.

Notice for Use:

1. For the first use, please charge the battery first. Do not play music while charging.
2. Please use DC 5V cable for charging.
3. When music is played, if the sound is intermittent, it may be lack of power, please charge it firstly.
4. Active the Bluetooth feature on the phone, laptops or tablets, and set the device to search for wireless device.