



**12V Portable Lunch Stove
with Lid
YS2820
User Manual**

IMPORTANT SAFEGUARDS

- Do not use with an extension cord or outlet splitter. Plug roaster directly into a vehicle 12-volt outlet.
 - Do not touch hot surfaces. Use handle.
 - To protect against electrical hazards, do not immerse cord, plug, or unit in water or other liquid.
 - Close supervision is necessary when used by or near children.
 - Unplug unit when not in use.
 - Do not operate if cord is damaged. Inspect cord regularly.
 - Do not use unit for applications other than its intended use.
 - Never wrap cord around unit as this may damage cord.
 - Never use AC current to power this unit.
-

SAFETY TIPS

- Use caution when moving the roaster since hot food can leak even with the lid closed.
 - Use this appliance with your engine on to avoid draining your battery.
 - Do not use roaster while vehicle is moving to avoid spills.
 - Unplug unit when finished cooking.
 - Never touch cooking surface when unit is on or after unit has been on.
 - Unit is protected with an internal thermostat and fuse.
-

BEFORE USING

- Before first time operation, wash inside unit and lid with warm water and a mild soap to clean.
 - Do not submerge unit in water.
-

OPERATION

- Always place roaster on smooth level surface.
 - When cooking make sure food is making contact with bottom surface to ensure even heating.
 - Do not place pre-made frozen food in plastic or paper trays into roaster or use plastic leftover containers. Transfer food to a heat resistant container.
 - Food can be wrapped in aluminum foil to keep roaster clean.
This roaster will also accommodate standard size glass baking dishes.
 - To heat canned food puncture a small hole in top to allow steam to escape.
 - When removing roaster lid after cooking open the lid away from you to allow hot steam to escape.
 - During cooking the glass lid will become hot, use handle to lift.
 - Cooking surface of the unit will reach 225°-250° F; be careful not to touch hot surface.
-

SAMPLE COOKING TIMES

- Hot Dogs approx. 5-10 minutes
- Rice approx. 30 minutes
- Soups approx. 20 minutes
- Baby Food approx. 5 minutes (place water in roaster to heat, then set open jars in water). Always check temperature.

CLEANING ROASTER

- Disconnect unit before cleaning.
 - Allow unit to cool before cleaning.
 - Wash inside unit with warm water and a mild soap.
 - Do not submerge unit in water.
 - Do not clean with scouring pads to avoid scratching surface.
-

TROUBLESHOOTING

- If unit does not operate, check that the power supply is working properly.
- Check that all cords are connected properly.

Distributed by:
Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere
NSW 2116 Australia

www.electusdistribution.com.au

Made in China