


Heat Powered Fireplace Fan User Manual YX-2400

Operation:


1. Place the fan on a smooth surface of your fireplace or stove.



2. Position the fan on the left or right side of your fireplace or stove so it can distribute the air correctly.

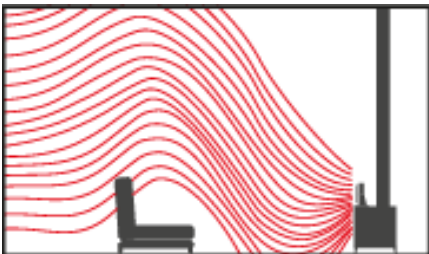

Fireplace Fan

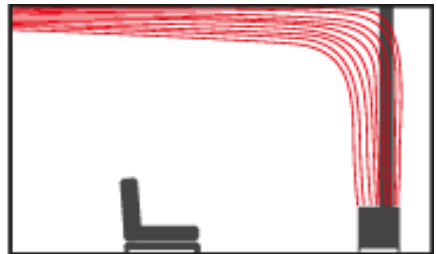

No Fan

Safety:

1. Do not touch the fan blades while in use.
2. Do not touch any area of the fan while heated as it may be too hot to touch.
3. Remove the fan from the fireplace or stove if the temperature exceeds 345°C.
4. Never place the fan on an unprotected surface as it may cause damage

Specifications:

Working Temperature: 60°-345°C

Technology: Peltier Effect

Material: Anodised Aluminium, stainless

Dimensions: 210(H) x 160(W) x 110(D)mm

Distributed by:
Electus Distribution Pty. Ltd.
320 Victoria Rd, Rydalmere
NSW 2116 Australia
Ph: 1300 738 555
Int'l: +61 2 8832 3200
Fax: 1300 738 500
www.techbrands.com