



# XRS™ Connect

COMPACT HIDEAWAY 80 CHANNEL UHF CB RADIO



XRS-335C



XRS-375C



INSTRUCTION MANUAL

# CONTENTS

<b>PREFACE</b> .....	<b>6</b>
COPYRIGHT NOTICE .....	6
IMPORTANT INFORMATION CONCERNING UHF CB RADIO .....	6
EMERGENCY CHANNELS.....	7
TELEMETRY CHANNELS.....	7
IMPORTANT ADVICE.....	8
<b>INTRODUCTION</b> .....	<b>8</b>
<b>FEATURES</b> .....	<b>9</b>
<b>XRS CONNECT APP</b> .....	<b>11</b>
XRS Connect.....	11
XRS Location Services .....	11
PAIRING .....	12
<b>GETTING STARTED</b> .....	<b>13</b>
FRONT PANEL .....	13
REAR PANEL.....	13
CONTROLLER MICROPHONE .....	14
DISPLAY .....	15
<b>GENERAL</b> .....	<b>16</b>
POWER.....	16
AUTO POWER-DOWN .....	16
SELECTING CHANNELS.....	17
SQUELCH .....	17
ADJUSTING THE SQUELCH LEVEL .....	17
SIGNAL METER.....	17
BRIGHTNESS.....	17
TRANSMITTING .....	18
TIME-OUT TIMER.....	19
BUSY LOCKOUT .....	19

VOICE SCRAMBLER .....	19
BEEP TONE VOLUME .....	20
DYNAMIC VOLUME CONTROL (DVC) .....	20
SELECTING THE ACTIVE SPEAKER .....	21
MICROPHONE GAIN .....	21
ROGER BEEP .....	22
REPEATER AND DUPLEX MODE .....	22
PRIORITY CHANNEL .....	23
<b>SCANNING .....</b>	<b>24</b>
SCAN GROUPS .....	24
PROGRAMMING THE SCAN MEMORIES .....	25
AUTO SKIP .....	26
DUAL WATCH .....	26
TRIPLE WATCH .....	27
OPEN SCAN .....	27
PRIORITY SCAN .....	29
NETWORK SCAN (NET-SCAN) .....	30
<b>CTCSS AND DCS .....</b>	<b>32</b>
CHOOSING CTCSS OR DCS .....	32
CTCSS TONE SET COMPATIBILITY .....	32
ENABLING CTCSS/DCS ON A CHANNEL (SILENT MODE) .....	33
BUSY LOCKOUT .....	34
<b>SELECTIVE CALLING .....</b>	<b>34</b>
SELCALL IDENTIFICATION NUMBER .....	35
SELCALL NAMING .....	35
THE QUIET MODE .....	35
SENDING A SELCALL .....	36
RECEIVING A SELCALL .....	36
QUIET MODE .....	36

GROUP CALLING .....	38
PROGRAMMING AND SENDING GROUP CALLS .....	39
CALL ACKNOWLEDGE IN GROUP MODE .....	39
STORING GROUP CALL IDENTIS .....	39
RECEIVING GROUP CALLS .....	39
<b>MENU .....</b>	<b>40</b>
MENU NAVIGATION .....	40
CONTEXT MENU .....	40
CONTEXT MENU EXAMPLES .....	41
TEXT ENTRY .....	41
MENU TABLE .....	42
FUNCTIONS.....	45
PROGRAMMABLE BUTTONS .....	46
RADIO SETTINGS .....	48
AUDIO EQUALISER .....	50
SCAN SETTINGS.....	51
USER INTERFACE .....	51
<b>BLUETOOTH.....</b>	<b>52</b>
BLUETOOTH.....	52
SHARED AUDIO .....	53
<b>SELCALL.....</b>	<b>54</b>
SELCALL .....	54
MAKING A SELCALL .....	54
RESENDING THE LAST SELCALL NUMBER.....	55
SAVING THE LAST SELCALL NUMBER.....	55
EDITING YOUR RADIO'S OWN SELCALL NUMBER.....	55
ADDING OR EDITING A SELCALL CONTACT .....	56

<b>XRS FEATURES</b> .....	<b>57</b>
LOCATION SERVICES .....	57
VOICE PLAYBACK .....	61
ACTIVE MUTE .....	62
CREWTALK .....	63
<b>RECEIVE-ONLY CHANNELS (ZONES)</b> .....	<b>65</b>
SELECT A ZONE .....	65
EDIT A ZONE NAME .....	65
ADD CHANNELS TO A NEW ZONE .....	66
EDIT EXISTING CHANNELS IN A ZONE .....	68
<b>FREQUENCY AND SUBTONE TABLES</b> .....	<b>69</b>
<b>INSTALLATION</b> .....	<b>72</b>
GENERAL .....	72
MOUNTING THE CRADLE.....	72
FITTING THE CONTROLLER MICROPHONE.....	73
DC POWER CONNECTION.....	73
RADIO REMAINS ON WHEN THE IGNITION SWITCH IS OFF .....	73
RADIO TURNS ON AND OFF WITH THE IGNITION SWITCH.....	74
HIGH VOLTAGE DETECTION .....	74
XRS-335C MOUNTING THE RADIO .....	75
XRS-375C MOUNTING THE RADIO .....	76
ANTENNA CONNECTION .....	77
NOISE SUPPRESSION .....	77
WIRING.....	78
<b>SPECIFICATIONS</b> .....	<b>79</b>
ELECTRICAL .....	79
MECHANICAL SPECIFICATIONS AND CONNECTIONS .....	80
BLUETOOTH.....	80
<b>WARRANTY</b> .....	<b>81</b>

### **COPYRIGHT NOTICE**

---

GME Pty Ltd reserves all rights to this document and the information contained herein. Reproduction, use or disclosure to third parties without express permission is strictly prohibited.

© 2026 GME Pty Ltd, Sydney, Australia

### **IMPORTANT INFORMATION CONCERNING UHF CB RADIO**

---

The use of the Citizen Band radio service is licensed in Australia by the ACMA Radiocommunications (Citizens Band Radio Stations) Class Licence and in New Zealand by the Ministry of Economic Development New Zealand (MED). A General User Radio Licence for Citizens Band radio and operation is subject to conditions contained in those licences. The class licence for users and equipment operating in the CB/PRS 477 MHz band has been amended. This radio meets the new 80 channel standard.

In simple terms the same amount of spectrum is available; however, radio transceivers can now operate in a narrower bandwidth and hence use less spectrum per channel. These radios are generally referred to as narrowband or 12.5 kHz radios. By using 12.5 kHz channel spacing instead of 25 kHz, the 40 channels originally allocated can now be expanded to 80 channels thereby doubling the channel capacity and relieving congestion in the UHF CB/PRS band.

Older 40 channel wideband radios will continue to operate on the original 40 channels, however they will not be able to converse on the newer channels 41 – 80.

The newer narrowband radios will be able to converse with all older 40 channel wideband radios on all channels 1 – 40 as well as the newer channels allocated from 41 – 80.

The mixing of narrowband and wideband radios in the same spectrum may possibly cause operating issues of interference and varying levels of received volume. For example, when a new narrowband radio receives a transmission from an older wideband radio the speech may sound loud and distorted. Alternatively, when an older wideband radio receives a signal from a new narrowband radio, the speech may sound quiet. In each case, simply adjust your radio volume for best performance.

Depending on how close your receiving radio is to another transmitting radio, there might be interference from the transmitting radio if it is using a channel adjacent to the channel you are listening to. Simply switch up or down a few channels from the currently selected channel.

The above situations are not a fault of the radio but a symptom of operating wideband and narrowband radios in the same bandwidth. These minor issues should decrease over time as the population of wideband radios ages and decreases.

Further information and updates are available from the Australian Communications and Media Authority (ACMA) at [www.acma.gov.au](http://www.acma.gov.au) and the Ministry of Economic Development (MED), Radio Spectrum Management at [www.rsm.govt.nz](http://www.rsm.govt.nz).

## **EMERGENCY CHANNELS**

---

The ACMA has allocated channels 5/35 for emergency use only.

Channel 5 is the primary Simplex Emergency Channel. Where a channel 5 repeater is available, you should select Duplex on channel 5.

Channel 35 is the input channel for the channel 5 repeater. Therefore channel 35 should also not be used for anything other than emergency transmissions.

## **TELEMETRY CHANNELS**

---

ACMA regulations have allocated channels 22 and 23 for telemetry-only applications and have prohibited the transmission of speech on these channels. Consequently the radio has a transmit inhibit applied to channels 22 and 23.

In the event that additional telemetry/telecommand channels are approved by the ACMA, these channels shall be added to those currently listed where voice transmission is inhibited. Currently, transmissions on channels 61, 62 and 63 are also inhibited and these channels are reserved for future allocation.

## IMPORTANT ADVICE

---

- Read all instructions carefully and completely before operating your radio and retain this manual for future reference.
- **Do not** place your radio in front of a vehicle airbag.
- **Do not** use your radio with a damaged antenna.
- **Do not** attempt to modify your radio in any way.
- **Always** switch off your radio where notices restrict the use of two-way radio or mobile telephones.
- **Avoid** storing or using your radio where temperatures are below -20°C or above +60°C.

## INTRODUCTION

XRS™ Connect is an Australian Made radio platform designed to be smart, adaptable, and rugged.

Building on the strong heritage of our first generation of XRS™ Connect radios, the all-new XRS™ range once again raises the benchmark for UHF CB Radios, with numerous advancements in technology ensuring GME remains at the cutting-edge of two-way radio communication.

The second generation of XRS™ radios boast a suite of innovative new features including a powerful 3-watt speaker, IP67-rated microphone, high-contrast Colour TFT LCD screen, built-in GPS receiver, Bluetooth Audio connectivity, Noise Reduction technology, and multiple user-customisable buttons.

GME's relentless focus on research and development, combined with extensive consumer feedback and in-field testing, has resulted in a range of products that set a new standard for UHF CB Radios globally.

## FEATURES

This section lists the various features available on your XRS Connect radio.

- **Transmit (TX)**
  - **Individually Programmable Duplex Function:** User selectable for only those individual channels in your area that have repeaters, leaving the others free for use as extra simplex channels.
- **Receive (RX)**
  - **User Programmable Receive Channels:** 8 zones of 50 channels per zone for a total of 400 additional receive-only channels.
  - **Digital Signal-Strength Meter:** Provides a numeric signal strength indication in numbers from 0 to 9+.
- **Scanning and memory functions**
  - **Microprocessor Controlled Frequency Synthesiser:** Allows user programmable control of scanning, channel memories and selected feature options.
  - **Programmable Scan Function:** Scans the selected UHF CB channels with Open, Priority and Network scan functions available.
  - **Priority Channel:** Two separate Priority Channels allow any channels of your choice to be instantly recalled at the press of one of the Priority keys.
  - **Dual Watch:** Scans two channels, working and Priority.
  - **Triple Watch:** Scans three channels, working and both Priority.
- **Signal processing**
  - **Digital Signal Processing (DSP):** Measures, filters and compresses standard analogue audio signals and converts them into digital format. Allows advanced RF and audio processing techniques to be applied to maximise the radio's performance.
  - **Advanced Signal Management (ASM):** Identifies interference caused by strong local signals on adjacent channels and prevents these from opening your Squelch. ASM also minimises distortion on reception by fine tuning the receiver frequency to match that of the incoming signal.

- **Dynamic Volume Control (DVC):** Automatically compensates for variations in received audio level to provide a constant audio output level to the speaker.
- **Advanced Noise Reduction:** Reduces background noise and hiss in transmit and receive audio to improve audio quality and make speech clearer.
- **Audio Graphic Equaliser:** Four band graphic equalizer to customise the received audio.
- **Privacy functions**
  - **Voice Inversion Scrambler:** When activated, scrambles your voice so that communications are only intelligible to others using the same scrambler technology.
  - **In-built CTCSS and DCS:** User selectable Continuous Tone Coded Squelch System and Digital Coded Squelch system provides silent operation on individual channels.
  - **In-Built SelCall with Quiet Mode:** Provides selective calling of individuals or groups with fully user-adjustable 5-tone transmitted SelCall Ident. Also allows alphanumeric naming of up to 20 Idents for easier caller identification.
- **Physical properties**
  - **Over Voltage Protection:** Special over voltage detection circuitry protects the radio and warns of excessive voltage conditions on the display.
  - **Rugged Construction:** With die-cast chassis.
  - **Water & Dust Proof Microphone (IP67):** Provides protection against dust and temporary immersion in water.
- **Location Awareness and Connectivity**
  - **In-built GPS Receiver:** Location awareness and location sharing with XRS Location Services.
  - **Bluetooth Audio:** Connect Bluetooth audio accessories.
  - **Bluetooth App Connectivity:** Use the XRS Connect app to program and update your radio and use XRS Location Services.

## • User controls and interface

- **Full Function Controller Microphone:** Includes front mounted speaker to channel clear audio towards the user.
- **High Contrast Colour TFT Display:** Fully detailed colour display is readable under all lighting conditions.
- **Adaptive Backlight Brightness:** When activated, Auto dim function will adjust display backlight.
- **Loud, Clear Audio:** 3 Watt front facing microphone speaker.

For a more detailed description of all key functions, refer the 'General Operation' section.

## XRS CONNECT APP

This section provides details about the **XRS Connect** app.

### To download the app for iOS or Android:

1. Visit App Store or Google Play.
2. Search for **XRS Connect**.

## XRS CONNECT

---

The **XRS Connect** app is the easy way to customise, update and maintain your XRS Connect radio using Bluetooth.

- When your device is paired to the radio, select the  button to read your radio's settings into the app.
- After you have configured your preferences in the app, select  **Write to Radio** to update your radio with your new settings.

For information on pairing your smart device with your XRS Connect radio, see the 'Pairing' section that follows.

## XRS LOCATION SERVICES

---

XRS Location Services is a feature included in XRS Connect radios that allows users to share their location by transmitting it to other XRS Connect radios at the end of a normal voice transmission. The XRS Connect app is connected to the XRS Connect radio via Bluetooth® and allows the user to display location of other XRS

Connect radios on a map. The app cannot share location without being connected to an XRS Connect radio. The XRS Connect radio gets the location from the built-in GPS or the Bluetooth® connected mobile device.

XRS Location Services transmits your geographic location as a supplementary service to voice communication on CB channels. This feature complies with the Radiocommunications (Citizen Band Radio Stations) Class Licence 2015.

GME values your privacy, and does not collect any of your location data. The location data is only stored within the XRS Connect app and is transmitted by your XRS Connect radio.

## PAIRING

---

### To pair your smart device with your XRS Connect radio:

1. Open the **Radios** section of the XRS Connect app.
2. A list of available radios will be displayed.  
The XRS Connect app is continually refreshing to search for new radios.
3. Locate your radio in the list and tap the name of the radio to pair.
4. You will be asked to confirm a security PIN on both the mobile device and radio. See the Bluetooth section of this manual for more information.

When successfully connected the  icon on your radio should change to  to show that the Bluetooth pairing is successful.


**NOTE:** The Bluetooth connection between your smart device and your XRS Connect radio must be made through the XRS Connect app. You will not be able to pair your smart device to your XRS Connect radio using the normal Bluetooth settings option on your smart device.

The XRS Connect app is compatible with iOS 14 and above and Android 8.0 and above.


# GETTING STARTED

## FRONT PANEL

### XRS-335C




### XRS-375C

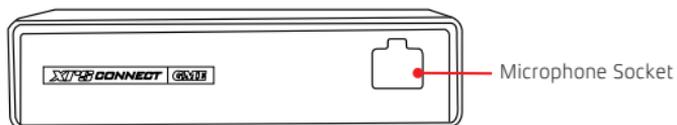


## REAR PANEL

### XRS-335C

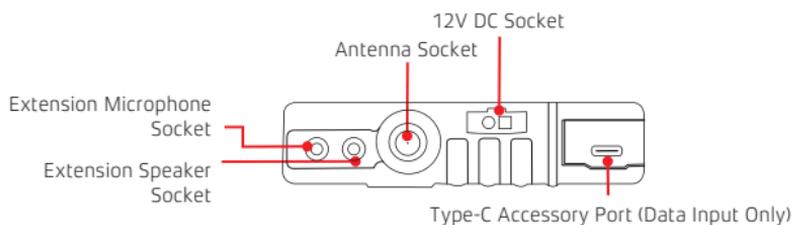


### XRS-375C

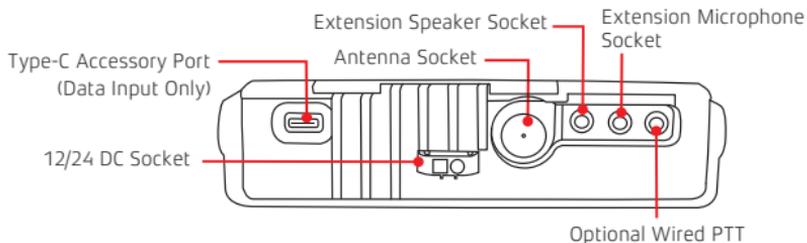

## CONTROLLER MICROPHONE


---

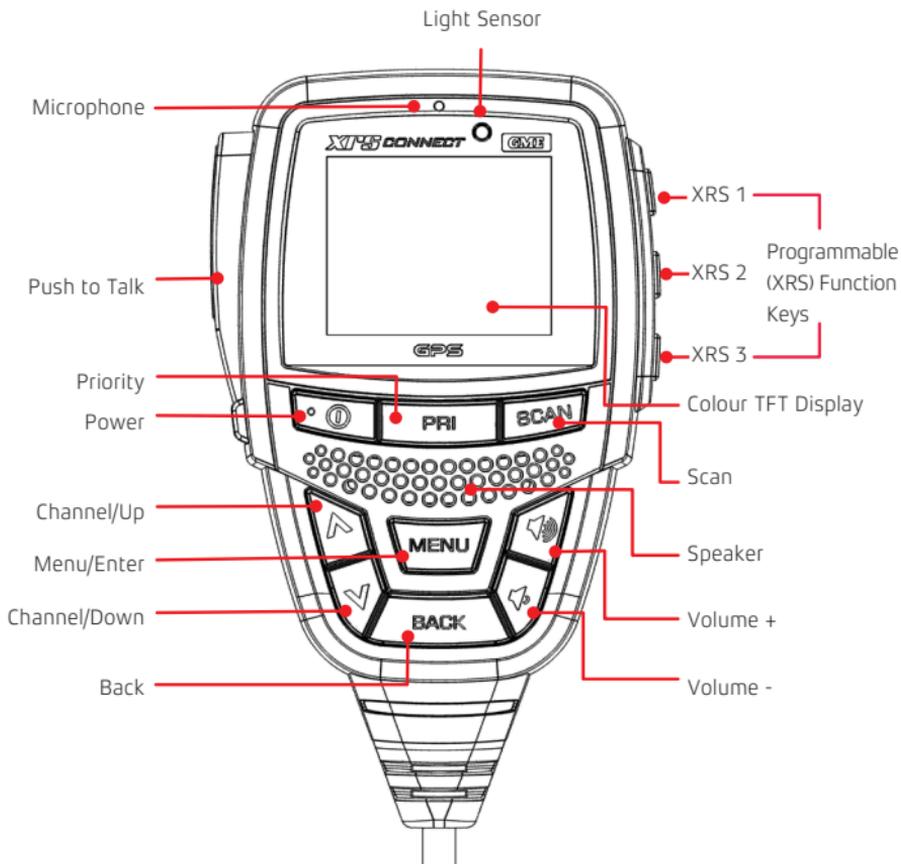

## DISPLAY

### Display Symbols

The diagram below explains the icons that display on the LCD screen.

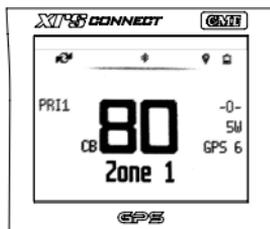

ICON	DESCRIPTION	ICON	DESCRIPTION
	Channel is in Scan Memory (animates if actively scanning)		Bluetooth is Enabled
	Scrambler Enabled		Bluetooth is Connected
	Roger Beep Enabled		Channel is in Silent Memory Using DCS
	Selcall Sending		Channel is in Silent Memory Using CTCSS
	Selcall Received		Channel is in Quiet Memory
	Location Services Location and Name/Status Ready to Send		Channel is in Quiet Memory and Quiet Mode is Active
	Location Services Name/Status Ready to Send		Channel Busy
	Channel is Set as Duplex		Transmitting
	Bluetooth Headset Connected (Flashes if Connection is Poor)		

### POWER

---

Press and hold the **I** key to turn the radio on. Press and hold the **I** key to turn the radio off.

### AUTO POWER-DOWN

---

The Auto Power-Down feature provides the ability for the radio to turn itself off after a user selectable time (based on your preference). By default, this feature is turned off.

#### To setup Auto Power-Down:

1. Press **MENU** and select **RADIO SETTINGS**.
2. Next, select **AUTO POWER**.
3. Select **TIMEOUT**, then press **MENU** to select an appropriate setting. The **NONE** option will disable this feature, while a setting of 30-180 minutes allows the radio to turn off after the selected time.

By default, while the Auto Power-Down feature is enabled, the radio will turn off after the preselected time even if the radio is receiving transmissions. If you would like to keep the radio on while it is receiving transmissions, this setting needs to be turned on. You can turn on this feature as follows:

1. Press **MENU** and select **RADIO SETTINGS**. Next select **AUTO POWER**.
2. Select **RECV RESETS** and press **MENU**. Select **ON** to turn the feature on.

By default, the radio will not automatically power down while it is connected to a device via Bluetooth. If you would like to power down the radio while you have a Bluetooth connection, turn this setting off.

1. Press **MENU** and select **RADIO SETTINGS**. Next, select **AUTO POWER**.
2. Select **B'THOOTH HALTS** and press **MENU** to select **OFF** to turn the feature off.

## SELECTING CHANNELS

---

To select a channel, press the **▲** or **▼** key. Press **▲** to select a higher channel or **▼** to select a lower channel. The selected channel is displayed on the display. Press and hold either key to advance quickly through the channels.

## SQUELCH

---

The Squelch is used to eliminate any annoying background noise when there are no signals present. The Squelch can be opened or closed using the Squelch key which is by default assigned to the press and hold function of the **XRS1** key.

When the Squelch is open the receiver's background noise can be heard and the  icon is displayed. When the Squelch is closed the receiver remains quiet while there are no signals present but any incoming signals will override the Squelch and be heard in the speaker.

## ADJUSTING THE SQUELCH LEVEL

---

The Squelch sensitivity level has been factory set to provide optimum performance under most operating conditions. If required, the sensitivity level can be adjusted to suit changing conditions.

### To adjust squelch sensitivity:

1. Press the **MENU** key.
2. Navigate to **RADIO SETTINGS > SQUELCH LEVEL**.  
You can use the **▲** or **▼** key to adjust the squelch level.

The default squelch sensitivity level is 2.

## SIGNAL METER

---

The signal meter indicates the relative strength of the incoming signal in numerical format. Signal strengths are displayed on the right of the Channel Display in values from 0 to 9. Signals above strength 9 are displayed as 9+.

## BRIGHTNESS

---

The Colour LCD display is backlit for easier viewing under a range of lighting conditions. Both the Maximum and Minimum brightness level can be smoothly adjusted in steps from 0 to 10.

The backlight remains on whenever the radio is switched on.

#### To adjust maximum brightness level:

1. Press the **MENU** key.
2. Navigate to **USER INTERFACE > BRIGHTNESS MAX.**

You can use the  or  key to adjust the brightness.

#### To adjust minimum brightness level:

1. Press the **MENU** key.
2. Navigate to **USER INTERFACE > BRIGHTNESS MIN.**

You can use the  or  key to adjust the brightness.

A Dim function can also be assigned to one of the programmable **XRS** keys to quickly switch the brightness level to minimum for low light viewing. This saves having to manually readjust the brightness level when moving into low light environments.

To assign the Dim function to a key, press the **MENU** key and navigate to **PROG BUTTONS** and its options to configure this feature. By default, the Dim function is assigned to the press and hold function of the **XRS2** key.

#### To enable/disable active dim:

1. Press the **MENU** key.
2. Navigate to **USER INTERFACE > ACTIVE DIM.**

You can use the **MENU** key to turn this function **ON** or **OFF**.

## TRANSMITTING

---

Prior to transmitting, always check the channel is clear. This can be done by listening to the channel or by visually checking that the  icon is not visible or the signal meter is not indicating a signal.

#### To transmit:

1. Press the **PTT** on the microphone. The  icon will appear.
2. Hold the microphone about 3-5 cm from your face and speak at a normal voice level. Since the microphone is quite sensitive, it is not necessary to raise your voice or shout.

3. Release the **PTT** when you have finished talking, the  icon.

Always listen to ensure the channel is free before transmitting.

## TIME-OUT TIMER

---

The radio has a built-in time-out timer that automatically limits transmissions to a maximum of 3 minutes of continuous operation. This feature is required by the ACMA to prevent accidental blocking of the frequency should your PTT become jammed or be otherwise pressed accidentally. When the time-out timer activates, the radio will give a low tone for a few seconds and the transmitter will be temporarily disabled. Release the **PTT** to restore normal operation.

## BUSY LOCKOUT

---

When enabled, the **Busy Lockout** function detects when someone is transmitting on the channel and prevents your radio from transmitting over them. If you press the **PTT** when the channel is busy the radio will emit a warning beep and the icon  won't be displayed. If this happens, look for the  icon on the display as an indicator that the channel is already in use. If the channel is busy, simply wait until the channel is clear and press the **PTT** again.

When **Busy Lockout** is disabled, you should check that the channel is clear before pressing the PTT to avoid transmitting over others who may be already transmitting on the channel.

### To enable/disable busy lockout:

1. Press the **MENU** key.
2. Navigate to **RADIO SETTINGS > BUSY LOCK**.  
You can use the **MENU** key to turn this function **ON** or **OFF**.

## VOICE SCRAMBLER

---

Your radio incorporates a simple voice scrambler using band inversion.

The scrambler is compatible with the majority of scramblers used by other manufacturers, allowing you to enjoy scrambled communications with owners of non-GME radios. Once the scrambler has been activated your transmission and reception will only be intelligible to others using the same scrambler technology.

When the Voice Scrambler is enabled,  the icon is displayed.

### To enable/disable voice scrambler:

1. Press the **MENU** key.
2. Navigate to **RADIO SETTINGS > SCRAMBLER**.  
You can use the **MENU** key to turn this function **ON** or **OFF**.

To avoid interference with other services or users, the scrambler cannot be enabled on channels 5, 11, 22, 23, 31-38, 61, 62, 63, 71-78 or on any channel that has been set to Duplex mode (1-8).

### BEEP TONE VOLUME

---

The Beep tone provides audible feedback whenever the keys are pressed. The Beep tone volume can be adjusted in values from 0 – 10.

To switch the beep off, select 0.

#### To adjust volume of beep tone:

1. Press the **MENU** key.
2. Navigate to **USER INTERFACE > BEEP VOLUME**.  
You can use the **▲** or **▼** key to increase or decrease the beep tone.

### DYNAMIC VOLUME CONTROL (DVC)

---

The modulation level of signals heard on the UHF CB band has always varied considerably resulting in noticeable differences in received audio volume between stations.

Generally, users have compensated for this by adjusting the Volume control for each incoming signal.

With the introduction of 80 channel narrow band transmissions that use lower levels of modulation, the differences in received audio volume is likely to increase further.

Your XRS Connect radio is able to automatically compensate for these variations by utilising a Dynamic Volume Control. When activated through the menu, this feature automatically compensates for variations in received audio level resulting in a constant audio output level to the speaker.

### To activate/deactivate Dynamic Volume Control:

1. Press the **MENU** key.
2. Navigate to **RADIO SETTINGS > DYNAMIC VOL.**  
You can use the **MENU** key to turn this function **ON** or **OFF**.

### SELECTING THE ACTIVE SPEAKER

---

The XRS-335C has a speaker mounted inside the microphone and support for connecting an external speaker.

The XRS-375C radio has two speakers - one mounted inside the radio and the other mounted inside the microphone.

By default, sound is reproduced by both speakers; however, if you prefer, one of these speakers can be switched off, leaving either the radio's speaker or the accessory speaker to reproduce sound.

#### To select speakers:

1. Press the **MENU** key.
2. Navigate to **RADIO SETTINGS > SPEAKER.**  
You can use the **▲** or **▼** key to select an option.

### MICROPHONE GAIN

---

The microphone gain controls the sensitivity of the microphone to your voice input level. If you are quietly spoken or are operating in a quiet environment you can increase the microphone gain to make your voice sound clearer. If your voice is quite loud or you are working in a noisy environment and wish to minimise the amount of background noise that is picked up, you should reduce the microphone gain.

The XRS Connect radio supports separate microphone gains for the radio's internal microphone and the microphone in a connected Bluetooth® accessory.

#### To adjust radio microphone gain:

1. Press the **MENU** key.
2. Navigate to **RADIO SETTINGS > MIC GAIN.**  
You can use the **▲** or **▼** key to increase or decrease the microphone gain.

## To adjust Bluetooth® microphone gain:

1. Press the **MENU** key.
2. Navigate to **RADIO SETTINGS > BT MIC GAIN**.

You can use the **▲** or **▼** key to increase or decrease the microphone gain.

**NOTE:** The Microphone Gain provides a 'fine' adjustment to the microphone sensitivity. A wider adjustment range is available through the XRS Connect App.

## ROGER BEEP

---

The Roger Beep is a tone that is automatically transmitted whenever the PTT is released. This tone serves to alert the receiving party that your transmission has ended.

1. Press the **MENU** key.
2. Navigate to **RADIO SETTINGS > ROGER BEEP**.  
You can use the **MENU** key to turn this function **ON** or **OFF**.

When the Roger Beep tone is enabled, the ROG icon is displayed.

## REPEATER AND DUPLEX MODE

---

Duplex operation allows the radio to transmit on a different frequency to that which it receives. This allows operation through repeater stations.

A repeater station consists of a linked transmitter/receiver combination installed in a prominent location. The repeater is designed to receive signals on a designated channel and retransmit them on another channel. Repeaters are usually mounted on hills or tall buildings. The increased elevation greatly improves both the receiving and transmitting range of the repeater allowing it to receive and retransmit signals to radios that would otherwise be out of range of each other.

Normally, UHF CB radios transmit and receive on the same frequency – known as Simplex operation. However, to communicate through repeaters, your radio must be able to transmit and receive on different channels – otherwise known as Duplex operation. Your radio is fitted with a Duplex function to allow you to operate through repeaters. By default, the press function of the **XRS1** key will toggle Duplex.

The Duplex function can only be selected on channels 1 – 8 and 41 – 48 as these are the channels that have been allocated for repeater use. When Duplex is selected, your radio receives on the selected channel (e.g. CH 1) but transmits 30 channels higher (CH 31). The repeater hears your signal on CH 31 and retransmits it on CH 1 for others to hear.

Your XRS Connect radio allows you to enable or disable Duplex mode on individual repeater channels. In this way any repeater channels that are not being used with repeaters in your area can be used in Simplex mode for normal direct radio-to-radio communications.

#### To enable duplex on a repeater channel:

1. Select the required repeater channel (1 – 8, 41 – 48).
2. Briefly press the duplex key. By default the duplex key is assigned to the press function of the **XRS1** key. The  icon will appear on the display accompanied by a high beep.

#### To remove duplex from a repeater channel:

1. Select the required repeater channel (1 - 8, 41 - 48). If duplex is currently selected, the  icon will be displayed.
2. Briefly press the duplex key. The  icon will disappear from the display accompanied by a low beep.

**NOTE:** Channels 1 – 8, 31 – 38, 41 – 48 and 71 – 78 should only be used in Simplex mode if there are no repeaters in or near your location that operate on the selected channel. In particular, avoid operating in Simplex mode on any of the repeater input channels 31 – 38 and 71 – 78 unless you are absolutely sure that there are no repeaters in range using that channel. Inadvertently transmitting on an active repeater input frequency in simplex mode could cause interference to other users on that repeater who might not be audible to your radio.

## PRIORITY CHANNEL

---

The Priority Channel feature allows you to store two channels as Priority Channels that can be instantly recalled at the press of a key. These can be used to provide instant access to your working channel, your local repeater channel or any other favourite channel. They are also used in conjunction with the Priority Scan mode, Dual Watch and Triple Watch modes.

Priority Channels are programmed using the Priority keys. Priority Channel 1 is accessed using the **PRI** key and Priority Channel 2 can be assigned to one of the programmable **XRS** keys.

### To store a priority channel:

1. Select the required channel.
2. Press and hold the **PRI** key for Priority Channel 1 or the **XRS** key programmed to Priority Channel 2.

The channel number will flash for a few seconds then a high beep will be heard as the channel is stored. The 'PRI1' or 'PRI2' icon will now be visible whenever that channel is selected. Priority channels will also be displayed as bright green on the microphone display.

**NOTE:** The Priority channel can also be set through the Menu.

### To recall a priority channel:

Briefly press the **PRI** key for Priority Channel 1 or the assigned **XRS** key for Priority Channel 2. The radio will immediately switch to the Priority channel and the 'PRI1' or 'PRI2' icon will be displayed.

**NOTE:** If the radio was scanning when the Priority channel was recalled, the scan will be cancelled.

## SCANNING

Your radio incorporates a scan function allowing selected groups of channels to be scanned for signals. CB channels can be scanned at a rate of 50 channels per second.

When a signal is found, scanning will pause to allow the signal to be heard then resume scanning when the channel is clear again.

### SCAN GROUPS

---

Your radio supports three scan groups:

- **Open Scan:** Allows you to sequentially scan from 2 to 80 user-selectable CB channels.
- **Priority Scan:** Allows you to regularly monitor your priority channel while scanning a group of user-selectable CB channels.
- **Network Scan:** Allows a group of radio users to maintain communications even when the band is congested by monitoring a small group of user

selectable channels. If the operating channel becomes busy with users from outside your group, Net-Scan will automatically select a new free channel from the scan group and transparently switch all users in your group to the new channel.

### To select open scan/priority scan/network scan:

1. Press the **MENU** key.
2. Navigate to **SCAN SETTINGS > CB SCAN MEM**

You can use the **▲** or **▼** key to select the required scan option.

## PROGRAMMING THE SCAN MEMORIES

---

Each Scan Group has its own separate channel memory allowing you complete freedom to program your choice of channels into each group.

### To add/remove channels from the selected scan memory:

1. Select the required channel using the **▲** or **▼** key.
2. Check to see if the  icon is displayed on that channel.
  - If  is displayed, the selected channel is already in the scan memory. To remove it, press and hold **SCAN**. A low beep will be heard and  will disappear.
  - If  is not displayed, the selected channel is not in the scan memory. To add it, press and hold **SCAN**. A high beep will be heard and  will appear on that channel.

Repeat to add or remove other channels in the scan memory.

**NOTE:** When adding channels to Net-Scan, please consider the following:

- The transmitter on your radio is inhibited on channels 22, 23 and channels 61, 62, 63 as required by the ACMA. This makes these channels unsuitable for use as Net-Scan channels.
- You should not include any repeater channel unless you have confirmed that the channel is not allocated to repeaters in your area. Using an active repeater channel in Net-Scan may result in interference to repeater users on that channel.

## AUTO SKIP

---

While scanning, if an active channel in your Scan Group becomes a nuisance by constantly interrupting the scan, briefly press **▲** or **▼** while the radio is paused on that channel. The busy channel will be temporarily removed from the Scan Group to allow time for the channel to become clear again and scanning will continue from the next channel in the sequence. After 30 seconds the skipped channel will be reinstated in the scan sequence.

If the unwanted active channel continues to interrupt the scan even after the 30 second skip period has elapsed, hold **SCAN** while the radio is paused on that channel. The 'nuisance' channel will be completely removed from the Scan Group for the duration of that scan session. To restore the channel, simply stop and restart the scan session using the **SCAN** key (or switch the radio Off then On again).

**NOTE:** You can skip as many busy channels from the Scan Group as you wish, however if you attempt to skip the last remaining channel, all the previously skipped channels will be restored to the Scan Group.

The length of the skip period can be adjusted through the XRS Connect App.

## DUAL WATCH

---

The Dual Watch mode allows you to monitor two channels at the same time. While in dual watch mode, the unit will monitor both the working channel and the last selected priority channel.

By default, the dual watch function is assigned to press function of the **XR53** button.

### To start the dual watch mode:

1. Use the **▲** or **▼** keys to choose the desired working channel.
2. Press or hold (depends on how the key is configured for your radio) the assigned programmable Dual Watch key until the radio beeps.
3. 'DW' is displayed and the  icon will animate.

You can change your working channel by pressing the **▲** or **▼** keys.

To exit Dual Watch, press or hold your programmable button (depends on how the key is configured for your radio), or press the **SCAN** button.

## TRIPLE WATCH

---

The Triple Watch mode allows you to monitor three channels at the same time. While in triple watch mode, the unit will monitor the working channel and both the priority channels.

You will need to assign one of the programmable **XRS** buttons to Triple Watch to use this feature.

### To start the triple watch mode:

1. Use the ▲ or ▼ keys to choose the desired working channel.
2. Press or hold (depends on how the key is configured for your radio) the assigned programmable key until the radio beeps.
3. 'TW' is displayed and the  icon will animate.

You can change your working channel by pressing the ▲ or ▼ keys.

To exit Triple Watch, press or hold your programmable button (depends on how the key is configured for your radio), or press the **SCAN** button.

## OPEN SCAN

---

Open Scan allows a group of channels to be scanned in an ascending sequence. If a signal is found, the scan will pause on that channel. During this time you can press the **PTT** on the microphone and talk on the channel. Once the channel has been clear for 5 seconds the scan will resume.



### To select open scan:

1. Press the **MENU** key.
2. Navigate to **SCAN SETTINGS > CB SCAN MEM.**

You can use the ▲ or ▼ key to select the required scan option.

In the Open Scan mode, your default working channel is the channel your radio switches to when you press the **PTT** while scanning. To set your working channel simply select the required channel before you press **SCAN**. E.g. to make channel 24 your working channel, simply select channel 24 before pressing **SCAN**.

### To begin scanning:

Briefly press **SCAN**. A high beep will be heard, 'SCANNING' will be displayed and the  icon will animate. During this time the scan mode and the number of channels being scanned will be displayed along with the selected Zone.

If there are less than 2 channels programmed into the scan memory when you press **SCAN**, a low beep will be heard and the command will be ignored.

### Operating in the Open Scan Mode

If a busy channel is found, scanning will pause to allow the signal to be heard and will remain there for as long as the channel remains busy. Once the channel has been clear for 5 seconds, scanning will resume automatically.

If you don't wish to listen to a busy channel, briefly press **▲** or **▼** while the radio is paused on that channel. The busy channel will be temporarily removed from the Scan Group to allow time for the channel to become clear again and scanning will continue. The skipped channel will be reinstated in the scan sequence after 30 seconds (see Auto Skip).

If you press the **PTT** while the radio is scanning, the scan will pause and the radio will transmit on the working channel.

After the channel has remained clear for 5 seconds scanning will resume.


If your radio pauses on a busy channel and you wish to talk on that channel, wait for a break in the conversation then press the **PTT**. If the busy channel was not your working channel, it now becomes your working channel, replacing your previous working channel. Once your communication has finished and the channel has been clear for 5 seconds, scanning will resume.

If you need to use one of your Priority channels at any time, briefly press **PRI** for Priority Channel 1 or the **XRS** key assigned to Priority Channel 2. The scan will be cancelled and the radio will jump straight to the Priority channel.

## PRIORITY SCAN

---

Priority Scan allows you to scan a number of channels for activity while also monitoring the last selected Priority channel. The receiver will scan the other channels only while there is no signal on the priority channel. If a signal appears on the last selected Priority channel it will override any signals being received on any of the other channels. In addition, if you press the PTT at any time, the radio will transmit on last selected the Priority channel.



Example: Scanning channels 1 – 8 with priority channel 20 in Priority Scan

**NOTE:** By default the priority channel will be scanned after every 5th scan channel. This timing can be adjusted using the XRS Connect App.

To select Priority Scan, refer to the Menu/Scan Settings options.

### To begin scanning:

Briefly press **SCAN**. A high beep will be heard, 'SCANNING' will be displayed and the  icon will animate. During this time the scan mode and the number of channels being scanned will be displayed along with the selected Zone.

- If a signal appears on the Priority channel – at any time – the radio will switch directly to the Priority channel and will stay there for as long as the channel remains busy. During this time you can transmit and receive on the Priority channel.

Once the Priority channel has been clear for 5 seconds the radio will resume scanning the other channels.

- If a signal appears on any other channel, scanning will pause on that channel and will remain there while the channel is busy – as long as there are no signals on the Priority channel.

During this time, the receiver will continue to check the Priority channel every 2 seconds resulting in a series of small breaks in the reception. Once the signal has gone and there has been no activity for 5 seconds, the radio will resume scanning.

- If the radio is paused on a busy channel and you want to remain there, briefly press **SCAN**. The radio will exit scan and remain on the busy channel. At this point you will no longer be monitoring the Priority channel.

To resume the Priority Scan, press **SCAN** again.

- If you don't wish to listen to a busy channel, briefly press the **▲** or **▼** key while the radio is paused on that channel. The busy channel will be temporarily removed from the Scan Group to allow time for the channel to become clear again and scanning will continue. The skipped channel will be automatically reinstated in the scan sequence after 30 seconds (see 'Auto skip').
- To transmit on the Priority channel at any time, simply press the **PTT**. The radio will switch straight to the Priority channel.

When you have finished your conversation and there has been no further activity for 5 seconds, the radio will resume scanning the other channels.

If you need to use one of your Priority channels at any time, briefly press **PRI** for Priority Channel 1 or the **XRS** key assigned to Priority Channel 2. The scan will be cancelled and the radio will jump straight to the Priority channel.

## **NETWORK SCAN (NET-SCAN)**

---

Net-Scan allows a group of radio users to maintain communications even when the band is congested.

To achieve this, all members of the Net-Scan group must share a common CTCSS/DCS code and a common set of scan channels.

Once activated, Net-Scan's intelligent scanning software keeps track of clear channels within your Scan Group. When any member of the group first transmits, their radio automatically selects a clear channel to transmit on. Other radios scanning in the same Net-Scan group will detect the common CTCSS/DCS code and lock onto that channel allowing all members of the group to join the conversation.

If a signal from outside your Net-Scan group transmits on the selected channel without using your chosen CTCSS/DCS code, the group will automatically switch to a new clear channel at the next transmission. In this way the group can continue to communicate with minimal interference to or from other users.

## To select network scan and a suitable CTCSS/DCS code:

1. Press the **MENU** key.
2. Navigate to **SCAN SETTINGS > CB SCAN MEM.**

You can use the  or  key to select the required scan option.

3. Select **SCAN SETTINGS > NETSCAN SUBT.**

You can use the  or  key to select the desired subtype.

## Using Net-Scan

With Net-Scan mode enabled, briefly press **SCAN**. A high beep will be heard, 'SCANNING' will be displayed and the  icon will animate. During this time the scan mode and the number of channels being scanned will be displayed along with the selected Zone. When a member of the group initiates a transmission their radio will automatically select a clear Net-Scan channel to transmit on.

Other radios scanning in the same Net-Scan group will locate the transmission by identifying the groups CTCSS/DCS code, pause on that channel and open their Squelch, allowing the transmission to be heard across the entire group. When the transmission ends, all radios in the group will immediately resume scanning.

If a member of the group responds to the initial transmission, they will automatically re-use the same channel as long as the channel remains free of other signals. This allows the radios in the group to respond more quickly to further transmissions from others in the group.

If at any time a signal from outside your Net-Scan group transmits on the selected channel without using your chosen CTCSS/DCS code, the channel will be discarded and a new clear channel will be selected at the next transmission. The other radios in the group will then relocate to the new channel allowing the conversation to continue seamlessly without any input from the user.

## Ending the Scan

To stop scanning, briefly press **SCAN**. A low beep will be heard and the  icon will stop animating. As long as the radio was not on a busy channel, it will return to the last channel you selected, otherwise it will stay on the busy channel.

## CTCSS AND DCS

The standard Squelch system operates solely on signal strength which means that it will open to any signal that is strong enough. If the selected channel is busy with other stations the Squelch will be opening constantly making it difficult to determine which calls are meant for you.

CTCSS (Continuous Tone Coded Squelch System) and DCS (Digital Coded Squelch) are similar Squelch quieting systems that provide selective audio muting using sub-audible signalling. When CTCSS or DCS is enabled, only signals with a matching subtone will be heard in the speaker. This effectively creates a channel that is silent to all traffic except those you wish to hear.

### CHOOSING CTCSS OR DCS

---

The CTCSS system uses 1 of 50 low frequency tones to open and close the Squelch on the radio. The DCS system is similar to CTCSS but uses 1 of 104 digital codes to control the Squelch. There is no difference in performance or function between CTCSS or DCS so choosing which system to use will largely depend on the other radios you talk with. If others already use CTCSS or DCS, you should select the system that matches theirs. If the users you talk to don't currently use CTCSS or DCS then you can make your own choice. Both types are included in the radio to maintain compatibility with other radio systems.

### CTCSS TONE SET COMPATIBILITY

---

The GME CTCSS tone set comprises 50 tones made up of the standard CCIR-38 Tone Set plus an additional 12 tones added to the end. If communicating with other brands of radios that only use the CCIR-38 tone set, please select from one of the first 38 tones to ensure compatibility with these radios.

If communicating with other GME radios, you may choose from any of the 50 tones. However, to ensure compatibility, please refer to the tone set table listed in each radio's Instruction manual because the tones used in older GME models may be listed in a different order to those in your radio.

To select a CTCSS or DCS code, refer the Menu/Radio Settings options.

## **ENABLING CTCSS/DCS ON A CHANNEL (SILENT MODE)**

---

Enabling CTCSS/DCS on a channel will prevent the Squelch from opening on that channel unless the incoming signal matches your selected CTCSS/DCS tone. Other users on the same channel who are not using your CTCSS/DCS tone will still be received by your radio (the  icon will still appear on the display) but they will not be heard in the speaker.

Only when someone transmits on the channel using your CTCSS/DCS tone will the Squelch open to allow the signal to be heard. Channels where CTCSS/DCS have been enabled are said to be in 'Silent mode'.

**NOTE:** Silent mode can be enabled on any channel except emergency channels 5 and 35.

### **To enable silent mode on a channel:**

1. Press the **MENU** key.
2. Navigate to **FUNCTIONS > TOGGLE SILENT**.
3. Press the **MENU** key to select **ON**.

An **S** icon (CTCSS) or **S**  icon (DCS) will be displayed at the top of the display to indicate Silent mode is now enabled on that channel.

**NOTE:** You cannot enable Silent mode unless a CTCSS or DCS tone has been selected in the 'RADIO SETTINGS' menu. If CTCSS/DCS has been set to OFF, Silent mode is inhibited.

### **To disable silent mode on a channel**

1. Press the **MENU** key.
2. Navigate to **FUNCTIONS > TOGGLE SILENT**.
3. Press the **MENU** key to select **OFF**.

The **S** icon (CTCSS) or **S**  icon (DCS) will be disappear from the display to confirm Silent mode is now disabled on that channel.

**NOTE:** When Silent mode is enabled on a channel you should always check the  icon for signs of traffic on the channel before transmitting to ensure you do not accidentally transmit over the top of another user. Alternatively, you can enable Busy Lockout in the menu which will automatically prevent your radio from transmitting if the channel is already in use.

## BUSY LOCKOUT

---

When using Silent mode with CTCSS/DCS, your radio's receiver remains quiet to all signals outside your CTCSS/DCS group. As a result, if you do not notice when others are transmitting on your channel you could accidentally transmit over the top of them.

The Busy Lockout function detects when others outside your CTCSS/DCS group are transmitting on the channel and prevents your radio from transmitting over them. If you press the **PTT** when the channel is busy the radio will emit a warning beep and the  icon won't be displayed. If this happens, look for the  icon on the display as an indicator that the channel is in use. If the channel is busy, simply wait until the channel is clear and press the PTT again.

### To enable or disable busy lockout:

1. Press the **MENU** key.
2. Navigate through the menu to select **RADIO SETTINGS > BUSY LOCK**.  
Use the **MENU** key to turn the function **ON** or **OFF**.

**NOTE:** A 'Busy Lockout Override with CTCSS Match' option is available through the XRS Connect App. When this option is enabled, Busy Lockout will not prevent you from transmitting over the top of another signal where their CTCSS/DCS code matches yours (i.e. The signal is from a member of your group).

## SELECTIVE CALLING

Your radio has a Selective Calling system known as SelCall that operates like a telephone. Your radio is pre-programmed with its own unique SelCall Identification number. If this number is called by another radio, your radio will beep to alert you. If you do not want to hear any other activity while waiting on a channel, you can select the QUIET mode. Your radio will then remain quiet to all incoming signals until your SelCall number is called.

You can store up to 20 of your most frequently called SelCall numbers in memory and each number can be labelled for easy identification.

## SELCALL IDENTIFICATION NUMBER

---

Your radio is factory programmed with its own unique SelCall Identification Number. This number identifies your radio from others in your area. Your radio's own SelCall Ident will be displayed for a few seconds to the lower-left of the display when you first turn the radio on. You will need to make your Ident known to anyone who may need to call you using SelCall.

**NOTE:** Although your radio is factory-programmed with a unique SelCall Ident, you can change your Ident to another number if required, using the Menu/Selcall option.

## SELCALL NAMING

---

When storing SelCall numbers, you can add names to each one to make it easier to identify whose number you are recalling. In addition, if an incoming SelCall matches one of your stored numbers, the name will be displayed to identify the caller.

## THE QUIET MODE

---

Your radio can be set to monitor signals on a busy channel but remain Quiet unless it receives its own SelCall Ident.

In this way, you won't be disturbed unless someone calls you. When your SelCall Ident is received, the Quiet mode is deactivated and an alarm sounds to alert you to the call. You can then converse normally on the channel.

**NOTE:** The QUIET mode overrides the normal active mute system to ensure that the radio remains quiet even when the channel is busy. When QUIET is set, you may see the  icon appear on the display indicating the channel is being used. However, unless someone transmits your SelCall Ident, nothing will be heard in the speaker.

You can activate the QUIET mode on individual channels (i.e. Some channels can be set to remain Quiet while others can remain open to all incoming signals) by storing those channels into a Quiet Memory.

## SENDING A SELCALL

---

To send, program or change a SelCall number:

1. Press the **MENU** key.
2. Navigate to **SELCALL**.

## RECEIVING A SELCALL

---

When your radio receives its own SelCall number, the  icon will appear along with the caller's SelCall number and name and the radio will sound an alarm to alert you to the call. During this time the alarm will beep urgently and the Quiet mode (if enabled) will open to allow incoming calls to be heard. After 30 seconds, if the call is not answered, the alarm will slow and the Quiet mode will be reactivated. The alarm will then continue to beep slowly until you cancel it.

### To cancel the alarm and talk on the channel:

Press the **PTT** and talk in the usual way. The alarm will be canceled, the display will return to normal and the channel will be open for normal communication.

### To clear the alarm completely:

Briefly press **BACK**. The alarm will be canceled and the display will return to the normal screen.

## QUIET MODE

---

The Quiet mode mutes the receiver to prevent incoming signals from being heard in the speaker until your SelCall Ident is received. In this way you can monitor a busy channel for personal calls without being disturbed by unwanted signals. If your SelCall number is received, the Quiet mode is cancelled and all incoming signals are heard in the speaker.

### Setting up the Quiet mode

To setup the Quiet mode you must first store the individual channels that you want to stay quiet into the Quiet memory. When the required channels are stored, simply activate the Quiet mode and all stored channels will remain quiet to all incoming signals unless your SelCall Ident is received.

Channels not stored in the Quiet memory will remain open to all signals and will operate normally.

## To store individual channels into quiet memory:

1. Select the required channel.
2. Press the **MENU** key.
3. Navigate to **FUNCTIONS > TOGGLE Q MEM.**

You can use the **MENU** key to turn the function **ON** or **OFF**.

When Quiet memory is switched **ON** on the selected channel, **Q** will appear at the top of the display indicating the selected channel is now stored in the Quiet memory.

When Quiet memory is switched **OFF** on the selected channel, **Q** will disappear from the display indicating the channel is no longer stored in the Quiet memory.

## Activating the Quiet mode

1. Select a channel that has been stored in the Quiet memory. **Q** will be displayed.

**NOTE:** You cannot activate the Quiet mode unless you have selected a stored channel.

2. Press the **MENU** key.
3. Navigate to **FUNCTIONS > TOGGLE QMode.**
4. Press the **MENU** key to select from the **ON** or **OFF** options.

When Quiet mode is switched ON, **Q** will appear at the top of the display indicating that Quiet operation is enabled. Now, all channels stored in the Quiet memory will be operating in the Quiet mode.

When Quiet mode is switched OFF, **Q** will disappear from the display indicating that Quiet operation is disabled. Now, all channels stored in the Quiet memory will be open for signals.

## Receiving signals in the Quiet mode

- If a normal signal is received on a Quiet channel, the channel will appear busy (the  icon will be visible) but no sound will be heard from the speaker.
- If a normal signal is received on an Open channel (one that is not in the Quiet memory) the signal will be heard in the usual way.
- If your SelCall Ident is received on any channel – Open or QUIET – the Quiet mode will be cancelled and the alarm will beep to alert you to the call. In addition, the caller's name and number will be displayed. All channels will now be open for normal transmission and reception.

## Scanning in the Quiet mode

The radio will allow you to scan while the QUIET mode is active. Using this feature you can monitor a group of Quiet channels or a combination of Quiet and Open channels.

**NOTE:** To ensure reliable SelCall detection when scanning in the Quiet mode, it is recommended that you restrict the number of channels in the Scan Group.

## GROUP CALLING

---

The SelCall system includes a Group Call function that allows you to call up to 1000 radios simultaneously. This can be useful in an emergency situation where you may need to transmit a message to a large number of radios in your group.

By default, your radio is factory-set to allow up to 10 radios to be called at once. If your application requires more, your dealer can re-program this option to allow 100 or even 1000 radios to be called. The following description assumes the default Group Call setting of 10 radios.

The Group Call function works by allowing you to enter a special 'group code' into the last digit of the SelCall number you are sending. The 'group code' appears as an 'A' (All) when displayed in the radio. When this 'group code' is received, it substitutes for all other numbers in that position. As long as the first 4 digits of the SelCall you are sending match those of the radios you are calling, their SelCall alarm will be activated as if their full 5 digit SelCall Idents had been received.

To achieve this, the 10 radios you are calling have sequentially numbered SelCall Idents.

e.g. 14530, 14531, 14532, 14533, 14534, 14535, 14536, 14537, 14538, 14539

Transmitting the SelCall Ident 14531 will only activate the alarm in the radio with the SelCall Ident of 14531. However, transmitting 1453A will activate the alarms in all radios with Idents 14530 through 14539 (a total of 10 radios).

If the radios in your fleet do not have sequential SelCall number and you want to make use of this function, you will need to re-program the SelCall Idents in your radios by changing the numbers in your radio's 'OWN' SelCall memory.

## PROGRAMMING AND SENDING GROUP CALLS

---

The process for entering a Group Call Ident is the same as entering a normal SelCall Ident.

1. Press the **MENU** key.
2. **Navigate to SELCALL > MAKE SELCALL**
3. Use the **▲** or **▼** keys to change the digit at the cursor position. Press **MENU** to step forward to the NEXT digit position or **BACK** to step back to the previous digit position.
4. Repeat until the first 4 digits have been entered. At the last digit use the **▲** or **▼** keys to select 'A'.
5. Hold **MENU** to send.  
The  icon will be display as the SelCall is transmitted.

**NOTE:** Where your radio allows it, programming Group Calls for 100 radios is identical except that you will need to select 'A' for the last two digits (e.g. 123AA). For 1000 radios you will need to select 'A' for last three digits (e.g. 12AAA).

## CALL ACKNOWLEDGE IN GROUP MODE

---

There is no Call Acknowledge when sending Group Calls. This is to prevent all the radios in your group from trying to respond to your SelCall transmission at the same time.

## STORING GROUP CALL IDENTS

---

Group Call Idents can be stored in memory in the same way as a standard SelCall Ident.

## RECEIVING GROUP CALLS

---

Receiving a Group Call is identical to receiving a normal SelCall except that the alarm sound is a LOW tone beep instead of the normal High tone beep. The caller's name and number is displayed in the usual way.

## MENU

### MENU NAVIGATION

---

The Menu provides access to all the settings, adjustments and functions listed in the table below. All menu items are controlled using the **MENU**, **▲**, **▼** and **BACK** keys.

1. To access the menu, press the **MENU** key.
2. To scroll through the list of menu items press the **▲** or **▼** keys.
3. To select an item, press the **MENU** key.
4. To step back through the menu, or to exit the current screen, press the **BACK** key.
5. To exit the menu completely press and hold the **BACK** key.

### CONTEXT MENU

---

A context menu is included at the bottom of some screens. The options offered will change depending on the selected topic.

Press: <OPTION> = Briefly press the **MENU** key to select the option.

Hold: <OPTION> = Press and hold the **MENU** key to select the option.

## CONTEXT MENU EXAMPLES

---



Press:next = Press **MENU** for NEXT

Hold:call = Hold **MENU** for CALL



Press:next = Press **MENU** for NEXT

Hold:save = Hold **MENU** to SAVE



Press:edit = Press **MENU** for EDIT

Hold:opts = Hold **MENU** for OPTIONS

## TEXT ENTRY

---

When entering text (e.g. zone names or SelCall numbers), the following characters are available;

Text	Available
Uppercase Letters	A B C D E F G H I J K L M N O P Q R S T U V W X Y Z
Lowercase Letters	a b c d e f g h i j k l m n o p q r s t u v w x y z
Numbers	0 1 2 3 4 5 6 7 8 9
Punctuation	. * + <space>

## MENU TABLE

Menu	Options	Option Settings
<b>BLUETOOTH</b>	Bluetooth Shared Audio Paired Devices Visible Devices	On/Off On/Off/Dual
<b>FUNCTIONS</b>	Toggle Q Mem Toggle Q Mode Toggle Scan Toggle Silent	On/Off
<b>PROG BUTTONS</b>	XRS1 Button Press XRS1 Button Hold XRS2 Button Press XRS2 Button Hold XRS3 Button Press XRS3 Button Hold	Display Dim Cycle Scan CH Cb Scan Memory Duplex Mem Silent Mem Quiet Mem Quiet Mode Scrambler Squelch Squelch Level Selcall Selcall Resend Pri2 Set Pri2 Recall Voice Playback Active Mute Dual Watch Triple Watch Vox Show Location Cycle Tx Power Key Lock Zones

Menu	Options	Option Settings
<b>RADIO SETTINGS</b>	Auto Power	
	Busy Lockout	On/Off
	CB Subtone	CTCSS/DCS Tones
	Country	AU/NZ
	Dynamic Volume Control	On/Off
	Equaliser	
	Mic Gain	0dB to +9dB
	BT Mic Gain	-12dB to +24dB
	RX Noise Red	Off/1/2/3
	TX Noise Red	Off/1/2/3
	Priority Ch1	CB01 to CB80
	Priority Ch2	CB01 to CB80
	Roger Beep	On/Off
	Scrambler	On/Off
	Selcall Ack	On/Off
	Speaker	Radio/Mic/Both
	Squelch Level	1 to 9
	USB Role	Host/Device
	Versions	Model Serial # Firmware Microphone
Reset Settings	Cancel Reset Radio Factory Set	
<b>SCAN SETTINGS</b>	CB Scan Mem	A Open Scan B Priority Scan C Network Scan
	Netscan Subt	CTCSS/DCS

Menu	Options	Option Settings
<b>SELCALL</b>	Make Selcall Last Own Memory – 20	
<b>USER INTERFACE</b>	Adaptive Dim Audio Meter Beep Volume Brightness Max Brightness Min Display Info	On/Off On/Off 0 to 10 0 to 10 0 to 10 S-Met/S-Lin/Volts/None
<b>XRS FEATURES &gt; ACTIVE MUTE</b>	Mute Timeout	None – 180 Min; '30 Min' is the default option
	Reduce Volume	Mute, 75%, 50%, Or 25% Reduction in current volume; 'mute' is the default option
<b>XRS FEATURES &gt; CREWTALK</b>	Enable	On/Off
	Group Number	1 to 60
<b>XRS FEATURES &gt; LOCATION SERVICES</b>	Enable TX	On/Off
	GPS DISPLAY	On/Off
	GPS POWER	On/Off
	LOC DISPLAY	LOC/Txt/Of
	LOC SOURCE	GPS/App+
	LOC TIMEOUT	None – 180 Min; '30 Min' is the default option.
	Selcall UID	On/Off
	Set ID/Status	User ID/Status
	TX Data Limit	On/Off
	Show Levels	Satellite Level
	Show Own Location	Latitude Longitude Elevation

Menu	Options	Option Settings
<b>XRS FEATURES</b> > <b>VOICE</b> <b>PLAYBACK</b>	Enable	On/Off
	Clear All	-
	Playback	-
<b>ZONES</b>	Zone 1 Zone 2 Zone 3 Zone 4 Zone 5 Zone 6 Zone 7 Zone 8	Go/Edit

## FUNCTIONS

---

The Function option allows you to set the state of several functions related to Scan, SelCall and CTCSS/DCS.

1. Press the **MENU** key.
2. Navigate to **FUNCTIONS**.
3. Use the **▲** or **▼** keys to select from one of the options below;
  - **TOGGLE Q MEM:** Store channels in the SelCall Quiet memory.
  - **TOGGLE Q MODE:** Toggle Quiet mode for SelCall.
  - **TOGGLE SCAN:** Enable/Disable the Scan function.
  - **TOGGLE SILENT:** Toggle Silent mode for CTCSS/DCS channels.  
Press **MENU** to toggle the selected function **ON** or **OFF**.
4. Press **BACK** to exit back to the previous menu or hold the **BACK** key to return to the main screen.

## PROGRAMMABLE BUTTONS

---

The three buttons on the side of the microphone, opposite the PTT button, labelled **XRS1**, **XRS2**, and **XRS3** can be programmed with different functions using the radio menu or the XRS Connect app. A description of the functions that can be programmed to the radio can be found in the table below.

To assign functions to the programmable buttons:

1. Press the **MENU** key.
2. Navigate to **PROG BUTTONS**.
3. Use the **▲** or **▼** keys to select the desired programmable button then press **MENU**.
4. The XRS Button option list is displayed. The currently selected option is marked with a dot. Use the **▲** or **▼** keys to select to desired option then press **MENU** to select.
5. Press **BACK** to exit back to the previous menu or hold **BACK** to return to the main screen.

Menu	Options	
<b>XRS1 BUTTON PRESS</b>	Active Mute	Mutes/reduces the volume of the radio/unmutes the radio, based on how the Active Mute feature is set.
	CB Scan Memory	Cycles through the three scan memories.
<b>XRS1 BUTTON HOLD</b>	Crewtalk Toggle	Toggles Crewtalk mode On/Off
	Cycle Scan Channel	Cycles through channels in the current scan memory.
<b>XRS2 BUTTON PRESS</b>	Display Dim	Dims the Display Backlight.
	Dual Watch	Enable Dual Watch to monitor the current working channel and last selected Priority Channel.
<b>XRS2 BUTTON HOLD</b>	Duplex Mem	Toggles duplex mode on the current channel
	LOC TX Toggle	Toggles TX Location On/Off
<b>XRS3 BUTTON PRESS</b>	Pri2 Recall	Recall Priority Channel 2.
	Pri2 Set	Set the current channel as Priority Channel 2.
<b>XRS3 BUTTON HOLD</b>	Quiet Mem	Add/remove the current channel in SelCall Quiet memory.
	Quiet Mode	Enables or disables SelCall Quiet mode.
	Scrambler	Enables or disables the scrambler option.
	Selcall	Open SelCall menu.
	Selcall Resend	Automatically resends to the last SelCall ID you sent.
	Show Location	Show current latitude, longitude and elevation.
	Silent Mem	Add/remove the current channel in Silent memory.
	Squelch	Enables or disables the squelch.
	Squelch Level	Adjusts the preset squelch level in steps from 1 to 9.
	Triple Watch	Enable Triple Watch to monitor the current working channel and both Priority Channels.
	Voice Playback	Play back recorded transmissions.
	Zones	Displays the Zone list menu for quick zone selection.

## RADIO SETTINGS

---

1. Press the **MENU** key.
2. Navigate to **RADIO SETTINGS**.
3. Use the **▲** or **▼** keys to select from one of the setting options (see the options table below).
4. To alter a value press **MENU** then use the **▲** or **▼** keys to adjust the value. Press **MENU** to accept.  
To toggle an **ON/OFF** setting, press **MENU**.
5. Press **BACK** to return to the previous menu or hold the **BACK** key to return to the main screen.

## Radio Setting Options Table

Menu	DESCRIPTION	OPTIONS
<b>AUTO POWER</b>	Turns the radio off after a time period specified by the user.	None/30-180 ON/OFF ON/OFF
<b>BUSY LOCK</b>	Disables the transmitter when the radio is busy to prevent you from transmitting over the top of other users	On/Off [Off]
<b>CB SUBTONE</b>	Switches the CTCSS or DCS tone Off or ON and sets the tone frequency.	Off [Off] CTC01 – CTC50 DT001 – DT104
<b>COUNTRY</b>	Select the country in which the radio is being used. Used to highlight designated emergency channels with a yellow channel number.	AU/NZ [AU]
<b>DYNAMIC VOL</b>	Balances the volume level of incoming signals so that soft and loud signals have a similar volume.	On/Off [On]
<b>EQUALISER</b>	Four band graphic equaliser to customise the received audio	
<b>MIC GAIN</b>	Adjusts the microphone's sensitivity. Increase the gain for quiet voices. Decrease the gain for loud voices or for use in noisy environments.	+0db To +9db [+0db]
<b>BT MIC GAIN</b>	Adjusts the Bluetooth microphone's sensitivity. Increase the gain for quiet voices. Decrease the gain for loud voices or for use in noisy environments.	-12dB to +24dB [+0db]
<b>RX NOISE RED</b>	Select level of noise reduction applied to receive audio.	Off/1/2/3 [2]
<b>TX NOISE RED</b>	Select level of noise reduction applied to transmit audio.	Off/1/2/3 [2]
<b>PRIORITY CH1</b>	Sets the channel that is selected when the PRI key is pressed.	CB01 – CB80 [CB01]
<b>PRIORITY CH2</b>	Sets the channel that is selected when the PRI key is pressed.	CB01 – CB80 [CB02]
<b>ROGER BEEP</b>	Automatically transmits a tone whenever the PTT is released.	On/Off [Off]
<b>SCRAMBLER</b>	Enables/Disables the Scrambler option	On/Off [Off]
<b>SELCALL ACK</b>	Enables/disables automatic transmission of an acknowledge beep when your SelCall Ident is received.	On/Off [On]

Menu	DESCRIPTION	OPTIONS
<b>SPEAKER</b>	Selects which speakers are in use. Sounds can be heard through radio speaker only, microphone speaker only, or both speakers at once	Both, Mic, Radio (Both)
<b>SQUELCH LEVEL</b>	Adjusts the present squelch level.	1 To 9 [2]
<b>TX POWER</b>	Select the transmitter output power.	5w/1w/0.1w [5w]
<b>USB ROLE</b>	Changes what the USB outlet will support. 'Host' supports USB device connection and will control and supply power to the connected device. 'Device' supports being connected to a USB host for data input.	Host/Device (Host)
<b>VERSIONS</b>	Displays model number, serial number, and firmware version.	Model Serial # Firmware Microphone
<b>RESET SETTINGS</b>	Cancel: Exits without changes. Reset Radio: Restores the radio to its default settings (i.e Squelch level, beep level, Subtone, etc. but retains user data such as SelCall memories and Zones. Factory Reset: Restores the radio to its 'out-of-the-box' state. Deletes all user data and restores default settings.	

## AUDIO EQUALISER

The Equaliser function provides a four band graphic equaliser to customise the received audio characteristics.

### To access the Equaliser function:

1. Press the **MENU** key.
2. Navigate to **RADIO SETTINGS > EQUALISER**.

### To change Equaliser settings:

1. Use the **▲** or **▼** keys to select the desired frequency band and press **MENU**.
2. Use the **▲** or **▼** keys to set the desired level then press **MENU**.
3. Repeat for each frequency band.
4. Press **BACK** to exit.

## SCAN SETTINGS

---

### To select the current scan memory:

1. Press the **MENU** key.
2. Navigate to **SCAN SETTINGS** then press **MENU** to select.
3. Use the **▲** or **▼** keys to select **CB SCAN MEM** then press **MENU**.
4. Use the **▲** or **▼** keys to select from memory 'A', 'B' or 'C' then press **MENU**.
5. The default scan memory allocations are:
  - A – Open Scan
  - B – Priority Scan
  - C – Net-Scan

### To use Net-Scan you must also select a CTCSS or DCS subtone:

1. Use the **▲** or **▼** keys to select **NETSCAN SUBT** then press **MENU**.
2. Use the **▲** or **▼** keys to scroll through the list of sub-tones then press **MENU** to select.

**NOTE:** If you select Net-Scan as your CB Scan Memory without selecting a sub-tone, you will not be able to scan. Pressing the **SCAN** key will produce a low 'error' beep.

## USER INTERFACE

---

1. Press the **MENU** key.
2. Navigate to **USER INTERFACE**.
3. Use the **▲** or **▼** keys to select from one of the setting options (see the options table below).
4. To alter a value press **MENU** then use the **▲** or **▼** keys to adjust the value. Press **MENU** to accept. To toggle an ON/OFF setting, press **MENU**.
5. Press **BACK** to return to the previous menu or hold the **BACK** key to return to the main screen.

## User Interface Options Table

Menu	DESCRIPTION	OPTIONS
<b>ADAPTIVE DIM</b>	Automatically dims display in darker environments.	On/Off (On)
<b>AUDIO METER</b>	Indicates incoming audio level as a bar on the bottom of the display.	On/Off (Off)
<b>BEEP VOLUME</b>	Adjusts the volume of the key press beeps.	0 to 10 [4]
<b>BRIGHTNESS MAX</b>	Adjusts the maximum display backlight brightness.	0 to 10 [9]
<b>BRIGHTNESS MIN</b>	Adjusts the minimum display background brightness.	0 to 10 (1)
<b>DISPLAY INFO</b>	Displays the supply voltage level, or the signal strength meter reading (logarithmic/linear).	None / Volts / S-Lin / S-Met

## BLUETOOTH

### BLUETOOTH

#### To enable/disable Bluetooth functionality:

1. Press the **MENU** key.
2. Navigate to **BLUETOOTH**.
3. Select **BLUETOOTH** and press **MENU** to select **ON** or **OFF**.

#### To pair to a nearby Bluetooth accessory:

1. Press the **MENU** key.
2. Navigate to **BLUETOOTH > VISIBLE DEVICES**.
3. Use the **▲** or **▼** keys to select the desired accessory and press **MENU**.
4. Select **CONNECT** from the pop-up and press **MENU**.
5. On successful pairing a blue  icon will display next to the entry in the list.

#### To show a list of previously paired Bluetooth devices:

1. Press the **MENU** key.
2. Navigate to **BLUETOOTH > PAIRED DEVICES**.
3. Use the **▲** or **▼** keys to move through the list. Currently connected devices show a blue  icon.

4. Select a device and press **MENU**. The pop-up allows you to:
  - Connect: Connect to a previously paired device (if it is available).
  - Disconnect: Disconnect from the currently connected device.
  - Unpair: Forget the Bluetooth device.
  - Rename: Rename the Bluetooth device.
  - Info: See details of the Bluetooth device.
5. A list of nearby Bluetooth devices will be displayed.

**NOTE:** If a connected Bluetooth device moves out of range or is turned off, the radio will attempt to automatically re-connect when the device becomes visible again. Use the disconnect option above to prevent the radio from automatically re-connecting to the Bluetooth device.

## SHARED AUDIO

---

Shared Audio is an XRS feature that allows the radio to work with Bluetooth audio devices that support connection to multiple devices at the same time. With this feature enabled, the radio will only open a Bluetooth connection to the audio device when the PTT button is pressed or an incoming call is received.

The radio will connect when either receiving or transmitting then disconnect once the transmission is complete. This allows for other devices such as a phone or navigation device to use Bluetooth audio when the radio is not receiving or transmitting.

As the radio is establishing a new connection with each transmission there may be some delay with certain third-party devices. If this occurs, wait a short period of time after pressing PTT before speaking.

**Shared Audio ON** – Prioritises TX or RX transmissions over phone or navigation.

**Shared Audio DUAL** – Prioritises phone over RX transmissions or navigation

Pressing PTT will interrupt phone call.

### To navigate to the Shared Audio feature on your radio:

1. Press the **MENU** key.
2. Navigate to **BLUETOOTH**.
3. Select **SHARED AUDIO** and press **MENU**.
4. Use the **▲** or **▼** keys to select either **OFF**, **ON** or **DUAL** and press **MENU**.

## SELCALL

---

1. Press the **MENU** key.
2. Navigate to **SELCALL**.
3. Use the **▲** or **▼** keys to select the available options.
  - Select **MAKE SELCALL** to enter and send a SelCall number.
  - Select **Last** to resend or save the last SelCall number you sent.
  - Select **Own** to edit your radio's own SelCall number.
  - Continue scrolling downwards to access a further 20 user programmable SelCall memories.



## MAKING A SELCALL

---

1. To enter and send a SelCall number, select **MAKE SELCALL** and press **MENU**.
2. Use the **▲** or **▼** keys to change the digit at the cursor position.
3. Press **MENU** to step forward to the NEXT digit position or **BACK** to step back to the previous digit position.
4. Continue until all 5 SelCall digits have been entered. Hold **MENU** to send.



## RESENDING THE LAST SELCALL NUMBER

---

1. To resend the last Selcall number, use the **▲** or **▼** keys to select Last.
2. Hold **MENU** to send.

## SAVING THE LAST SELCALL NUMBER

---

1. Use the **▲** or **▼** keys to select Last.
2. Press **MENU**.
3. Use the **▲** or **▼** keys to scroll down to an empty SelCall memory.
4. Press **MENU**.

The 'Edit Contact' screen is displayed and the SelCall number is automatically inserted into the contact.

5. Use the **▲** or **▼** keys to change the character or the cursor position.
6. Press **MENU** to step forward to the NEXT character position or **BACK** to step back to the previous character position.




Continue until the required name has been entered then hold **MENU** to save the contact.

## EDITING YOUR RADIO'S OWN SELCALL NUMBER

---

1. Use the **▲** or **▼** keys to select **Own** then press the **MENU** key.
2. The 'Edit Contact' screen is displayed and **Own** is displayed as the contact name with the cursor on the SelCall number.

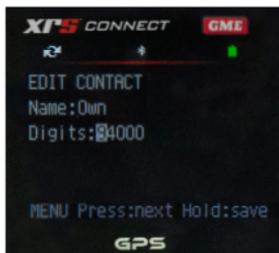

3. Use the **▲** or **▼** keys to change the number or the cursor position.
4. Press **MENU** to step forward to the NEXT digit position or **BACK** to step back to the previous digit position.
5. Continue until the required name has been entered, then hold **MENU** to save the new number.

## ADDING OR EDITING A SELCALL CONTACT

---

1. Use the **▲** or **▼** keys to scroll to a SelCall memory location then press **MENU** to edit.
2. Use the **▲** or **▼** keys to change the letter or number at the cursor position.
3. Press **MENU** to step forward to the NEXT character or digit position or the **BACK** key to step back to the previous character or digit position.



4. Continue until the required name and SelCall number has been entered then hold **MENU** to save the new number.
5. The radio returns to the previous screen and displays the new contact entry.

## XRS FEATURES

There are four main feature options available under XRS Features:

- **Location Services**
- **Voice Playback**
- **Active Mute**
- **Crew Talk**

### XRS LOCATION SERVICES

---

XRS Location Services allows the radio to broadcast its GPS location at the end of a normal voice transmission. The MC670B microphone has a built-in GPS module to determine your current location. This feature can be used together with the XRS Connect app to see the location of other XRS Location Services users on your map.

You can select to display either @username, direction and distance or @username and #status for incoming transmission. This will be displayed on the screen.

### GPS DATA ACQUISITION

When using the built-in GPS receiver to determine your location the radio will need to acquire a minimum of 3 satellites.

To acquire satellites, the microphone will require a direct and clear view of the sky. Depending on a number of factors such as personal or vehicle location and surrounding obstacles, the time it takes to acquire a minimum of 3 satellites can vary from 1 to 5 minutes. For best results, ensure the radio has a clear view of the sky.

The radio will acquire satellites if **LOC SOURCE** is set to **GPS** or **App+**. If **LOC SOURCE** is **App+** the radio will prioritise the location data from the XRS Connect app if connected.

#### To enable/disable TX location transmit:

1. Press the **MENU** key.
2. Navigate to **XRS FEATURES > LOCATION SERVICES**.
3. Select **ENABLE TX** and press **MENU** to select **ON** or **OFF**.

### To enable/disable internal GPS module:

1. Press the **MENU** key.
2. Navigate to **XRS FEATURES > LOCATION SERVICES**.
3. Select **GPS POWER** and press **MENU** to select **ON** or **OFF**.

### To select GPS location source:

1. Press the **MENU** key.
2. Navigate to **XRS FEATURES > LOCATION SERVICES**.
3. Select **LOC SOURCE** and press **MENU**.
4. Use the **▲** or **▼** keys to select either **GPS** or **App+** and press **MENU**.

### To set the User ID and Status:

1. Press the **MENU** key.
2. Navigate to **XRS FEATURES > LOCATION SERVICES > SET ID/STATUS**
3. Use the **▲** or **▼** keys to select either **USER ID** or **STATUS** and press **MENU**.
4. Use the **▲** or **▼** keys to change the character at the cursor position.
5. Press the **MENU** key to step forward to the **NEXT** character position or the **BACK** key to step back to the previous character position.
6. Continue until the required name has been entered then hold **MENU** to save the User ID and Status.

### To set location timeout:

1. Press the **MENU** key.
2. Navigate to **XRS FEATURES > LOCATION SERVICES**
3. Select **LOC TIMEOUT** and press **MENU**.
4. Use the **▲** or **▼** keys to increase or decrease the location timeout then press **MENU**.

### To set location display:

1. Press the **MENU** key.
2. Navigate to **XRS FEATURES > LOCATION SERVICES**.
3. Select **LOC DISPLAY** and press **MENU**.
4. Use the **▲** or **▼** keys to select option then press **MENU**.

## GPS Display

When the **GPS DISPLAY** setting is set to **ON**, GPS icon and number will be displayed on the radio. The number displayed represents the number of satellites acquired from 0 to 9 with a minimum of 3 required to transmit GPS data

### To enable/disable GPS Display:

1. Press the **MENU** key.
2. Navigate to **XRS FEATURES > LOCATION SERVICES**.
3. Select **GPS DISPLAY** and press **MENU** to select **ON** or **OFF**.

## TX DATA LIMIT

By default, the **TX DATA LIMIT** is set to **OFF**, the radio will transmit its location data on every PTT, so long as more than 15 seconds have passed since the previous transmission.

When the **TX DATA LIMIT** setting is set to **ON**, this limits the number of location data packets that are transmitted per hour according to ACMA requirements, ensuring the allowable limit is not exceeded.

When the radio is ready to transmit its location, regardless of the **TX DATA LIMIT** setting, a small  location marker icon will be shown on the icon bar at the top of the screen and informs the user by way of a warning message, "Location TX Limit" and an audible warning beep that the allowable limit has been exceeded.

### To enable/ disable TX Data Limit:

1. Press the **MENU** key.
2. Navigate to **XRS FEATURES > LOCATION SERVICES**.
3. Select **TX DATA LIMIT** and press **MENU** to select **ON** or **OFF**.

### To view GPS Location:

1. Press the **MENU** key.
2. Navigate to **XRS FEATURES > LOCATION SERVICES**.
3. Select **SHOW OWN LOC** and press **MENU** to display GPS Coordinates.

### To view GPS Satellite Levels:

1. Press the **MENU** key.
2. Navigate to **XRS FEATURES > LOCATION SERVICES**.
3. Select **SHOW LEVELS** and press **MENU** to display satellite signal levels.

## Location Services Options Table

Menu	Description	Options
<b>ENABLE TX</b>	Enables/disables whether the radio transmits location to other radios (same as share location in XRS Location Services app).	On/Off
<b>GPS DISPLAY</b>	Displays either a '0' for no GPS signal or the number of GPS satellites acquired.	On/Off
<b>GPS POWER</b>	Enables/disables the radio's built-in GPS module	On/Off
<b>LOC DISPLAY</b>	Loc= Microphone will display @username direction and distance for incoming transmission. Txt=Mic will display @username and #status for incoming transmission. Off=No display.	Loc/Txt/Off
<b>LOC SOURCE</b>	This setting allows you to select the source of location data. Select GPS to use radio internal GPS only, or App+ to use radio internal GPS or XRS Connect app if connected.	GPS/App+
<b>LOC TIMEOUT</b>	This setting allows you to set the location timeout. The radio will not transmit locations with timestamps that are past the timeout specified in this setting.	None - 180 Minutes '30 Minutes' is the default option.
<b>SELCALL UID</b>	Turn on to include the radio's SelCall ID in the location data sent.	On/Off
<b>SET ID/STATUS</b>	Customise the user ID and status that is transmitted.	User ID/Status
<b>TX DATA LIMIT</b>	Allows you to select if data transmission occurs with every PTT or once every 30 seconds.	On/Off
<b>SHOW LEVELS</b>	Displays GPS signal strength as a bar graph	Level blank
<b>SHOW OWN LOC</b>	Displays GPS Coordinates as a longitude and latitude plus elevation	Longitude/Latitude/ Elevation

## VOICE PLAYBACK

---

You can enable this feature to allow the radio to record voice transmissions that it receives from other radios, and then playback recorded transmissions. The following are the basic functionalities of the Voice Playback feature:

- Records the first 30 seconds of every transmission received by your radio.
- Stores a total of 12 minutes of recordings (combined time of all recordings).
- When playback begins, the radio begins with the most recent recording. If you scroll back through the list to an older recording, it will play that recording and then work its way through the list to the most recent recording. You can use the up/down keys to scroll through the list of recordings.
- On selecting each recording, the radio's screen displays the following:
  - Name of the recording.
  - Elapsed time since the recording was made (If the radio is switched off, this information will no longer be available when the radio is switched on).
  - The CB channel on which the recording was made.
  - Recording also works when the radio is in the Active Mute mode.

### To enable the voice playback feature:

1. Press the **MENU** key.
2. Navigate to **XRS FEATURES > VOICE PLAYBACK**.
3. Select **ENABLE** and press **MENU** to select **ON** or **OFF**.

### To playback voice recordings:

When navigating from the main menu:

1. Press the **MENU** key.
2. Navigate to **XRS FEATURES > VOICE PLAYBACK**.
3. Select **PLAYBACK** and press **MENU** to play back recorded audio.

Alternatively, you can assign the Voice Playback feature to one of the programmable **XRS1**, **XRS2** or **XRS3** keys. When the key is pressed, it will begin playback. To exit the voice playback feature, press the **BACK** key. Pressing one of the Priority channel recall keys or **PTT** key will also immediately exit the voice playback feature.

### To clear all recordings:

1. Press the **MENU** key.
2. Navigate to **XRS FEATURES > VOICE PLAYBACK**.
3. Select **CLEAR ALL** and press **MENU** to clear all recordings.

This selection erases all recordings from the radio.

### Voice Playback Options Table

Menu	Options	
<b>ENABLE</b>	Enables the radio to record voice transmissions that it receives from other radios, and playback recorded transmissions.	On/Off
<b>CLEAR ALL</b>	Clears all the existing voice recordings.	-
<b>PLAYBACK</b>	Plays back the recorded voice transmissions, beginning with the most recent recording.	-

### ACTIVE MUTE

---

This feature of the XRS Connect app mutes the XRS Connect radio on phone call, and unmutes the radio at the end of the phone call. You can assign the Active Mute feature to any of the radio's programmable buttons.

#### To turn on/off active mute in the XRS Connect app:

1. Open the XRS Connect app.
2. Tap  to display the left navigation menu.
3. Tap the Active Mute slider to turn on/off.  
When the slider turns green, the active mute feature is on.

#### To navigate to the Active Mute feature on your radio:

1. Press the **MENU** key.
2. Navigate through the following selections: **XRS FEATURES > ACTIVE MUTE**.

## Active Mute Options Table

Menu	Options	
<b>MUTE TIMEOUT</b>	You can select the Mute Timeout feature to set a time period after which the radio unmutes. Alternatively, you can use the assigned programmable key, or change volume to exit the mute mode.	None - 180 minutes; '30 minutes' is the default option.
<b>REDUCE VOLUME</b>	Reduces the volume of the radio. By default, the volume level is set to Mute.	Mute, 75%, 50%, or 25% reduction in current volume; 'Mute' is the default option.

## CREWTALK

---

CrewTalk is a new XRS feature that allows you to automatically configure pre-defined Net-Scan lists. As with regular Net-Scan, the benefit is that a group of users can have communications with far less chance of being blocked by outsiders, or hearing unwanted transmissions from outsiders.

### To enable/disable CrewTalk and select a CrewTalk group:

1. Press the **MENU** key.
2. Navigate to **XRS FEATURES > CREWTALK**.
3. Select **ENABLE** and press **MENU** to select **ON** or **OFF**.
4. Select **GROUP NUMBER** and press **MENU**.
5. Use the **▲** or **▼** keys to select a Group Number and press **MENU**.

When CrewTalk is configured, normal scan functionality is overridden. Whenever scanning is started by pressing the **SCAN** button, CrewTalk will be active. The radio display will indicate that XRS CrewTalk scan is active, and indicate the Group number that is being used. If other radios in the group are configured to enable CrewTalk with the same Group number, and they are scanning, the radios in the group can communicate with limited outsider interference, using Net-Scan in a transparent way.

## CrewTalk Frequency and Subtone Table

Subtones	Channels					
	CB12	CB24	CB49	CB54	CB59	CB67
	CB13	CB25	CB50	CB55	CB60	CB68
	CB14	CB26	CB51	CB56	CB64	CB69
	CB15	CB27	CB52	CB57	CB65	CB70
	CB16	CB28	CB53	CB58	CB66	CB79
<b>40</b>	Group 1	Group 11	Group 21	Group 31	Group 41	Group 51
<b>41</b>	Group 2	Group 12	Group 22	Group 32	Group 42	Group 52
<b>42</b>	Group 3	Group 13	Group 23	Group 33	Group 43	Group 53
<b>43</b>	Group 4	Group 14	Group 24	Group 34	Group 44	Group 54
<b>44</b>	Group 5	Group 15	Group 25	Group 35	Group 45	Group 55
<b>45</b>	Group 6	Group 16	Group 26	Group 36	Group 46	Group 56
<b>46</b>	Group 7	Group 17	Group 27	Group 37	Group 47	Group 57
<b>47</b>	Group 8	Group 18	Group 28	Group 38	Group 48	Group 58
<b>48</b>	Group 9	Group 19	Group 29	Group 39	Group 49	Group 59
<b>49</b>	Group 10	Group 20	Group 30	Group 40	Group 50	Group 60

## RECEIVE-ONLY CHANNELS (ZONES)

Your XRS Connect radio can store up to 400 user-programmable receive-only channels within the frequency range of 403 MHz to 520 MHz. Channels are stored in one of 8 zones with each zone containing up to 50 channels. Zones and channels can each be individually named for easy identification.

Programming is done either through the radio menu or through the GME XRS Connect App. The XRS Connect App also offers a range of pre-programmed frequencies in various categories sorted by locations making the selection of suitable channels and frequencies much easier.

When a Zone is selected, its frequencies will be added to the standard 80 CB channels. Zone channels appear immediately above CH80. After the last zone channel is selected channels will wrap around to CH01 again.



### SELECT A ZONE

---

1. Press the **MENU** button.
2. Select **ZONES** and press **MENU**.
3. Select the desired zone from the Zone list.
4. Press **MENU**.

### EDIT A ZONE NAME

---

1. Press the **MENU** key.
2. Select **ZONES** and press **MENU**.
3. Select the desired Zone from the Zone list. To edit the zone, hold the **MENU** key. The zone edit screen appears.
4. Press **MENU** to edit the zone name.
5. Use the **▲** or **▼** keys to change the character at the cursor position.

6. Press the **MENU** key to step forward to the NEXT character position or the **BACK** key to step back to the previous character position.
7. Continue until the desired name has been entered. Zone names can be up to 16 characters long.



8. To save the name hold the **MENU** key.



The radio will return to the Zone list with the new zone name displayed.

The radio returns to the main screen with the selected zone displayed below the channel number.

All channels in the selected zone will now be available along with the usual 80 CB channels. Zone channels can be found immediately above CB Channel 80.

## **ADD CHANNELS TO A NEW ZONE**

---

1. Press the **MENU** key.
2. Select **ZONES** and press **MENU**.
3. Select the desired Zone from the Zone list and hold **MENU** to edit the zone.

4. Hold **MENU** to select Options.
5. Use the **▲** or **▼** keys to select **ADD CHANNEL** from the menu list.
6. Press **MENU** to edit the new channel.



7. Use the **▲** or **▼** keys to change the character at the cursor position.
8. Press **MENU** to step forward to the NEXT character position or the **BACK** key to step back to the previous character position.
9. When the desired name has been entered, press the **MENU** key repeatedly to step to the RX frequency. Channel names may contain up to 16 characters.



10. To save the new channel, hold **MENU**.



The display returns to the Zone screen.

## EDIT EXISTING CHANNELS IN A ZONE

---

1. Press the **MENU** key.
2. Select **ZONES** and press **MENU**.
3. Select the desired Zone from the Zone list and hold **MENU** to edit the zone.
4. Use the **▲** or **▼** keys to select a channel
5. Hold **MENU** for the Options menu.
6. Use the **▲** or **▼** keys to select from the options list then press **MENU**.
  - Select **Go Channel** to jump to the select channel
  - Select **Del Channel** to delete the selected channel
  - Select **Add Channel** to add a new channel
  - Select **Edit** to edit the selected channel



7. Next select **MENU**.
8. To add a new channel or **EDIT** an existing channel;
9. Use the **▲** or **▼** keys to change the character or digit at the cursor position.
10. Press **MENU** to step forward to the NEXT character or digit position or the **BACK** key to step back to the previous character or digit position.



11. Continue until the name or frequency has been edited.
12. Hold **MENU** to save.

## FREQUENCY AND SUBTONE TABLES

The table that follows details the CTCSS tone frequencies of the XRS Connect radio.

CTCSS Tone Frequencies							
No.	Frequency	No.	Frequency	No.	Frequency	No.	Frequency
1	67.0	14	107.2	27	167.9	40	159.8
2	71.9	15	110.9	28	173.8	41	165.5
3	74.4	16	114.8	29	179.9	42	171.3
4	77.0	17	118.8	30	186.2	43	177.3
5	79.7	18	123.0	31	192.8	44	183.5
6	82.5	19	127.3	32	203.5	45	189.9
7	85.4	20	131.8	33	210.7	46	196.6
8	88.5	21	136.5	34	218.1	47	199.5
9	91.5	22	141.3	35	225.7	48	206.5
10	94.8	23	146.2	36	233.6	49	229.1
11	97.4	24	151.4	37	241.8	50	254.1
12	100.0	25	156.7	38	250.3	-	-
13	103.5	26	162.2	39	69.4	-	-

The table that follows details the DCS tones of the XRS Connect radio.

<b>DCS Tone Chart</b>											
<b>DCS</b>	<b>Code</b>	<b>DCS</b>	<b>Code</b>	<b>DCS</b>	<b>Code</b>	<b>DCS</b>	<b>Code</b>	<b>DCS</b>	<b>Code</b>	<b>DCS</b>	<b>Code</b>
1	023	19	116	37	225	55	325	73	452	91	627
2	025	20	122	38	226	56	331	74	454	92	631
3	026	21	125	39	243	57	332	75	455	93	632
4	031	22	131	40	244	58	343	76	462	94	654
5	032	23	132	41	245	59	346	77	464	95	662
6	036	24	134	42	246	60	351	78	465	96	664
7	043	25	143	43	251	61	356	79	466	97	703
8	047	26	145	44	252	62	364	80	503	98	712
9	051	27	152	45	255	63	365	81	506	99	723
10	053	28	155	46	261	64	371	82	516	100	731
11	054	29	156	47	263	65	411	83	523	101	732
12	065	30	162	48	265	66	412	84	526	102	734
13	071	31	165	49	266	67	413	85	532	103	743
14	072	32	172	50	271	68	423	86	546	104	754
15	073	33	174	51	274	69	431	87	565	-	-
16	074	34	205	52	306	70	432	88	606	-	-
17	114	35	212	53	311	71	445	89	612	-	-
18	115	36	223	54	315	72	446	90	624	-	-

The table that follows details the UHF CB operating frequencies of the XRS Connect radio.

UHF CB Operating Frequencies					
CH	Frequency (MHz)	CH	Frequency (MHz)	CH	Frequency (MHz)
1	476.425	28	477.100	55	476.7875
2	476.450	29	477.125	56	476.8125
3	476.475	30	477.150	57	476.8375
4	476.500	31	477.175	58	476.8625
5	476.525	32	477.200	59	476.8875
6	476.550	33	477.225	60	476.9125
7	476.575	34	477.250	61	476.9375
8	476.600	35	477.275	62	476.9625
9	476.625	36	477.300	63	476.9875
10	476.650	37	477.325	64	477.0125
11	476.675	38	477.350	65	477.0375
12	476.700	39	477.375	66	477.0625
13	476.725	40	477.400	67	477.0875
14	476.750	41	476.4375	68	477.1125
15	476.775	42	476.4625	69	477.1375
16	476.800	43	476.4875	70	477.1625
17	476.825	44	476.5125	71	477.1875
18	476.850	45	476.5375	72	477.2125
19	476.875	46	476.5625	73	477.2375
20	476.900	47	476.5875	74	477.2625
21	476.925	48	476.6125	75	477.2875
22	476.950	49	476.6375	76	477.3125
23	476.975	50	476.6625	77	477.3375
24	477.000	51	476.6875	78	477.3625
25	477.025	52	476.7125	79	477.3875
26	477.050	53	476.7375	80	477.4125
27	477.075	54	476.7625		

	Emergency use only (Australia)
	Telemetry / Selcall use only. Voice transmission is inhibited as required by AS/ NZS 4365.2011
	Guard band channel. Transmission is inhibited as required by AS/ NZS 4365.2011
	Repeater input channels (Duplex)
	Repeater output channels (Duplex)
	11 Officially designated call channel
	40 Road channel
	18 Caravan and motor home
	10 4WD / Off road

# INSTALLATION

## GENERAL

Your XRS Connect radio is supplied with either a slim, slide on mounting cradle or a U-shaped cradle depending on the model.





If the radio contains a built-in speaker, for maximum sound projection from the internal speaker we recommend the cradle be mounted above the radio to minimise any obstruction of the speaker. Alternatively, if it is necessary to mount the unit in a less audible location, an extension speaker can be used. The extension speaker plugs into the extension speaker socket on the radio's rear panel.

If the radio does not contain a built-in speaker, the cradle can be screwed or bolted to any convenient location in your vehicle's cabin (under or above the dash, on the centre console, under or beside the seat, etc) using the mounting slots provided in the cradle.

When planning your installation, avoid locations that are close to heaters or air conditioners.

The mounting cradle design supports a wide range of flexible mounting options. The radio can be mounted above or below the cradle and the cradle can be orientated with the arms extending either forwards or backwards to adjust the position of the front panel with reference to the mounting point.

## MOUNTING THE CRADLE

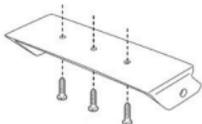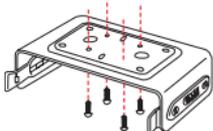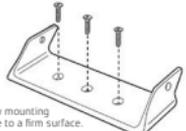XRS-335C	XRS-375C
<b>Option 1</b>	
	
<b>Option 2</b>	
 <p data-bbox="88 1339 207 1368">Screw mounting cradle to a firm surface.</p>	 <p data-bbox="450 1332 569 1361">Screw mounting cradle to a firm surface.</p>

## FITTING THE CONTROLLER MICROPHONE

Plug the 8 pin plug into the socket on the front of the main unit or alternatively you can use the adapter and extension cable supplied with the radio (XRS-335C and XRS-375C only). If the main unit is not easily accessible this adapter will allow you to bring the microphone socket to a more convenient position. Attach the microphone clip to a convenient location near your driving position using screws or a 3M VHB adhesive patch (3MAP). Slide the bollard on the back of the microphone into the clip to secure it.



## DC POWER CONNECTION


The XRS-335C radio is designed for 13.8 volt DC, negative earth installations only (i.e. Where the negative terminal of the battery is connected to the chassis or frame of the vehicle). The XRS-375C radio can support 13.8 or 27.6 volt DC supplies.

There are two recommended methods of installation.

## RADIO REMAINS ON WHEN THE IGNITION SWITCH IS OFF

Connect the radio's negative (black) lead to the vehicle's chassis, or if preferred, directly to the battery's negative terminal. The radio's positive (red) lead should be connected via the 2 amp fuse to the battery's positive terminal.

Alternatively, the positive lead could be connected into the fuse box at a point that has the supply voltage continuously available (on the battery side of the ignition switch) via the 2 amp fuse.

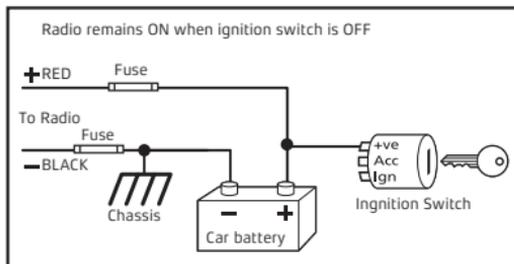


If you are connecting directly to the battery, please review the 'Auto Power-Down' feature for information on options to turn the radio off after a user-selectable time.

## RADIO TURNS ON AND OFF WITH THE IGNITION SWITCH

---

Connect the radio's negative (black) lead to the vehicle's chassis, or if preferred, directly to the battery's negative terminal. The radio's positive (red) lead should connect to an accessory point in the vehicle's fuse box via the 2 amp fuse. This point should supply voltage only when the ignition switch is turned ON or in the ACCESSORY position via the 2 amp fuse.

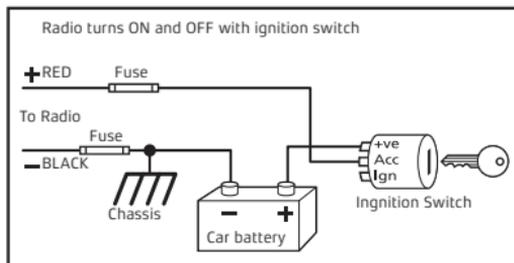

## HIGH VOLTAGE DETECTION

---

The radio has a built-in, high voltage detection system to warn you if an over voltage situation occurs. For the XRS-335C, if the power supply voltage exceeds 18 volts DC, the display will flash 'Voltage too high!' for 1 second and will sound a warning beep. If you are transmitting, 'Voltage too high!' will be displayed and the output power will be reduced to 1 watt. For the XRS-375C, the 'High DC' warning will display if the supply voltage exceeds 36 volts.




If the 'Voltage too high!' warning appears you should switch your radio OFF and disconnect it from the power source, before locating the cause of the trouble.

**NOTE:** The 'Voltage too high!' warning will remain on the display even if the normal voltage level is restored. You will need to switch the radio OFF then ON again to reset it and clear the 'Voltage too high!' warning.

## XRS-335C MOUNTING THE RADIO

### Mounting the radio

Orientate the holes in the chassis with those in the cradle arms then insert and tighten the gimbal knobs.

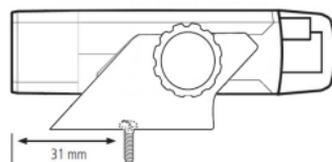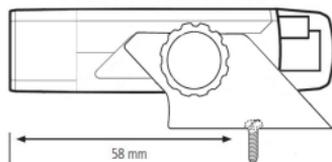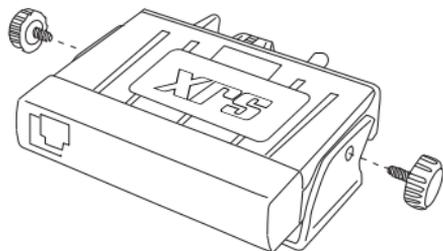

### Inserting the microphone

Plug the microphone's 8 pin plug into the socket on the front of the main unit.




## XRS-375C MOUNTING THE RADIO

---

### Inserting the radio

Slide radio fully into cradle until it clicks into place.

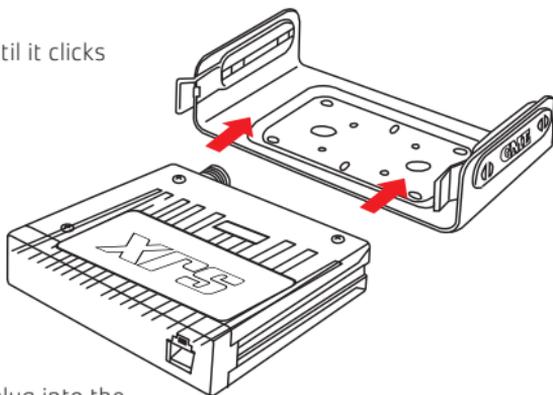


### Inserting the microphone

Plug the microphone's 8 pin plug into the socket on the front of the main unit.



### Removing the radio

Gently spread tabs

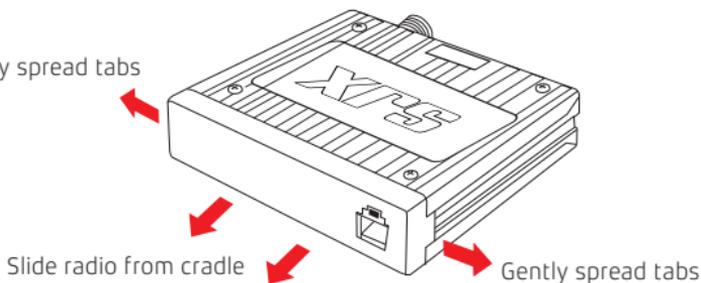

## **ANTENNA CONNECTION**

---

It is essential to select a good quality, high efficiency, 477 MHz antenna. A poor quality antenna or one not designed for the specific frequency band you are using will give very poor performance. GME has a wide range of suitable 477 MHz UHF CB antennas to suit most installations and applications. We recommend contacting your local GME retailer for advice.

Connect the antenna cable to the rear antenna socket using an FME coaxial connector.

## **NOISE SUPPRESSION**

---


The inherent design of FM transceivers results in a high level of resistance to ignition and electrical interference. However in some installations it may be necessary to take additional steps to help reduce or eliminate noise interference.

During installation, try to route the DC battery leads, the antenna lead or any accessory wires away from the engine compartment, ignition or alternator wiring. If the noise continues, it may be necessary to fit a suppression kit in which case we recommend you consult an auto electrician for advice specific to your installation.


Higher frequency electrical interference cause by electric motors can be suppressed directly at the motor terminals.

## WIRING

### XRS-335C

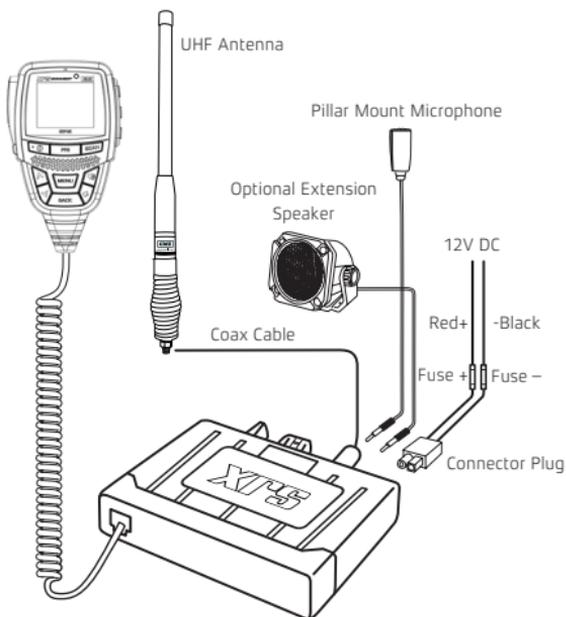

### XRS-375C

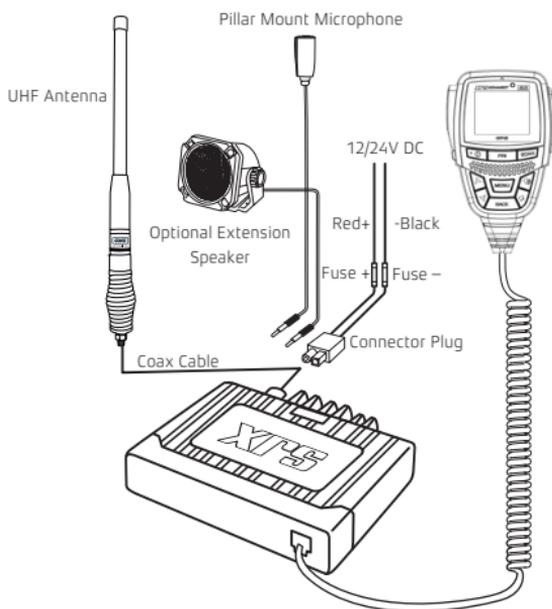

# SPECIFICATIONS

## ELECTRICAL

### General

<b>Compliant Specification:</b>	Meets AS/NZS 4365 for radio communications equipment in the UHF citizen and personal radio service
<b>Frequency Range TX:</b>	476.425-477.4125 MHz
<b>Number of Channels:</b>	80 CB + 400 Receive only Channels Across 8 Zones
<b>Channel Spacing:</b>	12.5 kHz / 25 kHz
<b>Operation Mode:</b>	Simplex or half Duplex with repeater talk-around
<b>Scanning Speed:</b>	20 ms per channel (50 channels per second)
<b>Antenna Impedance:</b>	50 Ohms nominal
<b>Nominal Battery Voltage:</b>	XRS-335C: 12 volts DC XRS-375C: 12 or 24 volts DC
<b>Recommended Operating Voltage Range:</b>	XRS-335C: 10 - 14 volts DC XRS-375C: 10 - 28 volts DC
<b>Battery Polarity:</b>	Negative Earth
<b>Over-current Protection:</b>	In-line 2 amp fuse

### Transmitter

<b>RF Output:</b>	5 watts
<b>Spurious Emission:</b>	< - 70 dBc
<b>Frequency Error:</b>	< $\pm$ 1.5 kHz
<b>Modulation:</b>	FM
<b>Maximum Deviation:</b>	< $\pm$ 2.5 kHz at + 20 dB AF limiting

### Receiver

<b>Sensitivity:</b>	-122 dBm for 12 dB SINAD
<b>Selectivity:</b>	-60 dB at $\pm$ 12.5 kHz
<b>Audio Output Power:</b>	3 W (4 $\Omega$ )
<b>Audio Signal to Noise:</b>	>45 dB unweighted

## MECHANICAL SPECIFICATIONS AND CONNECTIONS

---

### XRS-335C

<b>Dimensions:</b>	100mm (W) x 86mm (D) x 22mm (H)
<b>Weight:</b>	196 Grams
<b>Operating Temperature:</b>	-10° C to +60°C
<b>12 Volt Power Supply:</b>	Two core cable with bulkhead connector in rear panel
<b>Antenna Connection:</b>	FME Panel Socket
<b>External Speaker:</b>	3.5 mm Mono Jack
<b>External Microphone</b>	3.5 mm Mono Jack
<b>Front Microphone Port:</b>	8 Pin RJ45 Connection

### XRS-375C

<b>Dimensions:</b>	128mm (W) x 117mm (D) x 32mm (H)
<b>Weight:</b>	390 Grams
<b>Operating Temperature:</b>	-10° C to +60°C
<b>12/24 Volt Power Supply:</b>	Two core cable with bulkhead connector in rear panel
<b>Antenna Connection:</b>	FME Panel Socket
<b>External Speaker:</b>	3.5 mm Mono Jack
<b>External Microphone</b>	3.5 mm Mono Jack
<b>External PTT Switch</b>	2.5 mm Mono Jack
<b>Front Microphone Port:</b>	8 Pin RJ45 Connection

## BLUETOOTH

---

<b>Bluetooth</b>	Bluetooth 5.1 Class 1
<b>Max RF Power</b>	+11dBm
<b>Frequency Range</b>	2402MHz ~ 2480MHz

Specifications are subject to change without notice or obligation.

### 1. Consumer guarantees

- 1.1 Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
- 1.2 To the extent we are able, we exclude all other conditions, warranties and obligations which would otherwise be implied.

### 2. Warranty against defects:

- 2.1 This Warranty is in addition to and does not limit, exclude or restrict your rights under the Competition and Consumer Act 2010 (Australia) or any other mandatory protection laws that may apply.
- 2.2 We warrant our goods to be free from defects in materials and workmanship for the warranty period (see warranty table) from the date of original sale (or another period we agree to in writing). Subject to our obligations under clause 1.2, we will at our option, either repair or replace goods which we are satisfied are defective. We warrant any replacement parts for the remainder of the period of warranty for the goods into which they are incorporated.
- 2.3 To the extent permitted by law, our sole liability for breach of a condition, warranty or other obligation implied by law is limited.
  - (a) In the case of goods we supply, to any one of the following as we decide –
    - (i) The replacement of the goods or the supply of equivalent goods.
    - (ii) The repair of the goods.
    - (iii) The cost of repairing the goods or of acquiring equivalent goods.
  - (b) In the case of services we supply, to any one of the following as we decide –
    - (i) The supplying of the services again
    - (ii) The cost of having the services supplied again.

- 2.4 For repairs outside the warranty period, we warrant our repairs to be free from defects in materials and workmanship for three months from the date of the original repair. We agree to re-repair or replace (at our option) any materials or workmanship which we are satisfied are defective.
- 2.5 We warrant that we will perform services with reasonable care and skill and agree to investigate any complaint regarding our services made in good faith. If we are satisfied that the complaint is justified, and as our sole liability to you under this warranty (to the extent permitted at law), we agree to supply those services again at no extra charge to you.
- 2.6 To make a warranty claim you must before the end of the applicable warranty period (see warranty table), at your own cost, return the goods you allege are defective, provide written details of the defect, and give us an original or copy of the sales invoice or some other evidence showing details of the transaction.

Before returning any goods you will be required to follow the available options:

Contact our Customer Support Team on 1300 463 463 or [techsupport@gme.net.au](mailto:techsupport@gme.net.au).

A customer support team member will troubleshoot and validate if your product is faulty. If so, they will email you a product RMA (Return Material Authorisation).

Products that are authorised to be returned to GME must include the following:

RMA form (Return Material Authorisation)

A copy of your proof of purchase, the faulty product, including all accessories

- 2.7 Send your claim to:  
GME Pty Ltd.  
17 Gibbon Rd, Winston Hills, NSW 2153, Australia.  
Tel: (02) 8867 6000 Fax: (02) 8867 6199.  
Email: [servadmin@gme.net.au](mailto:servadmin@gme.net.au)
- 2.8 If we determine that your goods are defective, we will pay for the cost of returning the repaired or replaced goods to you, and reimburse you for your reasonable expenses of sending your warranty claim to us.

### 3. What this warranty does not cover:

3.1 This warranty will not apply in relation to:

- (a) Goods modified or altered in any way.
- (b) Defects and damage caused by use with non Standard Communications products.
- (c) Repairs performed other than by our authorised representative.
- (d) Defects or damage resulting from misuse, accident, impact or neglect.
- (e) Goods improperly installed or used in a manner contrary to the relevant instruction manual; or
- (f) Goods where the serial number has been removed or made illegal.

### 4. Warranty period:

4.1 We provide the following warranty on GME products. No repair or replacement during the warranty period will renew or extend the warranty period past the period from original date of purchase.

PRODUCT TYPE	WARRANTY PERIOD
UHF CB RADIO	5 Years
ACCESSORIES	1 Year
MICROPHONE	3 Years



**gme.net.au**  
GME Pty Ltd

17 Gibbon Road, Winston Hills NSW 2153, Australia  
Part Number: 311218 Drawing Number: 54918-1