



B11

Bluetooth® Waterproof Speaker



Model:
CS2606



Please read and save all instructions to ensure safe and effective use of this product.

Instruction Manual

WARNING

- Please store and use this product in an environment of normal temperature.
- Please do not expose this product to rain or moisture environment.
- Please do not disassemble, repair or modify this product by yourself without authorization.
- When cleaning this product, please use a soft cloth or with little water if needed, please do not use chemicals for cleaning.
- In order to have an extended product life and protect your hearing, please avoid listening to songs on maximum volume for long time.
- The product is with built-in lithium battery, to avoid dangers, please do not discard or put it in the fire.


FEATURES

- A unified portable speaker with integrated handle, boasting a sleek and refined design that exudes sophistication and heightened recognition.
- Enhanced by dual-color silicone branding and fabric craftsmanship, offering increased aesthetic appeal and a contemporary feel.
- The dynamic RGB lighting, synchronized with music, creates a lively lighting effect, enhancing the enjoyment of outdoor activities.
- Multiple link function allows 100+ same speaker to be linked together for huge, immersive music feast.
- Power bank for emergency recharging.
- Water resistant IPX6, perfect for beach, poolside, boat and more outdoor activities
- Google Assistant and Siri voice control activation.
- Dedicated with Hands-free Mic for easy picking up the call
- Multiple play modes,BT,Aux,USB
- •Built-in lithium rechargeable battery 11.1V 7000mAh

PACKAGE CONTENTS

- 1 x Portable Bluetooth Speaker
- 1 x Type-C Charging cable
- 1 x 3.5 AUX-IN cable
- 1 x User manual

PRODUCT OVERVIEW

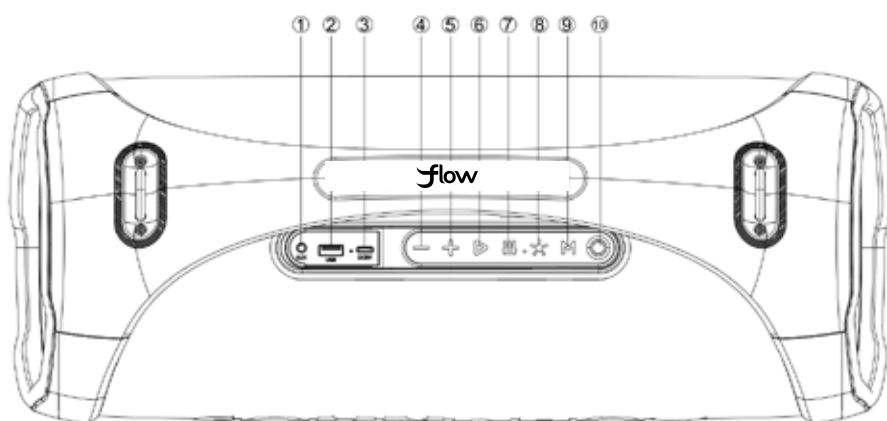

- | | |
|-------------------------------|--|
| 1. AUX port | 7. EQ button |
| 2. USB Port/power bank output | 8. RGB light |
| 3. Type-C Charging jack | 9. Mode button (turn among Bluetooth, USB disk and AUX-IN) |
| 4. Backward/Volume down | 10. Power On/Off |
| 5. Forward/Volume up | |
| 6. Play/Pause | |

USAGE INSTRUCTIONS

Power On/Off

Long-press the Power button to turn the speaker on and off.

Auto Power off

To save power and prevent the battery from running out, the speaker will auto power off in any of below cases:

- In Bluetooth mode, if the speaker is not connected to smartphone in 10 minutes.
- In Bluetooth mode, if the speaker is connected to the smartphone, but no music is played for 10 minutes.
- In USB mode, if the music is paused for 10 minutes.
- In AUX mode, if the music is paused for 10 minutes.

Bluetooth

- Turn the power button to "ON". The speaker enter Bluetooth mode automatically.
- Activate Bluetooth of smartphone and search for device name "FLOW B11" then connect it .
- Play the music from your smartphone and enjoy.
- Hold Forward/Back for next/previous song. Press briefly to adjust volume.
- Short-press Play/Pause button to play/pause the music; Long-press Play/Pause button for 2S to disconnect the Bluetooth connection with mobile device when in non-calling status.
- Double-press Play/Pause button to activate voice assistant.
- Short-press Mode button to switch playing modes; Long-press for 2S to activate Multiple Link Function.
- Short-press EQ button to switch different sound effects.
- Short-press RGB light button to switch different light modes.

Playing music from USB disk

- Turn the Power button to "ON".
- Insert USB flash disk into slot, the speaker will play the stored music automatically.
- Hold Forward/Back for next/previous song. Press briefly to adjust volume.
- Short-press Mode button to switch playing modes; Long-press for 2S to activate Multiple Link Function.

- Short-press Play/Pause button to play/pause the music.
- Short-press EQ button to switch different sound effects.
- Short-press RGB light button to switch different light modes.

Notes: Under any playing mode, when you insert a USB disk to the speaker, it will switch to play the USB disk.

AUX-IN

- For other compatible music devices, use audio cable to connect from the device's "Line Out" to the "Aux In" of this device, then enjoy...
- Under any playing mode, when you use the audio cable to connect the device, it will auto-switch to the AUX mode.
- When using an external device, all functions can be controlled by the external device.
- Hold Forward/Back for next/previous song. Press briefly to adjust volume.
- Short-press Mode button to switch playing modes; Long-press for 2S to activate Multiple Link Function.
- Short-press Play/Pause button to mute the music.
- Short-press EQ button to switch different sound effects.
- Short-press RGB light button to switch different light modes.

Multiple Link

– The multiple link function create a stronger sound effect of identical speakers.

1. HOST speaker (only one)

- Turn on one speaker and playing music by connected devices (Smartphone/ USB/ AUX in devices). Long press Mode button for 2s to activate the multiple link function, this speaker will be the HOST speaker. Then long press the Mode button for 2 seconds, they will automatically pairing with the master speaker.
- After the connection is successful, the indicator on both HOST and Subsidiary speakers will be solid white.
- After the connection is successful, user can make operation in HOST speaker only (adjust volume/switch playing mode/pause, etc).
- Long press the Mode button for 2 seconds again, HOST speaker will exit multiple link status and disconnect from ALL Subsidiary speaker.

2. Subsidiary speakers (can be 99pcs+)

- Turn on the other identical speakers (must be the same BT pair name) and make sure they are in Bluetooth pairing mode.
- Turn on one speaker and playback the music in USB mode or AUX in mode. Long press the Mode button to activate the multiple link function. This speaker will be the master speaker.
- Then long press the Mode button for 2 seconds, they will automatically pairing with the HOST one speaker.
- After the connection is successful, the indicator on both HOST and all Subsidiary speakers will be solid white.
- After the connection is successful, all Subsidiary speakers is unable to make any operation but exit multiple link status by long-press Mode button for 2 seconds.
- Long press the Mode button for 2 seconds again, Subsidiary speakers will exit multiple link status and disconnect from HOST speaker, but HOST speaker are still in multiple link status.

EQ Introduction

This unit offers 2 kinds of sound effect, short-press EQ button to change the EQ modes.

RGB Light

The RGB light is on when speaker powered on, user can short-press the RGB Light button to switch three different light modes and turn it off.

Activating Voice Assistant

- Make Bluetooth connection with your smartphone.
- Double-press Play/Pause button to activate voice assistant.

Hands-free call

- Under Bluetooth connection status, if there is an incoming call, user can short-press Play/Pause button to accept the call or long-press Play/Pause button to reject the call.
- During the call, user can long-press Play/Pause button to switch to talking on the phone.
- Short-press Play/Pause button or operate on smartphone to end the call.

Power Bank Function for emergency recharging

- Turn the speaker on.
- Connect other device to the 5V 2A out port via a charging cable.

Reset Functionality

Long-press button Volume Down for more than 5 seconds , device will power off. Meanwhile it will clear all Bluetooth connection memory, and restore factory setting.

More Remarks

- Default volume is at 50% status of max volume.
- Play time may vary depending on volume level and music style.

How to charge

- The charger is not included in the package, please charge this speaker via rated 5V/2A or 9V/2A charger.
- Charge time should be 6.5 hours by 9V/2A charger or 10 hours by 5V/2A. When charge, the Charging Indicator is in RED, Once the speaker is full charged, the red LED lights will be off.
- When battery voltage is low, the speaker will prompt for recharging.
- To protect the battery, please do not use the speaker while it is charging.

SPECIFICATIONS

Bluetooth version:	V5.3
Speaker Size:	5.25 inch x 1 + 2.75 inch x 2 + 1.5inch x 2
RMS power output:	110W
Peak power output:	220W
Battery Capacity:	11.1V 7000mAh
Play time:	3hours at maximum volume & 5 hours at 50% volume with RGB light off
Frequency Response:	Woofer: 60hz-20khz
Bluetooth connecting range:	10m
Multiple link connection range:	10m
Product size:	484 x 192 x 255mm

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555