digitech

Jellyfish Aquarium Lamp



Model:
GE4322

3+

Instruction Manual

WARNINGS

- Not suitable for children under 3 years, small parts may present a choking hazard.
- Recommended for children aged 3 years and over.
- Adult supervision is recommended during operation.
- Remove all packaging materials before giving the toy to a child and dispose of the materials safely.
- Do not modify or attempt to repair the aquarium lamp.
- Do not use the aquarium lamp if any component is damaged or loose.
- Keep the aquarium lamp's base away from water, heat or excessive moisture.

Operation & Care:

- Store the product in a cool, dry location away from direct sunlight.
- Turn the aquarium lamp off before attempting to clean.
- Do not submerge the whole aquarium lamp in water when attempting to clean.
- When filling with water, only use fresh clean water.
- Clean the product using a soft, dry cloth.
- Do not use solvents or abrasive cleaners.
- Do not immerse any part of the base in water.


Power & Safety:

- Only use the supplied USB power cable.
- Connect the power cable to a suitable 5V USB power source.
- Do not use a damaged power cable or USB power source.
- Use the product indoors in a dry, well-ventilated location.
- Do not leave the product operating overnight.
- Keep the product away from fire, direct sunlight and excessive heat.


PRODUCT DIAGRAM



INSTALLATION

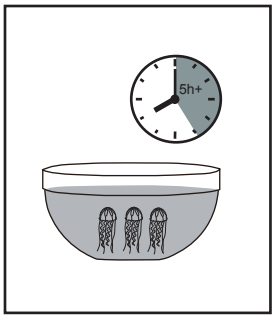


1. Remove the jellyfish from the package and soak them in clean, fresh water for up to 5 hours.

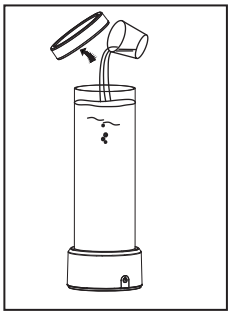


2. Remove the lid from the aquarium lamp, fill it with clean, fresh water.

Note: Ensure the water does not spill onto the base of the product.

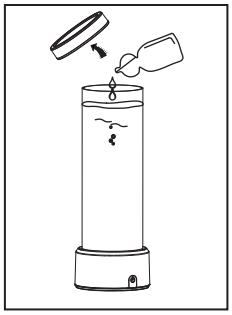


3. It is recommended to add 1-2 drops of mild liquid dishwashing detergent to help the jellyfish move more freely.

Note: Do not use bleach, laundry detergent or other chemicals.
Note: If the water becomes cloudy or foamy, please remove the water repeat step 1.

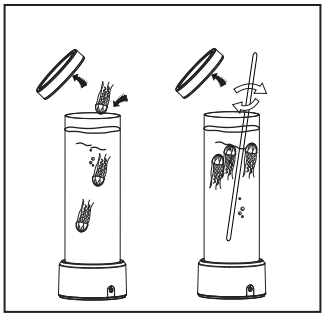


4. Place the jellyfish slowly into the aquarium upside down so the tenticles are facing upwards. This will help eliminate any air bubbles inside the jellyfish which will cause them to float to the top.


Note: If the jellyfish continue to float to the top of the tank, ensure that all the air bubbles are removed from the inside of the jellyfish. You can do this by either using a long stick to remove the air bubbles or remove them from the tank and place them back inside upside down.

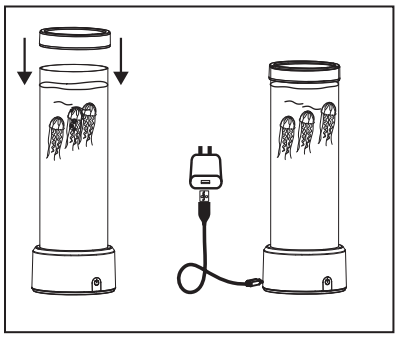

5. Place the lid back over the aquarium lamp. Connect the USB power cable to a 5VDC,1A mains power adaptor.

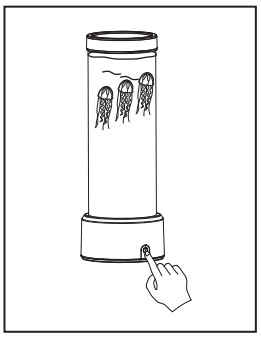

6. Turn on the aquarium lamp using the power switch/led control button.

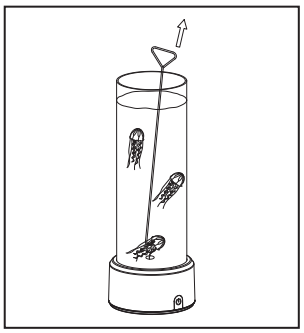

5. Press the power switch/LED control to change the LED colour to your preference. Press and hold the power switch to turn the unit off.

LED CONTROL

Press the power switch/LED control to change the colours of the base and tube.

- Tube Colour: Press the button once to enter colour mode, continue the press the button to cycle through each colour.
- Base Colour: Press the button twice to enter the base colour mode, continue the press the button to cycle through each colour.

⚠ WARNING

CHOKING HAZARD - Small Parts.

Not suitable for children under 3 years.

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.
If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.
This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.
To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.
Any expenses relating to the return of your product to the store will normally have to be paid by you.
The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:
Electus Distribution
Address 46 Eastern Creek Drive, Eastern Creek NSW 2766
Ph. 1300 738 555