digitech

Scalp Massager





Model:
GH1019

Please read and save all instructions to ensure safe and effective use of this product.

Instruction Manual

PRODUCT OVERVIEW

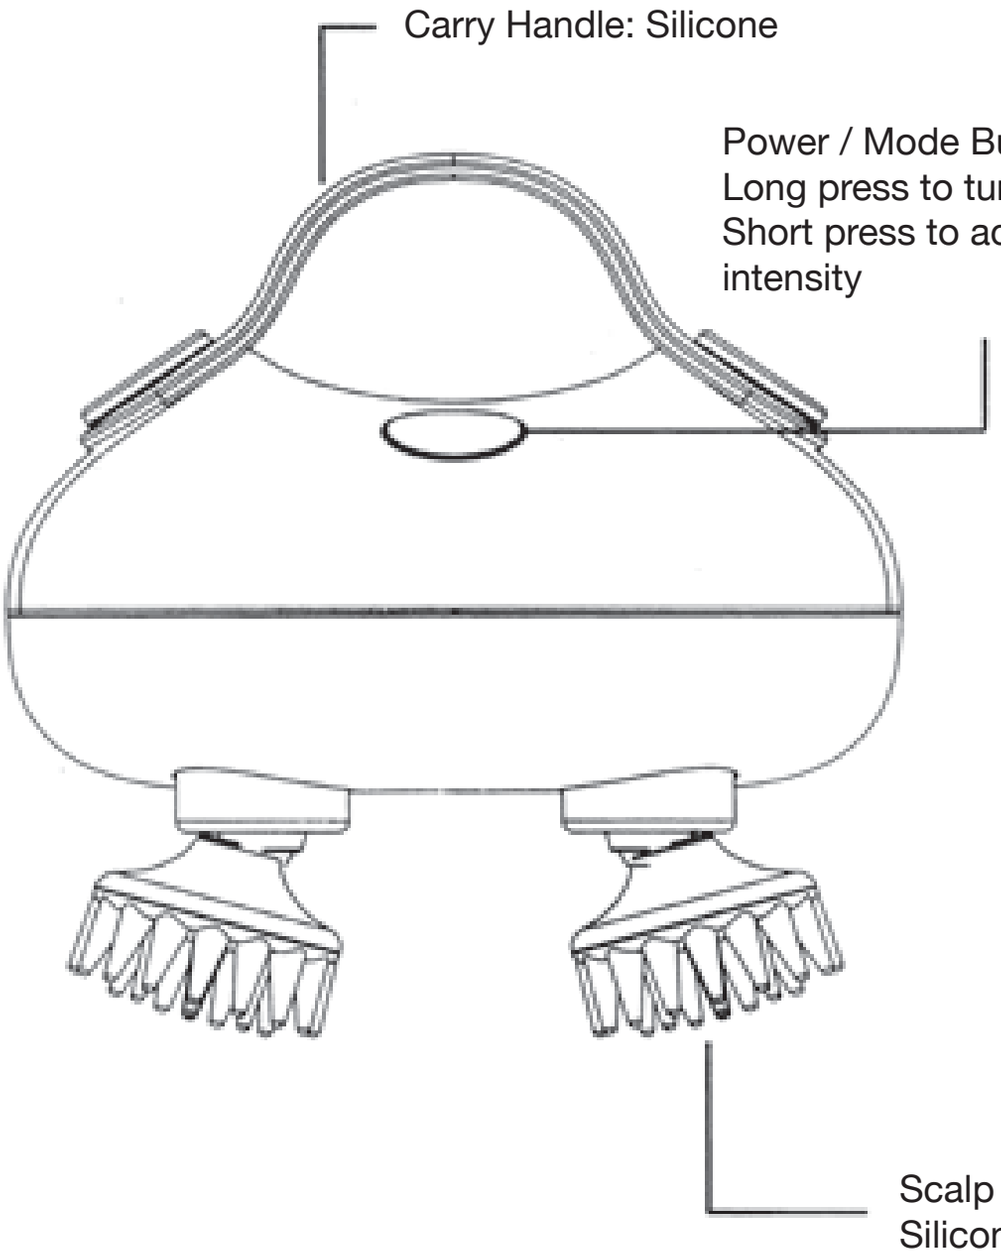

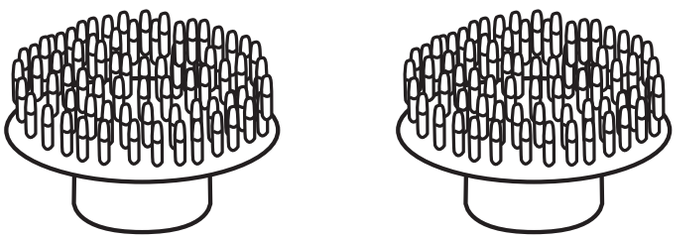

Interchangeable Massage Heads: For different scalp massage sensations

OPERATING INSTRUCTIONS

1. Power on - With the massager switched off, press and hold the Power / Mode Button to turn it on. The device starts in Mode 1 by default and operates for up to 90 minutes.

2. Select a Massage Mode - Briefly press the Power / Mode Button to cycle through the massage modes:

- **Mode 1 – Slow Mode:** The purple indicator light remains on.
- **Mode 2 – Fast Mode:** The blue indicator light remains on.
- **Mode 3 – Alternating Mode:** The massage speed automatically switches between slow and fast. The yellow indicator light remains on.

The red light turns on automatically when the device is switched on.

3. Power Off - Press and hold the Power / Mode Button while the device is operating to switch it off.

4. Charging - Connect the device to a suitable 5V USB power source.

- The red indicator light pulses while charging.
- The green indicator light remains on when fully charged.

SPECIFICATIONS

Rated Charging Voltage:	5V
Battery Capacity:	800mAh
Battery Voltage:	3.7V
Operating Time:	Up to 90 (lowest speed)
Charging Time:	up to 3 hours

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.
If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.
This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.
To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.
Any expenses relating to the return of your product to the store will normally have to be paid by you.
The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:
Electus Distribution
Address 46 Eastern Creek Drive, Eastern Creek NSW 2766
Ph. 1300 738 555