digitech

6"
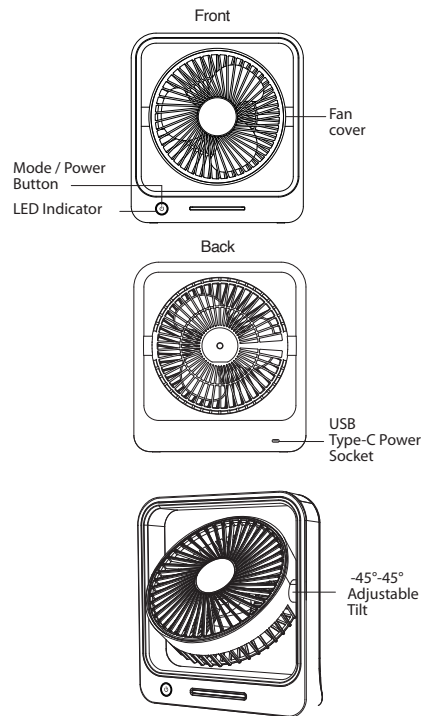# Rechargeable Desktop Fan

Model:
GH1298

Instruction Manual

Box Contents:

1 x 6" Rechargeable Desktop Fan
1 x USB Charging Cable

Product Diagram:

Front

Fan cover

Mode / Power Button

LED Indicator

Back

USB Type-C Power Socket

-45°-45° Adjustable Tilt

Operation:

1. It is recommended to charge the unit before use; plug in the USB Type-C cable provided to the power socket of the desktop fan.

2. Plug the opposite end of the USB cable to a USB charging source such as a computer or USB mains adaptor.

3. Press the mode/power button once to turn the unit on low speed, 2 times for medium speed, 3 times for high speed and 4 times for wind mode. Wind mode will cycle between low and high fan speeds to emulate the wind.

4. Press and hold the mode/power button for up to 2 seconds for the fan to turn off. There will no LED's lit when the fan is turned off.

Note: When cleaning the fan, you can take off the front fan cover by rotating it counter clockwise and then clockwise when attaching it back on.

Fan Mode/Power Button:

Button	Fan Speed
Press 1 Time	Low
Press 2 Times	Medium
Press 3 Times	High
Press 4 Times	Wind Mode
Press & Hold	Power Off

LED Indicator:

LED	Description
White On	Powered On
White Off	Powered Off
White & Red On	Powered On & Charging
Red On	Charging
Red Flashing	Low Battery

Safety:

1. Do not pull apart the casing of the fan or touch the fan blades while turned on to avoid damage and injury.
2. Keep the fan away from high temperatures as it may cause damage to the unit and battery.
3. Do not expose the fan to water, moisture or liquids.

Specifications:

RPM: 1600 (Low)
                2100 (Medium)
                2500 (High)
                1600-2500 (Wind)
Tilt: -45°-45°
Run Time: 1.5-6.5 Hours
Charge Time: 2-3 Hours
Battery: 3.7V Li-ion, 2400mAh
Power: 5VDC, 1A (USB-C)
Dimensions: 245(W) x 227(H) x 71(D)mm