PRODUCT MANUAL

GT4344

1:10 Scale

RC High Speed 4WD Truggy



R-NZ

WARNING: PLEASE READ THE INSTRUCTION MANUAL CLEARLY BEFORE OPRATING THE PRODUCT

WARNINGS

- Not suitable for children under 3 years, small parts may present a choking hazard.
- Recommended for children aged 14 years and over.
- Adult supervision is required during operation and charging.
- Remove all packaging materials before giving the toy to a child and dispose of the materials safely.
- Do not modify or attempt to repair the RC truggy.
- Do not use the RC truggy if any component is damaged or loose.
- Keep the RC truggy away from water, heat or excessive moisture.



Operation & Care:

- Only operate the RC truggy indoors or in a suitable open area away from obstacles.
- Do not touch the RC truggy's wheels while it is moving.
- Switch off the RC truggy and remote control when not in use.
- Store the product in a cool, dry location away from direct sunlight.
- Clean the product using a soft, dry cloth.
- Do not use water, solvents or abrasive cleaners.
- Do not immerse any part of the product in water.


Battery Charging & Safety:

- The rechargeable battery must only be charged by an adult or under direct adult supervision.
- Only use the supplied USB charging cable.
- Connect the charging cable to a suitable 5V USB power source.
- Do not use a damaged charging cable, battery or USB power source.
- Charge the product indoors in a dry, well-ventilated location.
- Place the product on a hard, flat and non-flammable surface while charging.
- Do not leave the product unattended while charging.
- Do not charge the product overnight.
- Disconnect the charging cable when charging is complete.
- Do not operate the RC truggy while it is charging.
- Do not cover the RC truggy or charging cable during charging.
- Keep the product away from fire, direct sunlight and excessive heat.
- Do not attempt to remove or replace the internal battery unless the product is specifically designed for user replacement.
- Stop charging immediately if the battery becomes hot, leaks or shows any sign of damage.
- Insert batteries according to the polarity markings inside the battery compartment.
- Do not mix old and new batteries.
- Do not mix alkaline, standard carbon-zinc or rechargeable batteries.
- Do not mix batteries of different brands or capacities.
- Do not attempt to recharge non-rechargeable batteries.
- Rechargeable batteries must be removed from the remote control before charging.
- Rechargeable batteries must only be charged under adult supervision.
- Remove exhausted batteries immediately.
- Remove the batteries if the remote control will not be used for an extended period.
- Do not short-circuit the battery terminals.
- Do not dispose of batteries in fire.
- Keep new and used batteries away from young children.

BOX CONTENTS

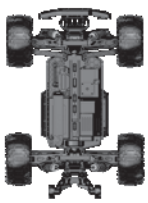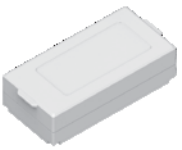				
RC Car	Remote Control	USB Charging Cable	Battery	Accessory package

CHARGING

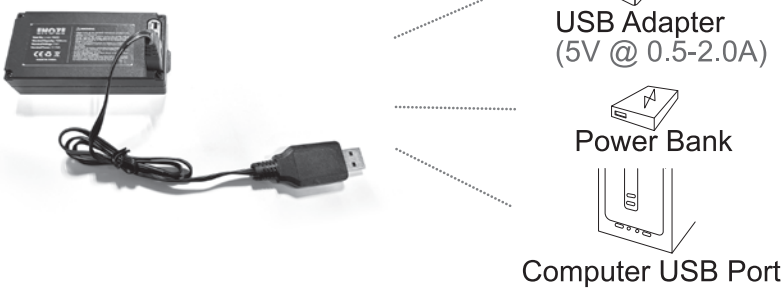


The battery isn't fully charged when it's made. When the car **battery low**, the car will start age Cutoff） protection function to protect the battery, the car can **only turn, not forward and** charge the battery.


1. Plug the USB charging cable into the USB charging port of the computer, power bank or 0.5~2.0A).
2. Connect the battery wire to the USB charging cable.
3. Charging time: about 180 minutes.
4. The green indicator light on the USB charging cable will flash when it is charging and will charged.

ATTENTION:
- Please keep the battery in sight when charging. DO NOT put the battery on a flammable s
- If battery pack and USB charging cable are damaged, immediately stop using it and repla as soon as possible.

PRODUCT DIAGRAM

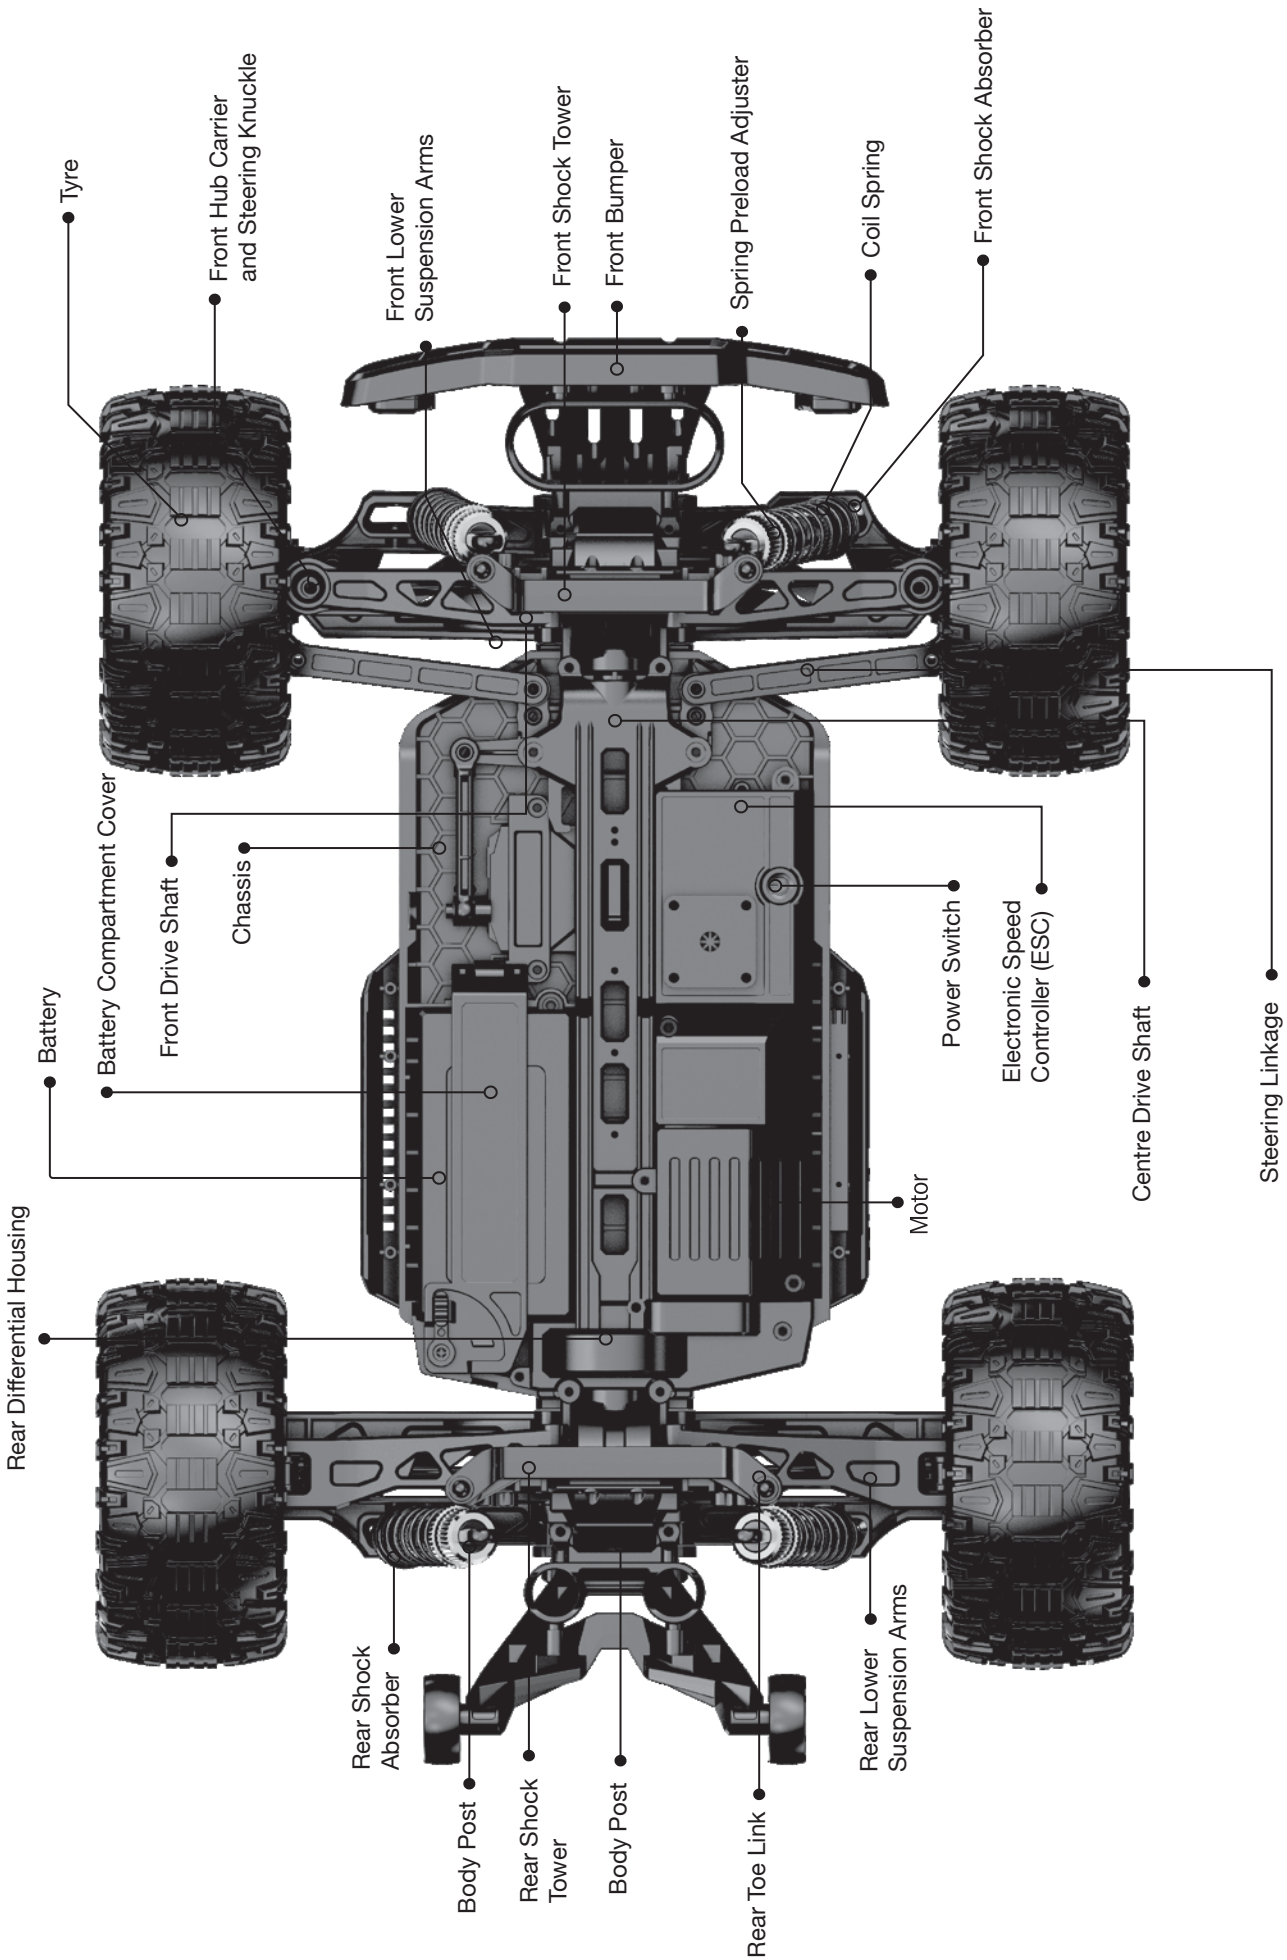

REMOTE CONTROL DIAGRAM

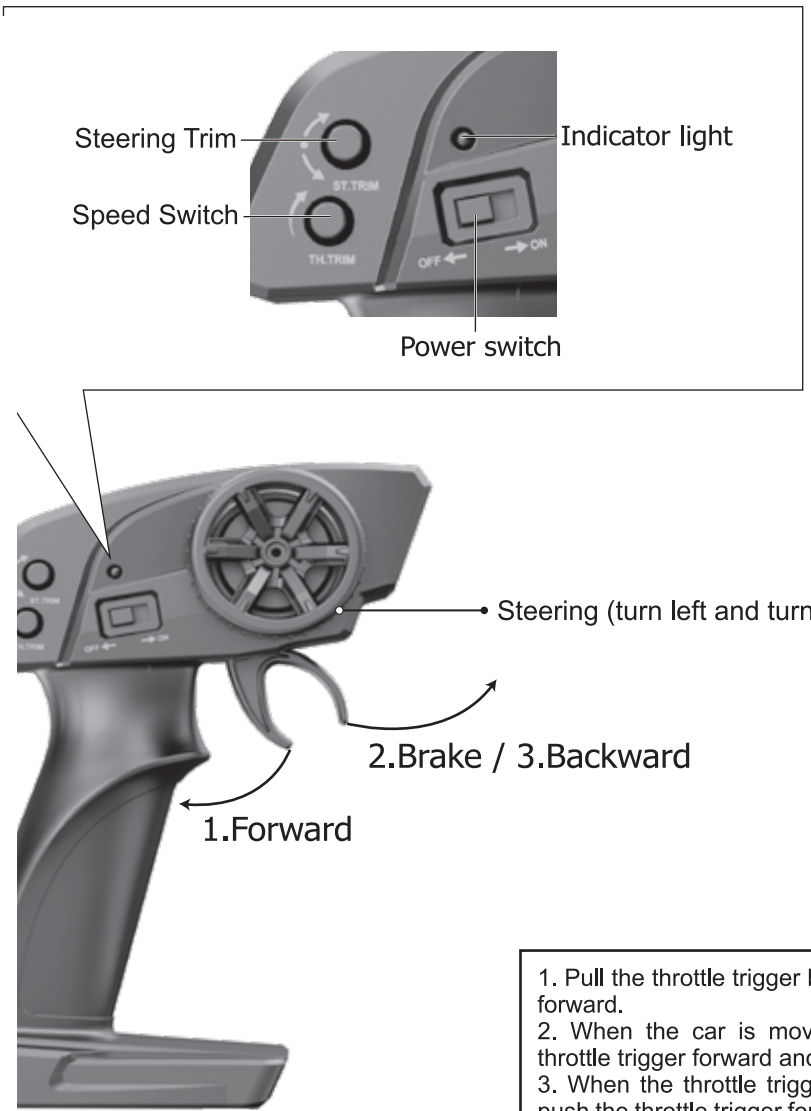

1. Pull the throttle trigger backward, the car goes forward.
2. When the car is moving forward, push the throttle trigger forward and the car will brake.
3. When the throttle trigger returns to midpoint, push the throttle trigger forward again and the car will go reverse.


S

	Status	Description
Solid red light	Normal operation	The remote control is operating normally.
Slow flashing red light (0.5 secs on / 0.5 secs off)	Low battery	Replace the remote control batteries with new ones.
Rapidly flashing red light (0.125 seconds on / 0.125 seconds off)	Connection failed	The transmitter and receiver have not paired successfully. Switch off both the remote control and the vehicle, then restart them. If the connection still fails, check for excessive distance, low battery power, or a damaged antenna.


BATTERY INSTALLATION

RC CAR BATTERY


If the car will not be used for a long time, make sure to turn it off and remove the battery.

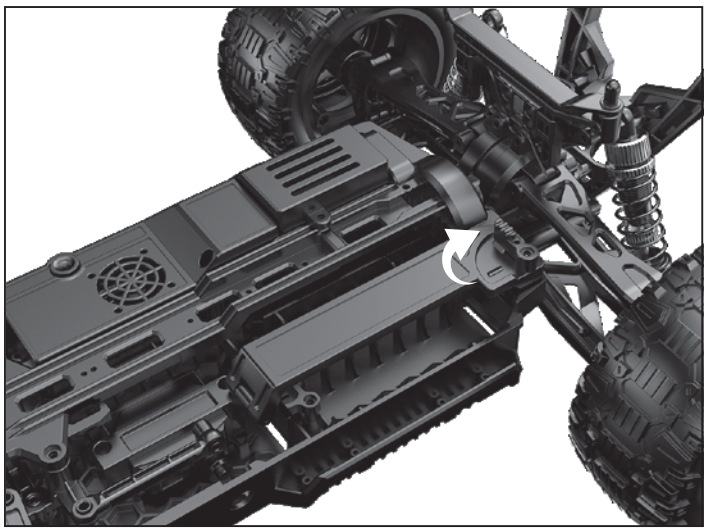


1.Open the battery compartment switch clockwise

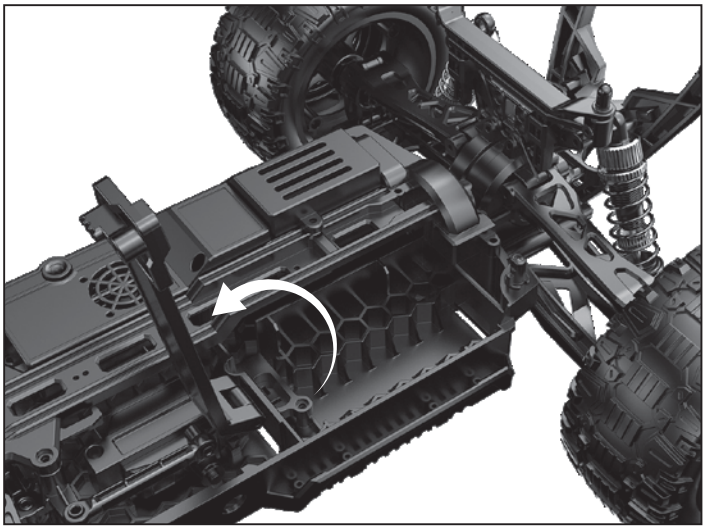

2.Open the battery compartment cover

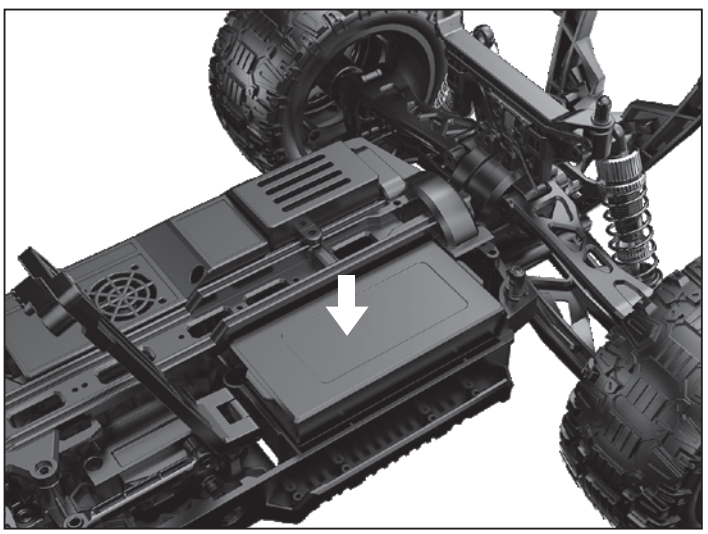

3.Install the battery accurately

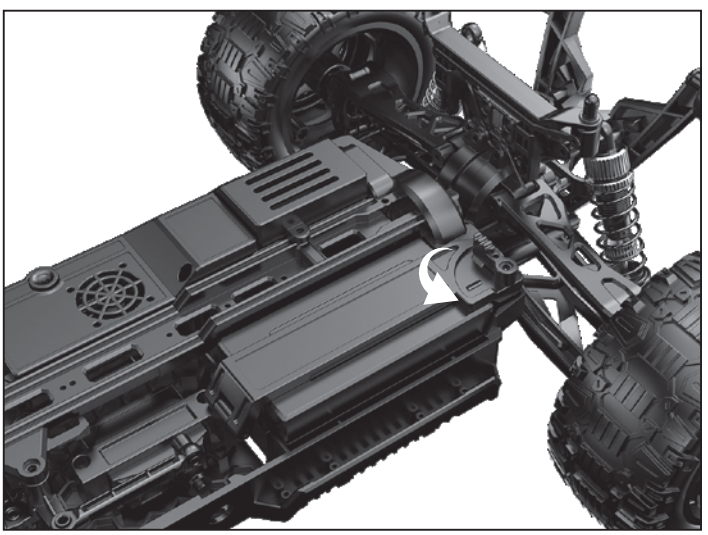

4.Replace the battery cover and close the battery compartment switch clockwise.

REMOTE CONTROL BATTERY




① Push the battery cover out.
② Insert 2 AA batteries (not included) in the correct direction.
③ Push the battery cover in.


If the remote will not be used for a long time, make sure to turn it off and remove the batteries.

When the battery of the remote control is low, the indicator light of the remote control will flash slowly.

OPERATION

PAIRING

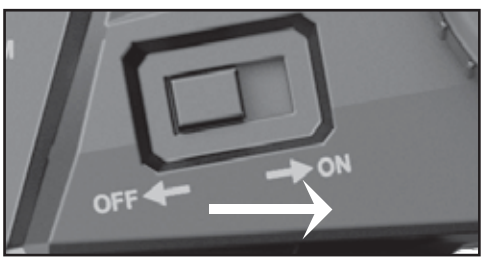


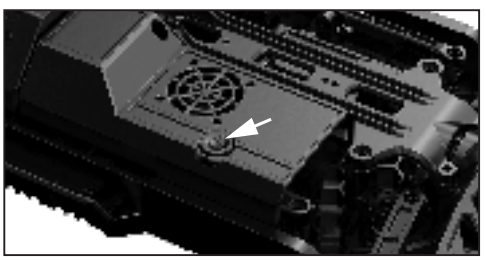

① Make sure the battery is charged.
② Insert batteries to the car and the remote.
③ Turn on the car power switch and the remote power switch.（**DO NOT pull the throttle trigger during pairing**）
④ Both will automatically pair. (The remote power indicator and the car power indicator will flash while waiting for the pairing process and will turn solid once pairing has been successful)

OPERATION

FORWARD, REVERSE, TURN LEFT, TURN RIGHT

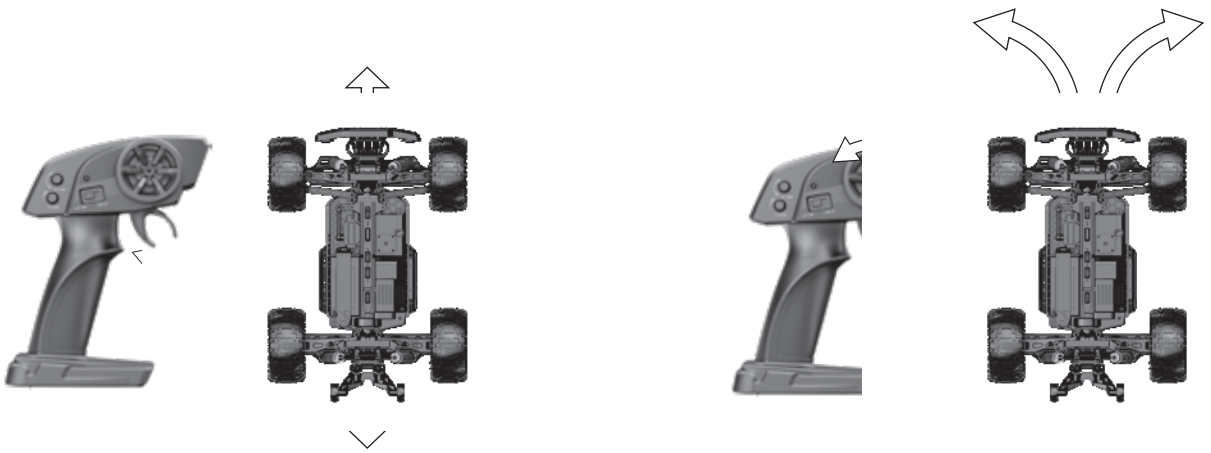

Pull the throttle trigger backward, the car goes forward. Push the throttle trigger forward, the car brakes, then push the throttle trigger forward again, the car goes reverse. (The throttle controls the speed)

Turn the steering control wheel counterclockwise, the car turns left. Turn the steering control wheel clockwise, the car turns right. (Control the Steering Wheel Rotation Angle can control the degree of turning)

MAXIMUM SPEED CONTROL


Turn the speed switch counterclockwise to reduce the maximum speed of the car.



Turn the speed switch clockwise to increase the maximum speed of the car.

STEERING TRIM



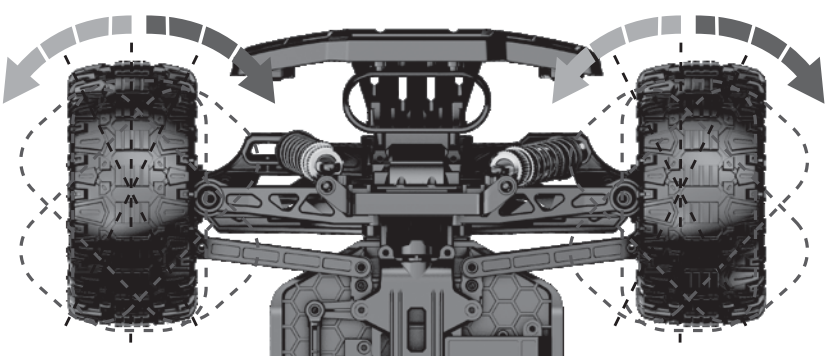

If while the car is moving forward and veering to left then turn the steering trim konb to the right until the car is moving straight. If while the car is moving forward and veering to right then turn the steering trim konb to the left until the car is moving straight.

FREQUENTLY ASKED QUESTIONS

ISSUE	POSSIBLE CAUSE	SOLUTION
The vehicle does not respond to the remote control.	1. The vehicle battery or remote control batteries are depleted. 2. The vehicle is outside the remote-control range.	1. Recharge the vehicle battery or replace the remote control batteries. 2. Move the remote control closer to the vehicle.
The vehicle will not move forward or backward.	1. Low battery power. 2. Moisture has caused an electrical fault. 3. Poor connection between the motor and the electronic speed controller.	1. Recharge the battery. 2. Allow the vehicle to dry completely. 3. Check and reconnect the wiring between the motor and the electronic speed controller.
The vehicle will not turn left or right.	1. Low battery power. 2. Moisture has caused an electrical fault. 3. Poor connection between the steering system and the electronic speed controller.	1. Recharge the battery. 2. Allow the vehicle to dry completely. 3. Check and reconnect the wiring between the steering system and the electronic speed controller.
The battery will not charge.	1. The USB power source has an unsuitable output voltage or current. 2. The charging cable or battery is damaged.	1. Use a 5 V USB power source rated between 0.5 A and 2 A. 2. Check the charging cable and battery for damage and replace them if necessary.
The wheels rotate during pairing.	The throttle trigger was moved during pairing.	Repeat the pairing process without touching the throttle trigger.

SPECIFICATIONS

Speed: Up to 40km/h
Frequency: 2.4GHz
Remote Control Range: Up to 100m
Play Time: Up to 20 Minutes
Charge Time: Up to 180 Minutes
Batteries:
Truggy: 2S 7.4V Li-ion, 1500mA
Remote Control: 2 x AA (Not Included)
Dimensions: 400(L) x 286(W) x 170(H)mm

WARNINGS

1. According to the instructions provided on the manual. Some part needs to be assembled and adjusted by adults.
2. Please use under the guidance of an adult.
3. Please promptly put away the packing materials so as not to cause harm to children.
4. Do not operate on a location where water is trapped or under the rain. Parts of the product may malfunction if exposed to water.
5. Do not touch the rotating wheel to avoid injury.
6. The product contains small parts that may pose a risk of ingestion or suffocation.
7. To remotely control the product on the road or in a crowd to avoid accidents.
8. It is necessary to periodically check the charging USB cable, plug, housing and other components, and immediately unplug if found to be damaged.
9. This product can only use the factory configured USB cable to charge the product battery.
10. USB cable, battery box, and battery must be inserted into the same specified power supply as the product symbol.
11. The USB charging cable and the battery is not a toy.
12. Disconnect the rechargeable USB cable before cleaning the toy.
13. If you observe electrical charges during product usage, turn off the device immediately.
14. When installing or replacing the battery, pay attention to the correct polarity of the battery.
15. The remote control car uses a 7.4V Lithium battery.
16. It is strictly prohibited do the following actions such as but not limited to disassemble, modify, crash, puncture, drop, throw in a fire or any other means of causing damage to the product to avoid harm to the user and other participants.
17. Do not expose the battery to prolonged exposure to sunlight to prevent danger.
18. It is advisable to store the battery at a temperature below 30°C. Do not store it in a place with heat, high temperature, or humidity to avoid danger.
19. Non-rechargeable batteries cannot be charged.
20. When charging a rechargeable battery, adult supervision is required.
21. The rechargeable battery should be removed from the toy before charging.
22. Do not mix old and new or different types of batteries.
23. Only use the USB cable configured by this product when charging the battery.
24. Do not disassemble the battery or modify the battery to avoid risk of fire or explosion.
25. After the battery is used, it should be taken out of the remote control car. After cooling the battery, you can then charge it and placed it on a safe location. Unplug the battery outlet from the USB charging cable when not in used and disconnect the power line.
26. Stop using the battery as soon as it gives a foul smells or suddenly becomes hot, deformed, discolored, or otherwise abnormal during use or charging.
27. After the battery of the remote controller runs out, battery temperature is usually high and would recommend to wait for
30 minutes before charging the battery again. Otherwise, it may damage the battery.
28. Drained batteries should be removed immediately.
29. Do not cause the electrical supply of the wiring port to short circuit.
30. If you do not use the product for a long time, remove the batteries of the remote control car and remote control.
31. instructions contains important product information, please give time to read for better product experience.

GENERAL INFORMATION

BATTERY WARNING:

1. Failure to follow all the instructions may result in serious injury, irreparable damage to the battery and may cause a fire, smoke or explosion.
2. Always check the battery's condition before charging or using it.
3. Replace the battery if damaged, gives a foul odor or show signs of overheating, discoloration, deformation and leakage.
4. Never use anything other than the approval charger the battery. Always use a balancing charger for battery. It is recommended that you do not to use any other charger than the one provided with the product.
5.The battery temperature must never exceed 60°C (140°F) otherwise the battery could be damaged or ignite.
6. Never charge on a flammable surface, near flammable products or inside a vehicle (perferably place the battery in a non-flammable and nonconductive container).
7. Never leave the battery unattended during the charging process. Never disassemble or modify the housing's wiring, or puncture the cells. Always ensure that the charger output voltage corresponds to the voltage of the battery. Do not overcharge the batter that may cause short circuit.
8. Never expose the battery to moisture or direct sunlight, or store it in a place where temperatures could exceed 60°C(car in the sun, for example).
9. Always keep it out of reach from children.
10. Improper battery use may result in a fire, explosion or other hazard.
11. Non-rechargeable batteries are not be charge again. Rechargeable batteries are only to be charged with the supervision of an adult.
12. Different types of batteries or new or used batteries which are different are not be mixed.
13. Batteries are to be inserted with the correct polarity.
14. The supply terminal should be used well to avoid short circuit. Examination of the transformer and battery charger regularly is encouraged to check any damage in the cord, plug, enclosure and other parts. If damage is observed, it must not be used until it has been repaired.
15.The packaging has to be kept since it contains important information.
16.The toy is only to be connected to Class II equipment bearing the symbol. 



WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.
If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.
This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.
To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.
Any expenses relating to the return of your product to the store will normally have to be paid by you.
The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:
Electus Distribution
Address 46 Eastern Creek Drive, Eastern Creek NSW 2766
Ph. 1300 738 555