GT4348

R/C ROBOT ICE HOCKEY ARENA SET



User Manual

Warnings

WARNINGS

- Not suitable for children under 3 years, small parts may present a choking hazard.
- Recommended for children aged 6 years and over.
- Adult supervision is required during operation.
- Remove all packaging materials before giving the toy to a child and dispose of the materials safely.
- Do not modify or attempt to repair the robots.
- Do not use the robots if any component is damaged or loose.
- Keep robots away from water, heat or excessive moisture.


Operation & Storage:

- Only operate the robots indoors or in a suitable open area away from obstacles.
- Switch off robots and remote control when not in use.
- Securely close the battery compartment before use.
- Store the product in a cool, dry location away from direct sunlight.
- Clean the product using a soft, dry cloth.
- Do not use water, solvents or abrasive cleaners.
- Do not immerse any part of the product in water.

Battery Safety:


- Keep the product away from fire, direct sunlight and excessive heat.
- Do not crush, puncture, bend, open, short-circuit or incinerate the battery.
- Do not expose the batteries to water or other liquids.
- Insert batteries according to the polarity markings inside the battery compartment.
- Do not mix old and new batteries.
- Do not mix alkaline, standard carbon-zinc or rechargeable batteries.
- Do not mix batteries of different brands or capacities.
- Do not attempt to recharge non-rechargeable batteries.
- Remove exhausted batteries immediately.
- Remove the batteries if the remote control will not be used for an extended period.
- Do not short-circuit the battery terminals.
- Do not dispose of batteries in fire.
- Keep new and used batteries away from young children.

Remote Control Diagram

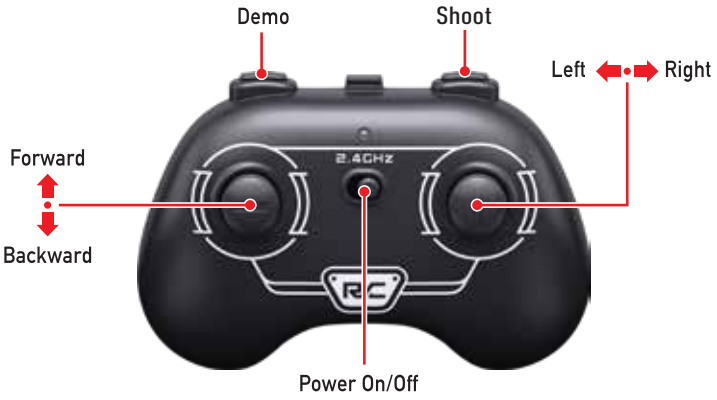


Move forward/backward, turn left/right, spin left/right, carry/take/push the ball and one-key demonstration.


Box Contents

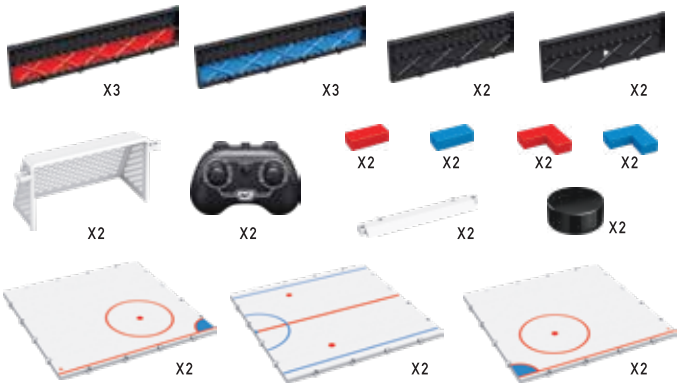

Stadium Installation

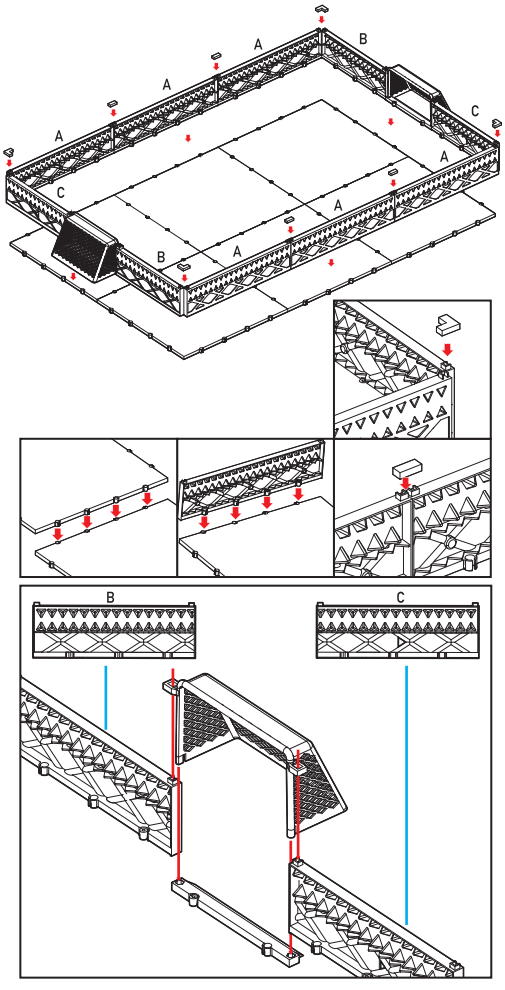


Remote Control Battery Installation

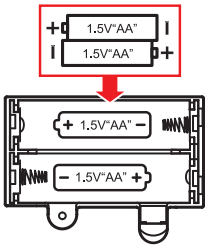

Use 2x1.5V “AA” Size Batteries (Not Included)

Note: Install the batteries by polarity.

Robot Battery Installation

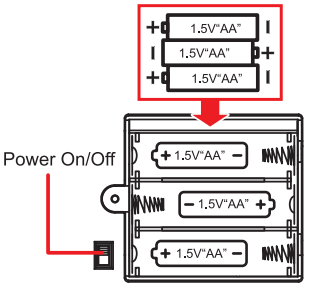

Use 3x1.5V “AA” Size Batteries (Not Included)

Note: Install the batteries by polarity.

Specifications

Remote Control Range: Up to 20m
Play Time: Up to 40 Minutes
Batteries:
Robots: 3 x AA Each (Not Included)
Remote Control: 2 x AA Each (Not Included)

Warranty Information

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.
If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.
This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.
To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.
Any expenses relating to the return of your product to the store will normally have to be paid by you.
The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:
Electus Distribution
Address 46 Eastern Creek Drive, Eastern Creek NSW 2766
Ph. 1300 738 555

