GT4380

1:64 Scale Mini RC Forklift



R-NZ

INSTRUCTION MANUAL

WARNING & SAFETY

WARNINGS

- Not suitable for children under 3 years, small parts may present a choking hazard.
- Recommended for children aged 4 years and over.
- Adult supervision is required during operation and charging.
- Remove all packaging materials before giving the toy to a child and dispose of the materials safely.
- Do not modify or attempt to repair the forklift.
- Do not use the forklift if any component is damaged or loose.
- Keep the forklift away from water, heat or excessive moisture.

Operation & Care:

- Only operate the forklift indoors or in a suitable open area away from obstacles.
- Switch off the forklift and remote control when not in use.
- Store the product in a cool, dry location away from direct sunlight.
- Clean the product using a soft, dry cloth.
- Do not use water, solvents or abrasive cleaners.
- Do not immerse any part of the product in water.

Battery Charging & Safety:

- The rechargeable battery must only be charged by an adult or under direct adult supervision.
- Only use the supplied USB charging cable.
- Connect the charging cable to a suitable 5V USB power source.
- Do not use a damaged charging cable, battery or USB power source.
- Charge the product indoors in a dry, well-ventilated location.
- Place the product on a hard, flat and non-flammable surface while charging.
- Do not leave the product unattended while charging.
- Do not charge the product overnight.
- Disconnect the charging cable when charging is complete.
- Do not operate the forklift while it is charging.
- Do not cover the forklift or charging cable during charging.
- Keep the product away from fire, direct sunlight and excessive heat.
- Do not attempt to remove or replace the internal battery unless the product is specifically designed for user replacement.
- Stop charging immediately if the battery becomes hot, leaks or shows any sign of damage.

- Insert batteries according to the polarity markings inside the battery compartment.
- Do not mix old and new batteries.
- Do not mix alkaline, standard carbon-zinc or rechargeable batteries.
- Do not mix batteries of different brands or capacities.
- Do not attempt to recharge non-rechargeable batteries.
- Rechargeable batteries must be removed from the remote control before charging.
- Rechargeable batteries must only be charged under adult supervision.
- Remove exhausted batteries immediately.
- Remove the batteries if the remote control will not be used for an extended period.
- Do not short-circuit the battery terminals.
- Do not dispose of batteries in fire.
- Keep new and used batteries away from young children.

PACKAGE CONTENTS

- RC Forklift Truck
- 2.4GHz Remote Controller
- USB Type-C Charging Cable
- Pallet
- Removable Hook

BATTERY INSTALLATION

1. Open the battery compartment on the back of the remote controller.
2. Insert 2 × AAA (not included) batteries according to the polarity markings.
3. Close the battery compartment securely.


CHARGING THE FORKLIFT

1. Switch the forklift OFF before charging.
2. Connect the supplied USB Type-C cable to the charging port.
3. Connect the cable to a 5V USB power source.
4. The indicator light will show the charging status.
5. Disconnect the cable when charging is complete.

Charging time: Up to 30 minutes
Operating time: Up to 30 minutes

OPERATING INSTRUCTIONS

1. Switch on the forklift.
2. Switch on the remote controller.
3. Wait a few seconds for the controller and forklift to connect.
4. Use the controls as follows:
   - Forward / Backward: Move the forklift forward or backward.
   - Turn Left / Turn Right: Steer the forklift.
   - Raise Forks: Lift the forks.
   - Lower Forks: Lower the forks.
   - 50% Speed: Select reduced speed.
   - 100% Speed: Select maximum speed.
   - Left / Right Trim: Adjust the steering alignment if the forklift does not travel straight.

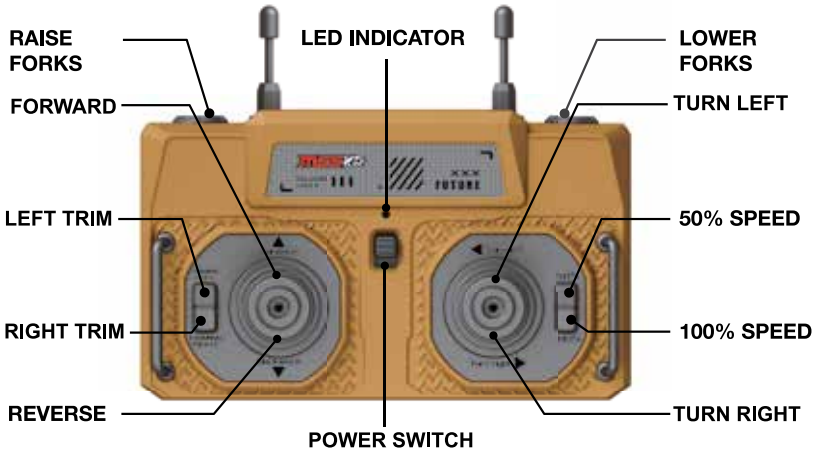

USING THE ACCESSORIES

- Attach the forks to lift and move the supplied pallet. The removable hook may be fitted for carrying suitable lightweight objects.
- Do not overload the forks or hook.

SPECIFICATIONS

Frequency: 2.4GHz
Remote Control Range: Up to 15m
Play Time: Up to 30 Minutes
Charging Time: Up to 30 Minutes
Batteries:
Forklift: 3.7V Li-ion, 150mA
Remote: 2 x AAA (Not Included)
Dimensions: 115(H) x 65(L) x 40(W)mm

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution
Address 46 Eastern Creek Drive, Eastern Creek NSW 2766
Ph. 1300 738 555