RC Tower Crane

GT4392



INSTRUCTION MANUAL

SAFETY & WARNING INFORMATION

WARNINGS

- Not suitable for children under 3 years, small parts may present a choking hazard.
- Recommended for children aged 6 years and over.
- Adult supervision is required during operation and charging.
- Remove all packaging materials before giving the toy to a child and dispose of the materials safely.
- Do not modify or attempt to repair the crane.
- Do not use the crane if any component is damaged or loose.
- Keep the crane away from water, heat or excessive moisture.

Operation & Care:


- Only operate the crane indoors or in a suitable open area away from obstacles.
- Switch off the crane and remote control when not in use.
- Store the product in a cool, dry location away from direct sunlight.
- Clean the product using a soft, dry cloth.
- Do not use water, solvents or abrasive cleaners.
- Do not immerse any part of the product in water.

Battery Charging & Safety:

- The rechargeable battery must only be charged by an adult or under direct adult supervision.
- Only use the supplied USB charging cable.
- Connect the charging cable to a suitable 5V USB power source.
- Do not use a damaged charging cable, battery or USB power source.
- Charge the product indoors in a dry, well-ventilated location.
- Place the product on a hard, flat and non-flammable surface while charging.
- Do not leave the product unattended while charging.
- Do not charge the product overnight.
- Disconnect the charging cable when charging is complete.
- Do not operate the crane while it is charging.
- Do not cover the crane or charging cable during charging.
- Keep the product away from fire, direct sunlight and excessive heat.
- Do not attempt to remove or replace the internal battery unless the product is specifically designed for user replacement.
- Stop charging immediately if the battery becomes hot, leaks or shows any sign of damage.


- Insert batteries according to the polarity markings inside the battery compartment.
- Do not mix old and new batteries.
- Do not mix alkaline, standard carbon-zinc or rechargeable batteries.
- Do not mix batteries of different brands or capacities.
- Do not attempt to recharge non-rechargeable batteries.
- Rechargeable batteries must be removed from the remote control before charging.
- Rechargeable batteries must only be charged under adult supervision.
- Remove exhausted batteries immediately.
- Remove the batteries if the remote control will not be used for an extended period.
- Do not short-circuit the battery terminals.
- Do not dispose of batteries in fire.
- Keep new and used batteries away from young children.

BOX CONTENTS

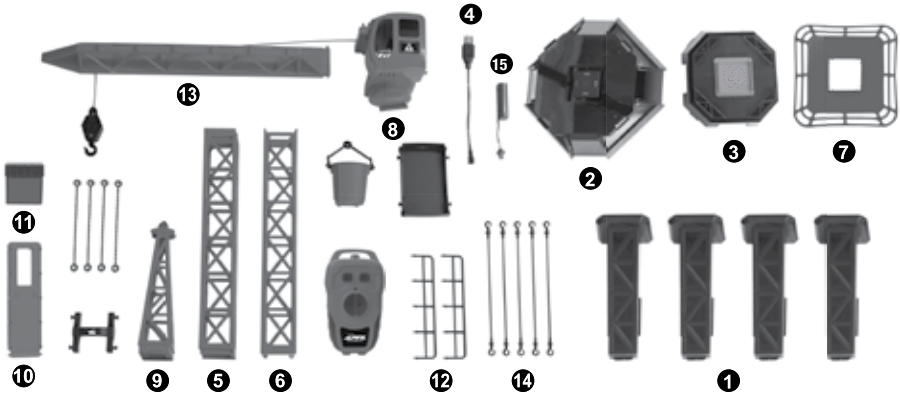


1 Support Legs (×4)
2 Bottom Base Platform
3 Turntable Base Piece
4 USB Charging Cable
5 Lower Tower Section
6 Upper Tower Section
7 Safety Guard Rail
8 Operator's Cabin
9 Tower Top Section
10 Counterweight Support
11 Counterweight
12 Remote Control
13 Main Boom
14 Support Cables
15 Rechargeable Battery

BUILD INSTRUCTIONS

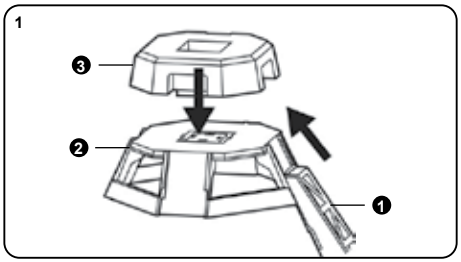


1. Assemble the Base

- Attach the top base piece (fig 3.) to the the bottom base piece (fig 2.) until it clicks into place.
- Attach the legs (Ref 1.) and slide it into the base (fig 2.), repeate this for all 4 legs.

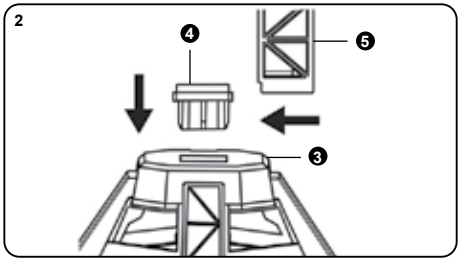


2. Install the Turntable

- Insert the turntable (fig 4.) into the centre of the base (fig 3.).
- Attach the first tower section (fig 5.) to the turntable (fig 4.)

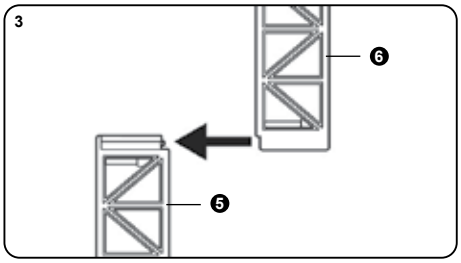


3. Build the Tower

- Connect the remaining tower sections together (fig 5-6).
- Ensure each section is fully inserted and securely locked before continuing.

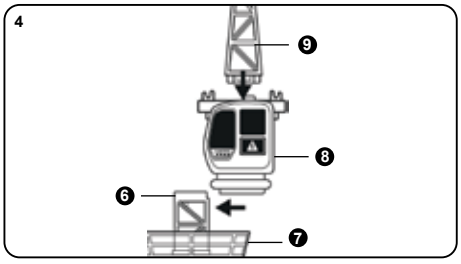


4. Install the Operator's Cabin

- Slide the platform (fig 7.) onto the tower section (fig 6.)
- Attach the operator's cabin (fig 8.) to the top tower section (fig 6.)
- Attach the tower antenna (fig 9.) to the top of the operator's cabin (fig 8.)

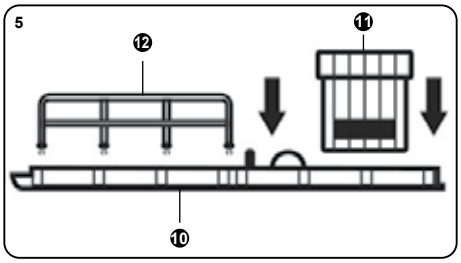


5. Install the Guard Rail

- Insert the guard rail (fig 12.) into the platform (fig 10).
- Insert the weight (Fig 11.) into the rear section of the boom (fig 10.)

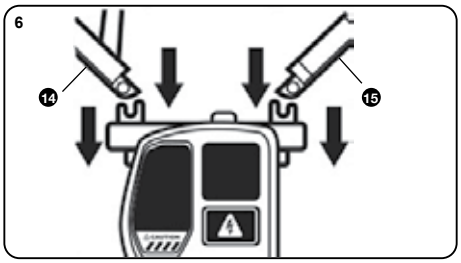

6. Install the Supports

- Attach the front and rear support sections (fig 14-15) to the top of the tower until.
- Ensure both boom sections are securely locked into place.

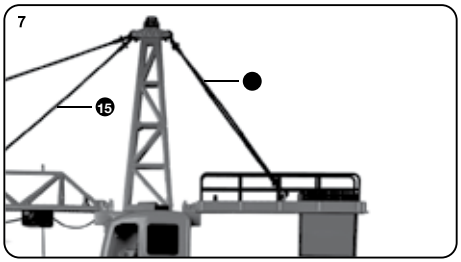


7. Attach the Hoist Cable

- Route the hoist cable over the pulley at the top of the tower.
- Attach the hook and bucket as shown in the illustration.
- Ensure the cable moves freely before operating the crane.

REMOTE CONTROL DIAGRAM




BATTERY INSTALLATION ON CONTROLLER

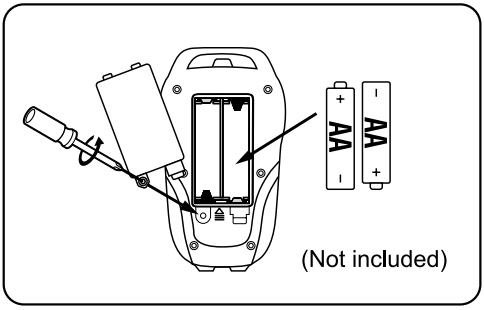


1. Unscrew the battery cover with phillips screwdriver.
2. Insert 2-AA batteries with polarities shown in battery compartment.
3. Close the battery cover and screw it.


BATTERY INSTALLATION ON TOWER CRANE

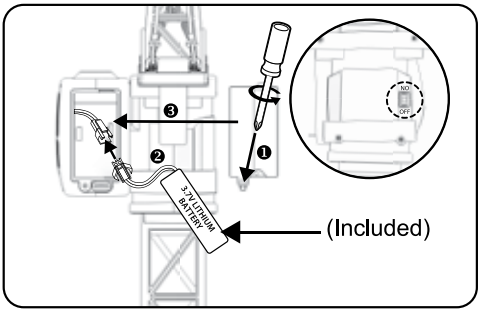


1. Switch to “OFF”
2. Unscrew the battery cover with phillips screwdriver.
3. Connect the cable and place the battery to the battery box.
4. Close the battery cover and screw it.

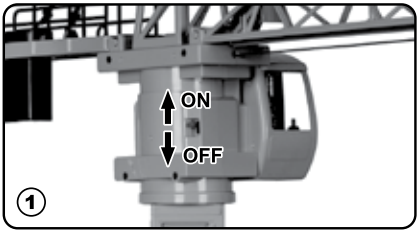


ON/OFF
Switch on the model.

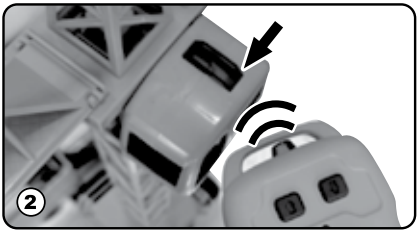


After turning on the tower, the remote control needs to be aligned with the light source for frequency matching, as shown in the picture 2.

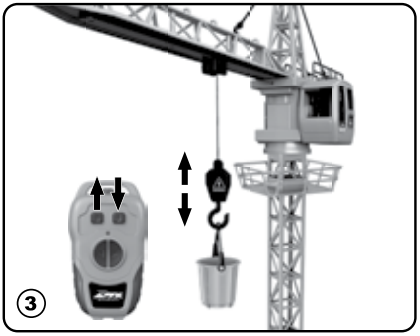

Hook rise/Hook down

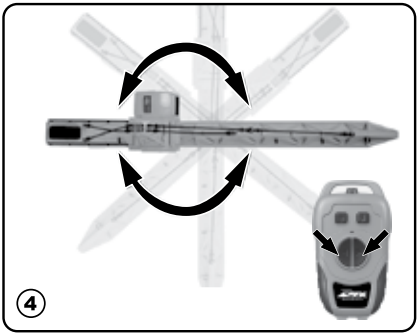

left handed rotation/right handed rotation

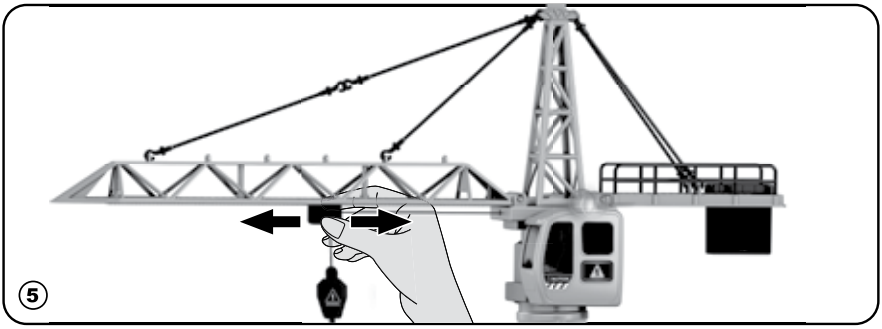

Trolley forward/ backward to move the trolley, button (A) must be pressed.
At the same time, you can push the trolley trolley forwards or backwards manually.

Note: This remote control uses infrared (IR) technology. Ensure there is a clear line of sight between the remote control and the toy. Obstacles and direct sunlight may interfere with the signal.

SPECIFICATIONS

Lift Capacity: 0.2kg
Remote: Infrared
Remote Control Range: Up to 10m
Play Time: Up to 30 Minutes
Charging Time: Up to 120 Minutes
Batteries:
Crane: 3.7V Li-ion, 500mAh
Remote: 2 x AA (Not Included)
Dimensions: 990(H) x 615(L) x 265(W)mm

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution
Address 46 Eastern Creek Drive, Eastern Creek NSW 2766
Ph. 1300 738 555