GT4396

RC Missile Launcher Truck



User Manual

R-NZ

SAFETY INFORMATION


Read these safety instructions carefully before using the product. Keep this manual for future reference.

WARNINGS
- Do not aim the missiles at the eyes or face.
- Not suitable for children under 3 years, small parts may present a choking hazard.
- Recommended for children aged 6 years and over.
- Adult supervision is required during operation and charging.
- Remove all packaging materials before giving the toy to a child and dispose of the materials safely.
- Do not modify or attempt to repair the missile launcher truck.
- Do not use the missile launcher truck if any component is damaged or loose.
- Keep the missile launcher truck away from water, heat or excessive moisture.

Operation & Storage:
- Only operate the missile launcher truck indoors or in a suitable open area away from obstacles.
- Switch off the missile launcher truck and remote control when not in use.
- Securely close the battery compartment before use.
- Store the product in a cool, dry location away from direct sunlight.
- Clean the product using a soft, dry cloth.
- Do not use water, solvents or abrasive cleaners.
- Do not immerse any part of the product in water.

Battery Charging & Safety:
- The rechargeable battery must only be charged by an adult or under direct adult supervision.
- Only use the supplied USB charging cable.
- Connect the charging cable to a suitable 5V USB power source.
- Do not use a damaged charging cable, battery or USB power source.
- Charge the product indoors in a dry, well-ventilated location.
- Place the product on a hard, flat and non-flammable surface while charging.
- Do not leave the product unattended while charging.
- Do not charge the product overnight.
- Disconnect the charging cable when charging is complete.
- Do not operate the missile launcher truck while it is charging.
- Allow the battery to cool before charging.
- Do not cover the missile launcher truck or charging cable during charging.
- Keep the product away from fire, direct sunlight and excessive heat.
- Do not crush, puncture, bend, open, short-circuit or incinerate the battery.
- Do not expose the battery to water or other liquids.
- Do not attempt to remove or replace the internal battery unless the product is specifically designed for user replacement.
- Stop charging immediately if the battery becomes hot, leaks or shows any sign of damage.
- Insert batteries according to the polarity markings inside the battery compartment.
- Do not mix old and new batteries.
- Do not mix alkaline, standard carbon-zinc or rechargeable batteries.
- Do not mix batteries of different brands or capacities.
- Do not attempt to recharge non-rechargeable batteries.
- Rechargeable batteries must be removed from the remote control before charging.
- Rechargeable batteries must only be charged under adult supervision.
- Remove exhausted batteries immediately.
- Remove the batteries if the remote control will not be used for an extended period.
- Do not short-circuit the battery terminals.
- Do not dispose of batteries in fire.
- Keep new and used batteries away from young children.

BOX CONTENTS

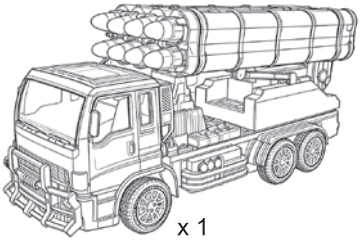


x 1

RC Missile Launcher Truck




x 1

Remote Control

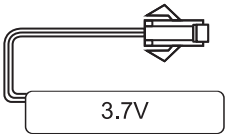

x 1

Battery

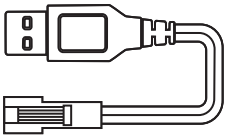


x 1

USB Charging Cable

PRODUCT DESCRIPTION

TRUCK

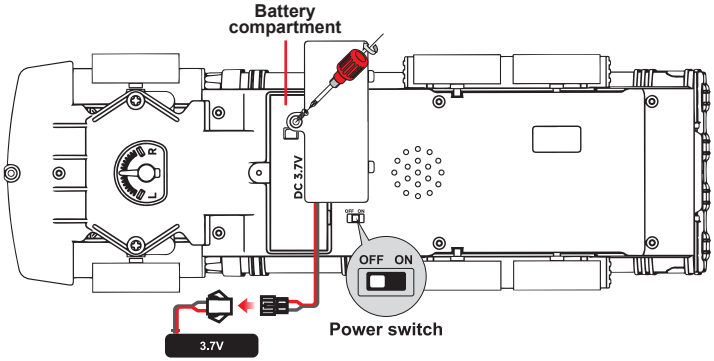

USE 3.7v Li-ion battery (included)


INSTALL THE BATTERIES


1.Unscrew the battery cover.

2.Open the battery compartment and connect li-ion battery with the RC truck.


3.Replace the battery cover and tighten the screws.


REMOTE CONTROLLER

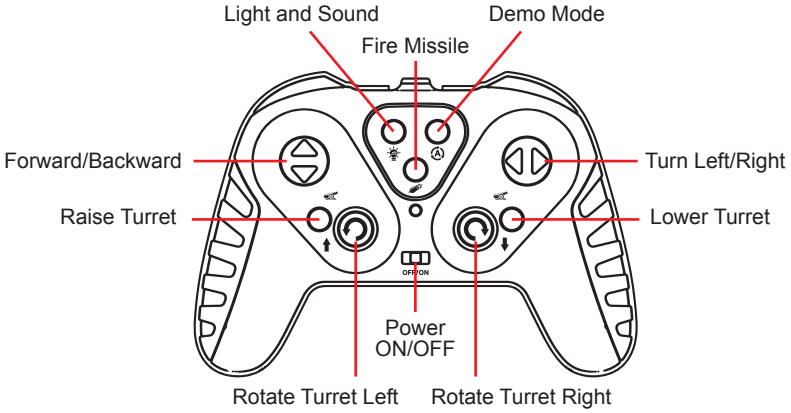

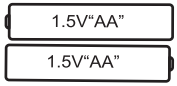

REQUIRES 2 × 1.5 V AA BATTERIES (NOT INCLUDED)

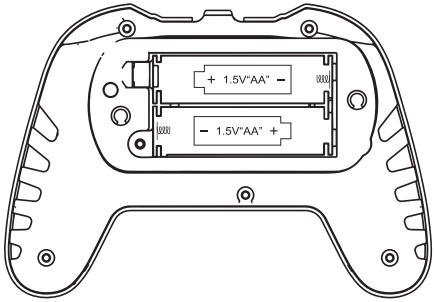

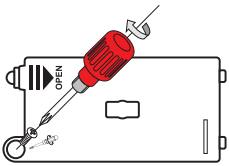


INSTALLING THE CONTROLLER BATTERIES

1. Unscrew and remove the battery cover.
2. Insert 2 × 1.5 V AA batteries, ensuring the correct polarity.
3. Replace the battery cover and tighten the screw.

CHARGING THE BATTERY

1. Unscrew and remove the battery compartment cover, then remove the battery.
2. Connect the battery to the USB charging cable.
3. Connect the charging cable to a suitable USB power source.

Note: Charging may take up to 2 hours.

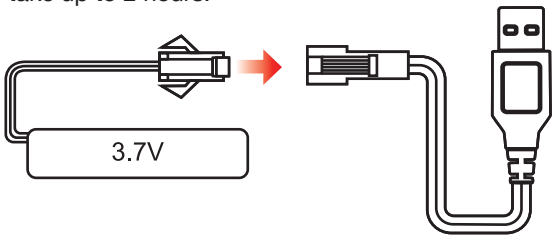


PAIRING


1. Switch on the RC truck. The headlights will flash.
2. Switch on the remote control. Its indicator light will flash.
3. When the headlights remain steadily lit and the remote control indicator light turns off, pairing is complete.

Note: Ensure that the batteries are correctly installed in both the RC truck and the remote control before pairing.


OPERATION

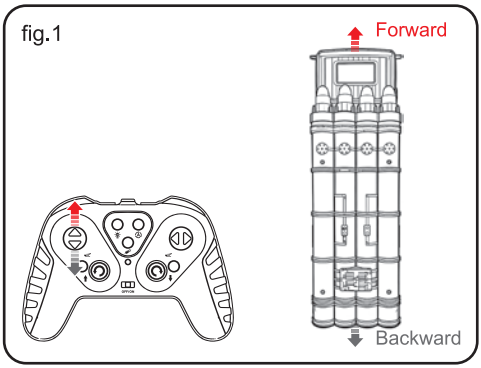


FORWARD/BACKWARD
Push the forward/backward joystick up to move forward and down to move backward.

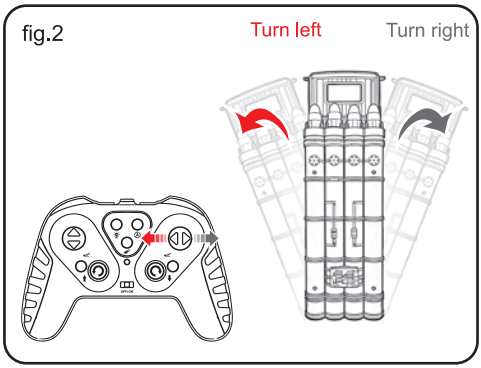


TURN LEFT/RIGHT
Push the steering joystick left or right to turn the vehicle.

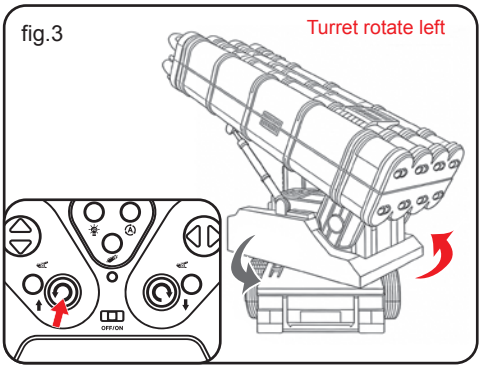


ROTATE TURRET LEFT
Press the left turret rotation button to rotate the turret to the left.

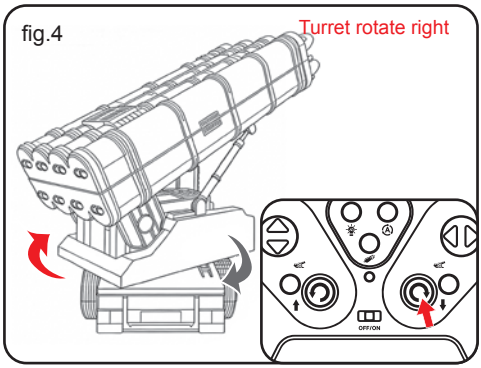


ROTATE TURRET RIGHT
Press the right turret rotation button to rotate the turret to the right.

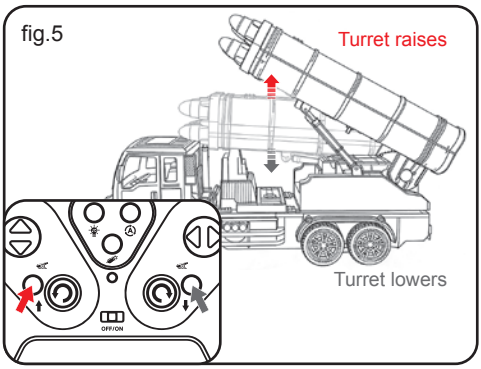


RAISE/LOWER THE TURRET
Press the turret up button to raise the turret.
Press the turret down button to lower it.

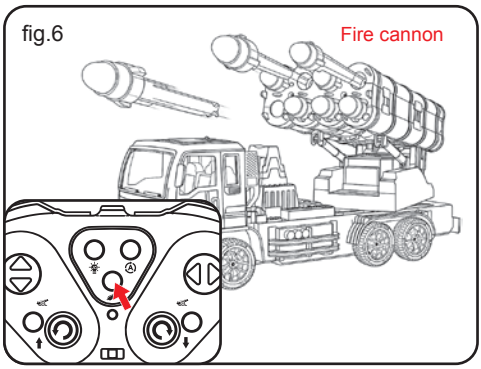

FIRE CANNON
Press the fire button to launch the projectiles.

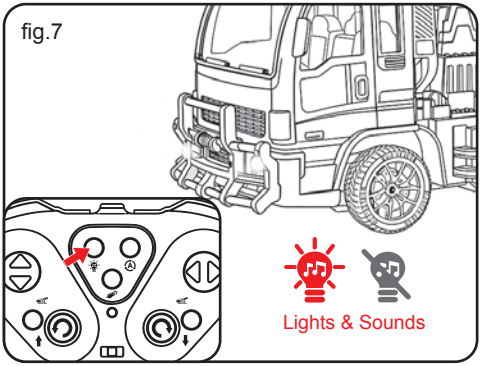

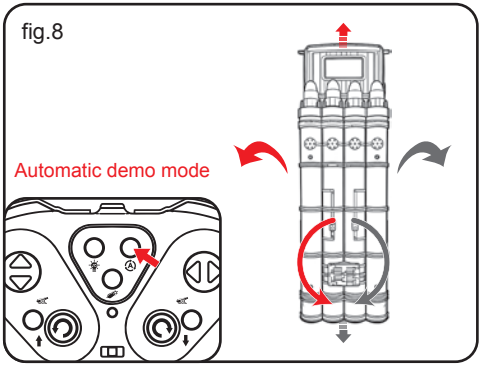

LIGHT AND SOUND SWITCH
Press the button to turn the lights and sounds on or off.

AUTOMATIC DEMO MODE
Press the demo button to activate the vehicle's automatic demonstration mode.

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.
If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.
This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.
To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.
Any expenses relating to the return of your product to the store will normally have to be paid by you.
The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:
Electus Distribution
Address 46 Eastern Creek Drive, Eastern Creek NSW 2766
Ph. 1300 738 555