POWERTECH

MB3892

20,000mAh Power Bank



Instruction Manual

Please read and save all instructions to ensure safe and effective use of this product.

FEATURES

- **Reliable Backup Power** - Provides convenient power for your devices at home, work, or while travelling.
- **Wide Device Compatibility** - Compatible with most USB-powered devices, including smartphones, tablets, wireless earbuds, smartwatches, and other digital devices.
- **Built-In Safety Protection** - Protects against overcharging, over-discharging, over-current, and short circuits for safe and reliable charging.
- **Smart Power Management** - Automatically delivers the right amount of power to connected devices for fast, stable, and efficient charging.

Executive Standard: GB31241-2014

OPERATING INSTRUCTIONS

Charging Your Device


1. Connect your device to one of the power bank's output ports using a suitable USB charging cable.
2. Charging will begin automatically for most devices.




Charging the Power Bank

Option 1 - Wall Charger (Recommended)
1. Connect a USB-C cable to the power bank's USB-C input.
2. Plug the other end into a compatible USB wall charger.

Option 2 - Computer
1. Connect a USB-C cable to the power bank's USB-C input.
2. Plug the other end into a USB port on your computer.

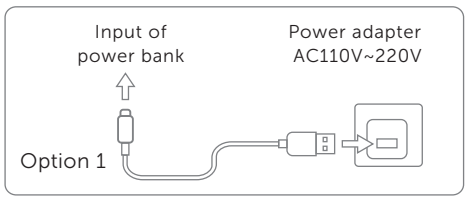

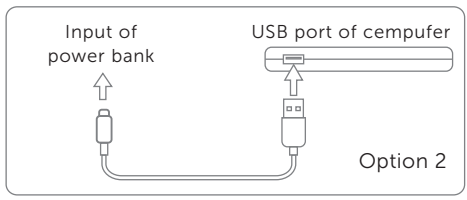

Note: For the fastest charging, use a USB-C wall charger that supports Power Delivery (PD) fast charging.

TROUBLESHOOTING

Q1: The power bank won't charge.
A1: Make sure you are using a compatible USB power adapter.
A2: Check that the charging cable is securely connected and is not damaged.
A3: Try using a different USB charging cable or wall charger.
A4: For best performance, use a high-quality USB charger that supports fast charging.

Q2: The power bank won't charge your device.
A1: The power bank battery may be low. Recharge the power bank before using it.
A2: Make sure your device is compatible with the power bank's output.
A3: Check that the charging cable is securely connected and in good condition. If necessary, try a different cable.
A4: Test the power bank with another device to confirm it is working correctly.

If the problem continues, please contact your local retailer or customer support for assistance.

TIPS FOR SAFE USE

1. **Recharge regularly** - If the power bank is not used for an extended period, recharge it at least once every 3 months to help maintain battery performance.
2. **Normal operating temperature** - The power bank may become warm during charging or use. This is normal and safe, provided the temperature does not exceed 60°C.
3. **Keep it clean and dry** - Do not expose the power bank to water or moisture. Clean only with a soft, dry cloth. Do not use chemical cleaners or solvents.
4. **Recycle responsibly** - When the power bank reaches the end of its life, dispose of it at a designated battery or electronic waste recycling facility. Do not dispose of it with household waste.

IMPORTANT SAFETY INFORMATION

1. Keep out of reach of children. Children should only use the power bank under adult supervision.
2. Handle with care. Do not drop, crush, puncture, disassemble, or expose the power bank to water or excessive moisture.
3. Avoid high temperatures. Do not leave the power bank in direct sunlight, inside a hot vehicle, or near heat sources, as this may damage the battery or create a fire hazard.
4. Use compatible devices only. Only charge devices that are compatible with this power bank. Using incompatible devices or accessories may cause damage to the power bank or your device.

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution
Address 46 Eastern Creek Drive, Eastern Creek NSW 2766
Ph. 1300 738 555