CONCORD



4MP Solar & Battery Powered Wi-Fi Smart Camera

Instruction Manual **QC3942**

Warning



FIRE RISK

If you see fire or lightning nearby, unplug it. Only operate or service it the way this manual describes.



ELECTRIC SHOCK RISK

This lightning-bolt symbol marks a dangerous voltage inside the product. Do not touch parts marked this way, contact could cause a serious electric shock.



DO NOT OPEN

Risk of electric shock. Do not remove the front or back panel. Repairs and internal maintenance must only be done by a qualified technician.




USE THE RIGHT POWER SUPPLY


Using a power supply that isn't listed in this manual can cause fire or electric shock. Only use the power supply(s) specified here.

Before you use this product

1. **Read first.** Read the entire user manual carefully before using the product.
2. **Get help when needed.** Have a qualified professional install or service the product.
3. **Stay in range.** Only use this product between **−20°C and +60°C**, at a relative humidity below **85%**.
4. **Don't exceed limits.** Never exceed the temperature, humidity, or voltage limits stated in this manual.

Product Overview

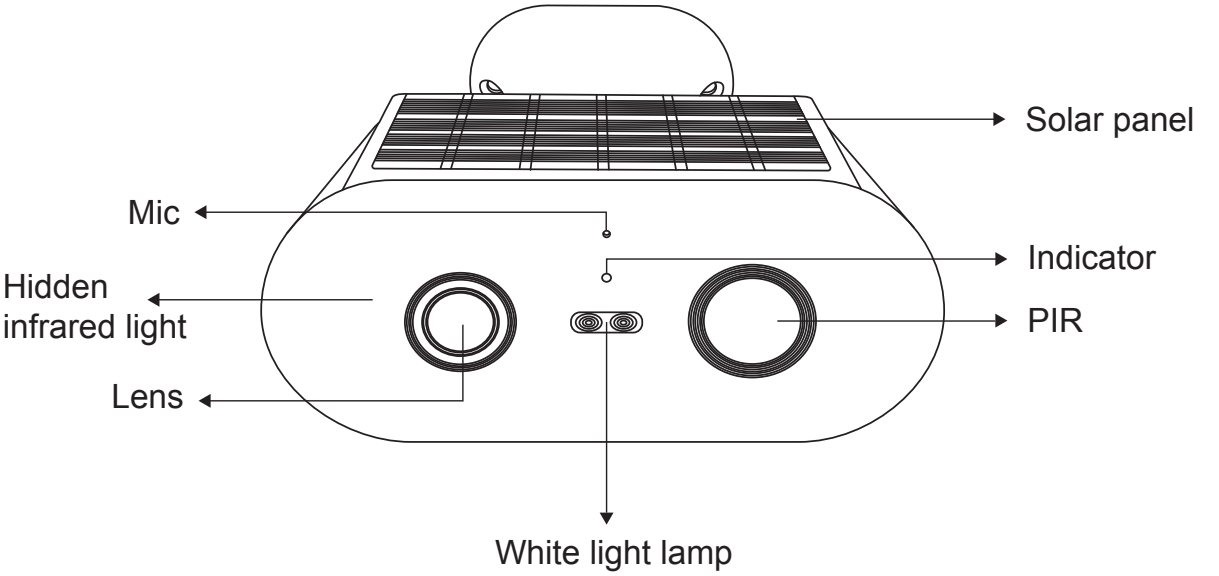

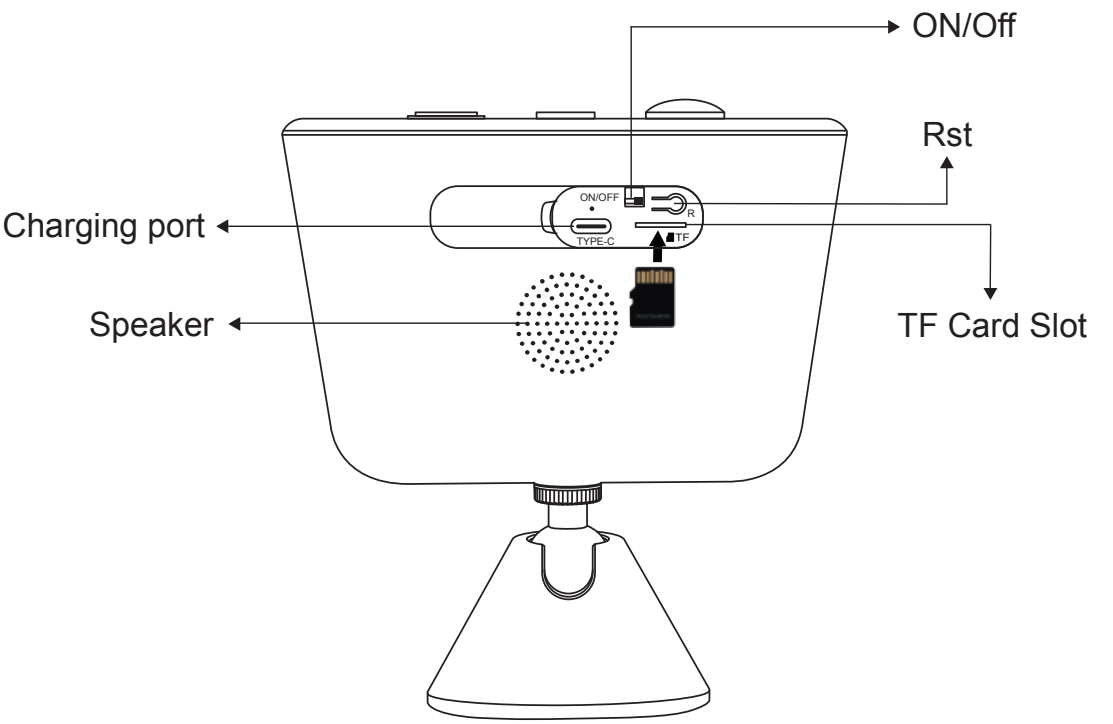

Setting Up Your Device for Mobile Viewing

1. Download the Concord Connect app from the Play Store.

Available on the App Store


Scan for App Store

GET IT ON Google play


Scan for Google Play

Note: For iOS system, it requires iOS 9.0 version or above. For Android,Android 5.1 or above.


2. Press **Agree**

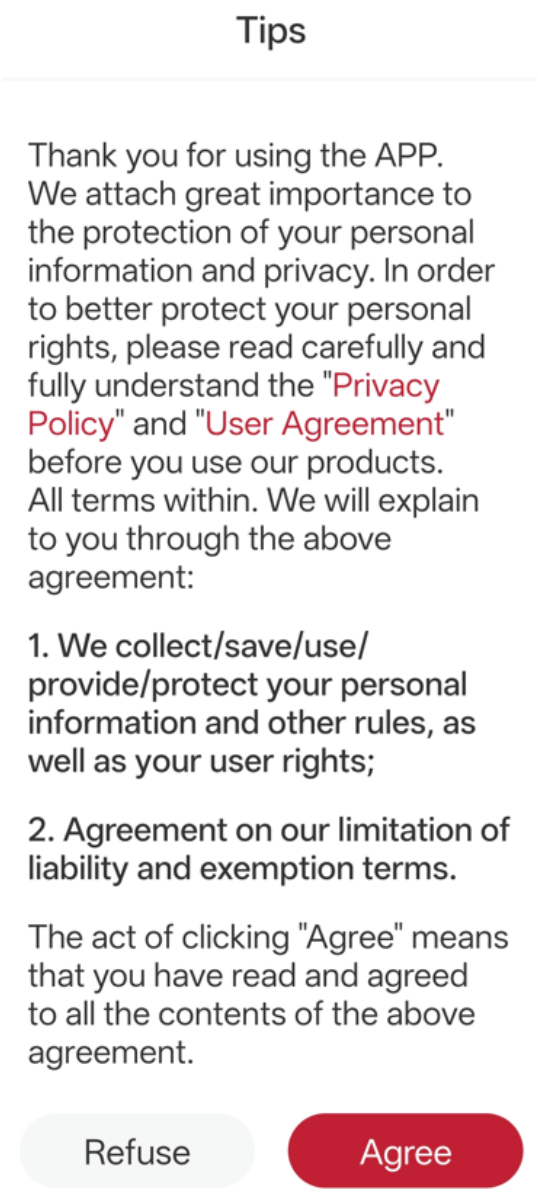


3. Press **Register**

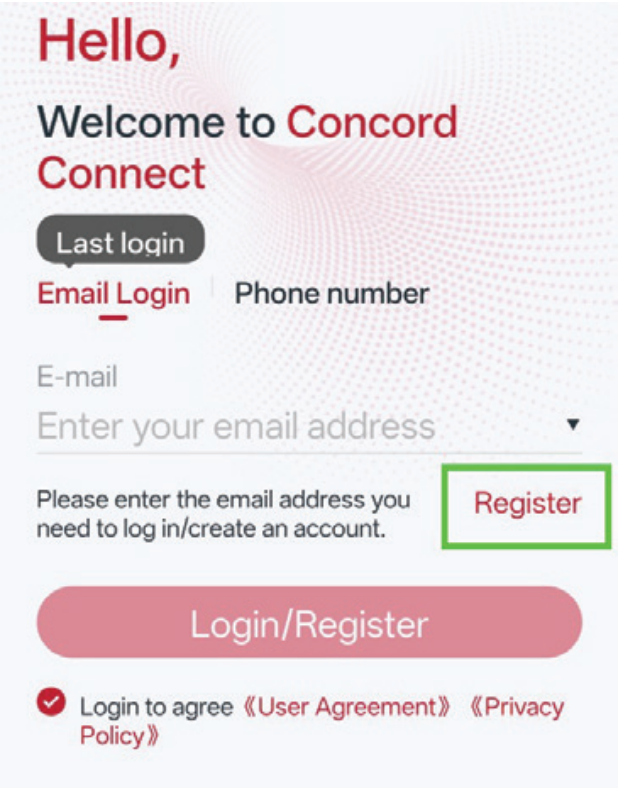

4. Enter your email address, tick the “Have read..” and press **Register**

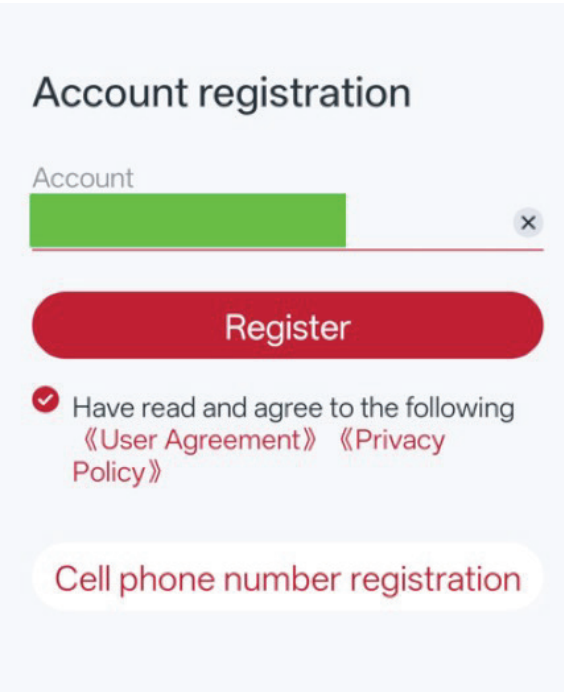


5. Drag the tennis ball though the red dot to the racquet.

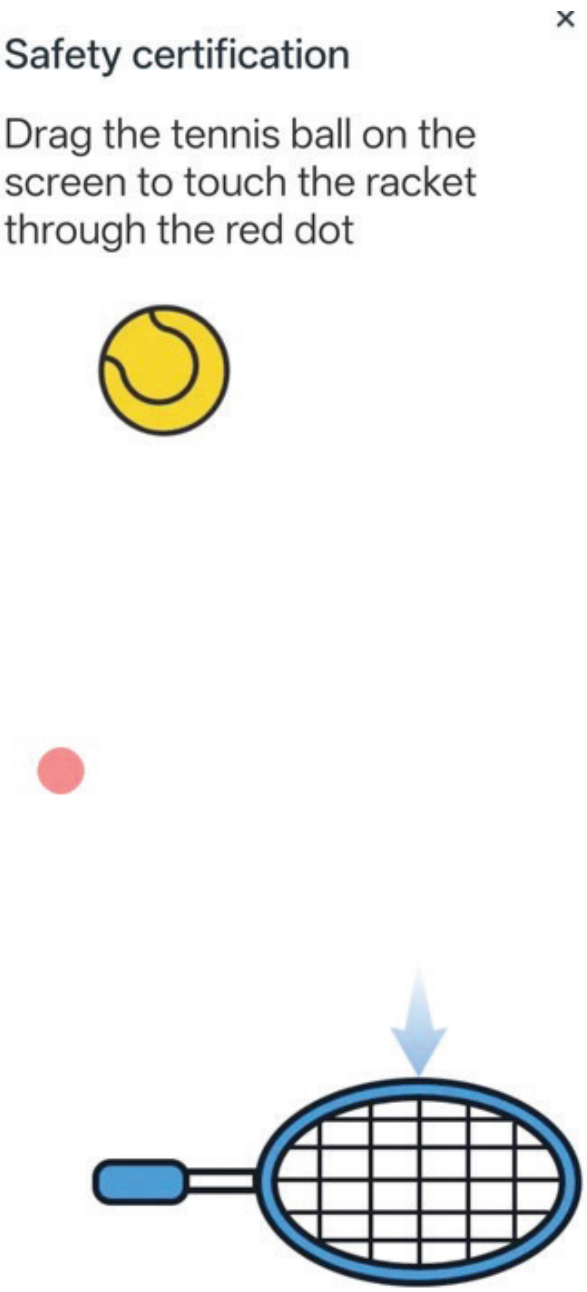


6. Check for email from Esee and copy the verification code.

Type the code into the **Verification Code** field.


Type your preferred password in **Password** and **Confirm Password** fields. Press **Confirm**.

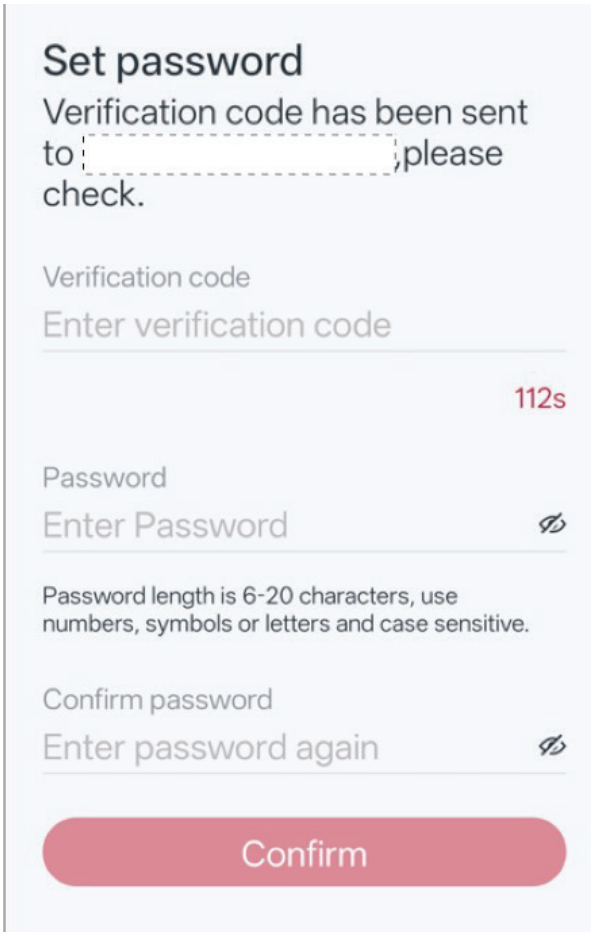


Log in with your email and password, Allow any Notification and Location permissions requests.

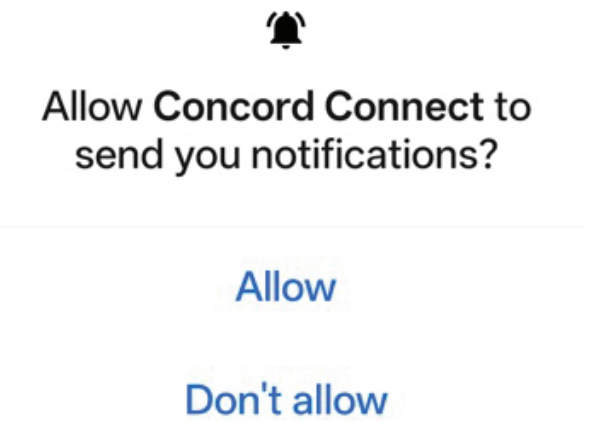


7. Select the ‘+’ icon to add a device.

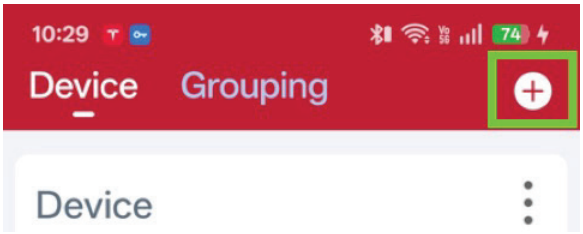


8. Select ‘Open’ to allow location permission.

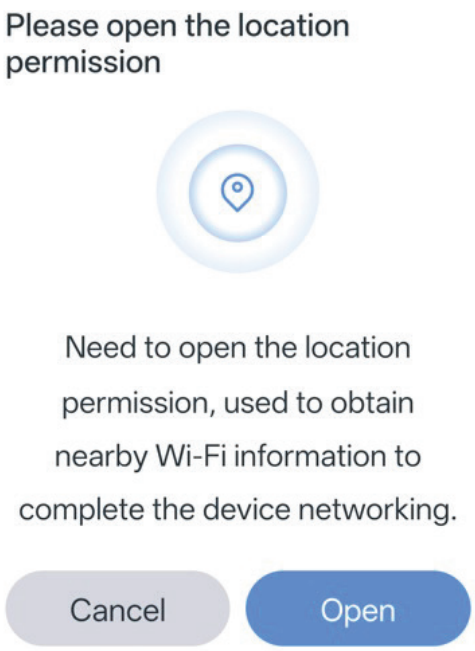


9. Select ‘While using the app’

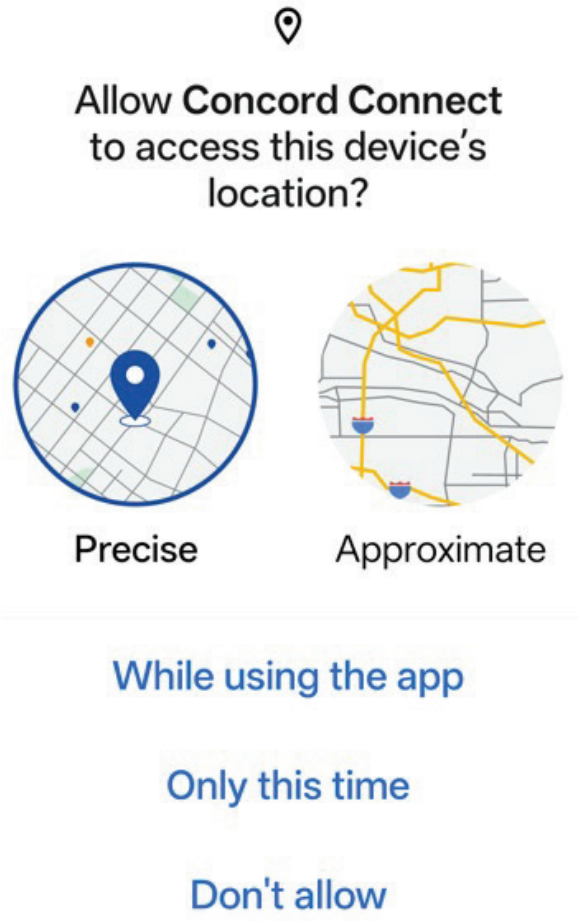


10. Power on your camera and wait for a moment. It'll speak when it is ready to be connected. Press the **Add** button. If the camera does not appear, press **Scan to Add** and point your phone camera at the QR code sticker on the back of the camera.

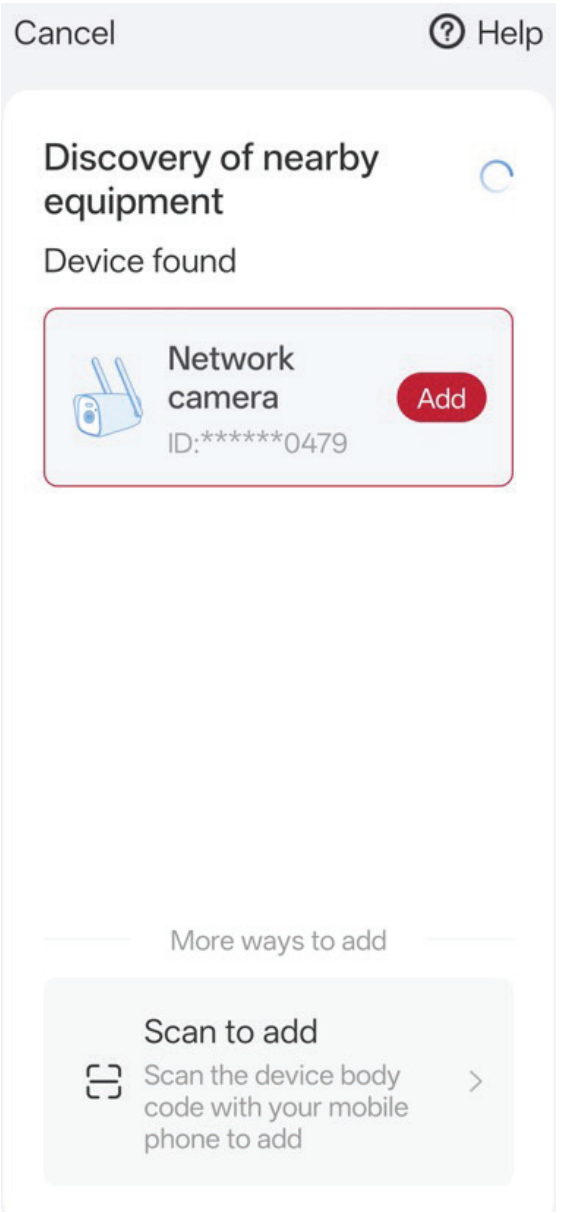

11. Choose your WiFi, enter your WiFi password, and press **Next**.

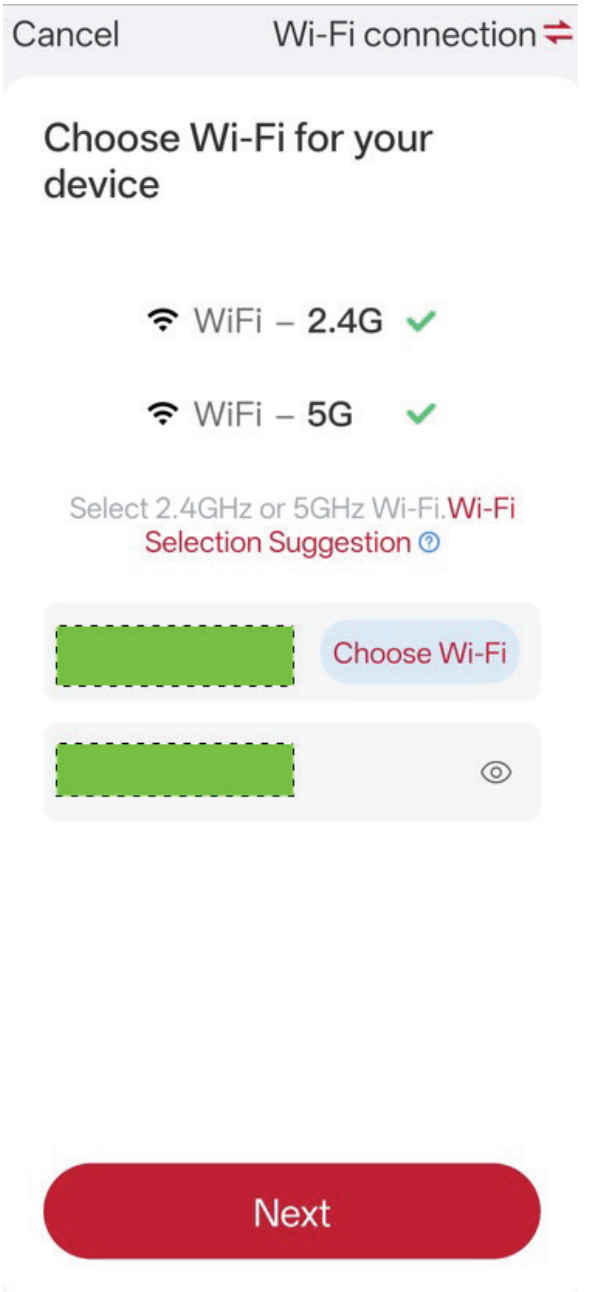


12. Press **Confirm.**

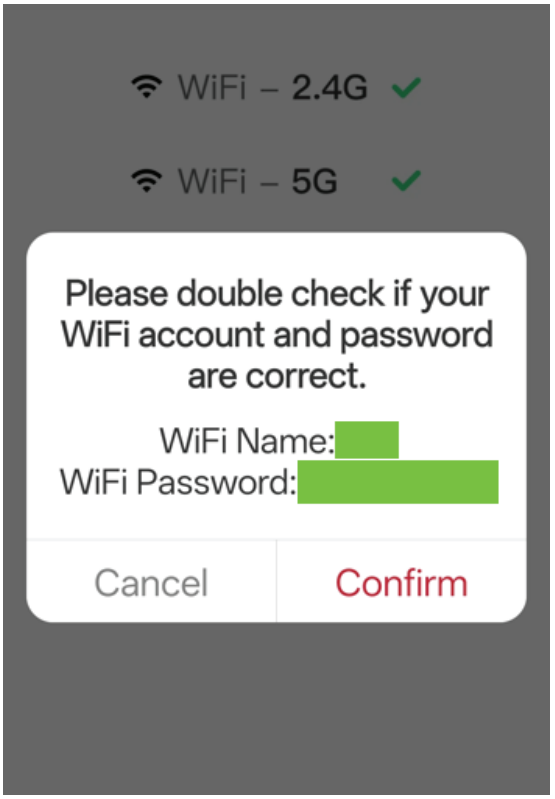


13. Once scanned successfully, the app will confirm that the camera has been added. Then, select 'Got it' to continue.


The camera will join your WiFi. If it does not join, move the camera closer to the WiFi, or restart the WiFi.

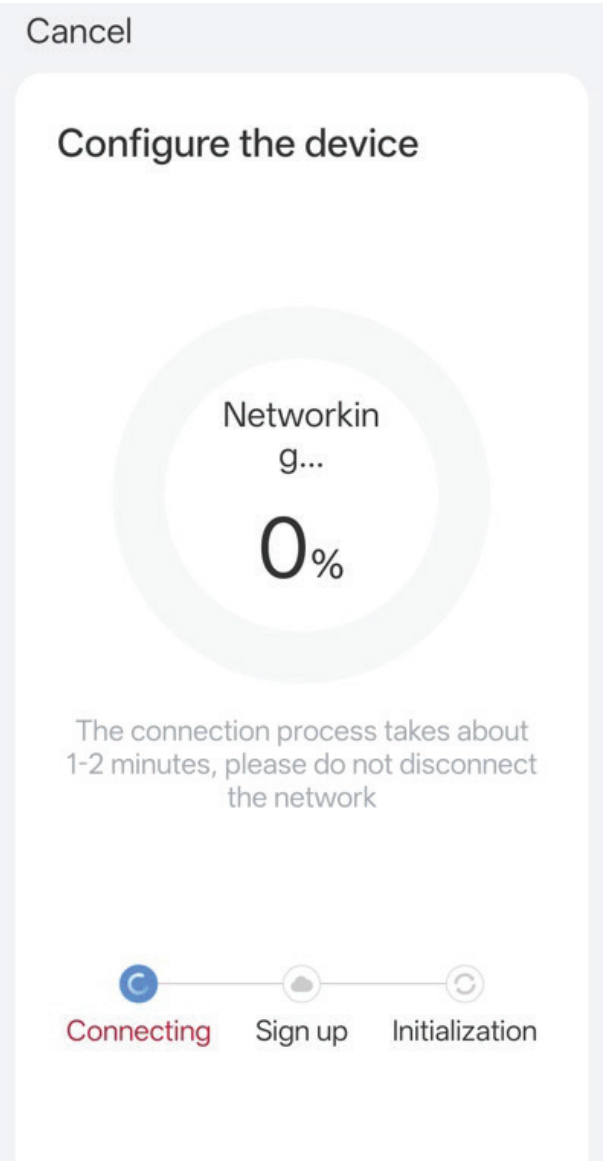


14. Name your camera, choose a function, and press **Next.**

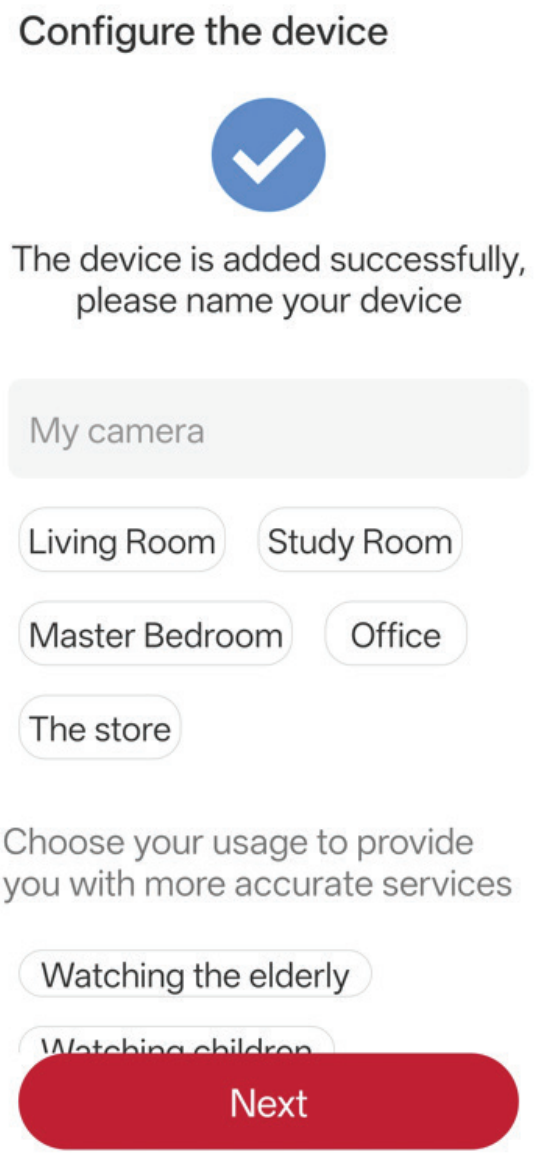

15. Select these options if you want real-time alerts, and press **Save Configuration**.

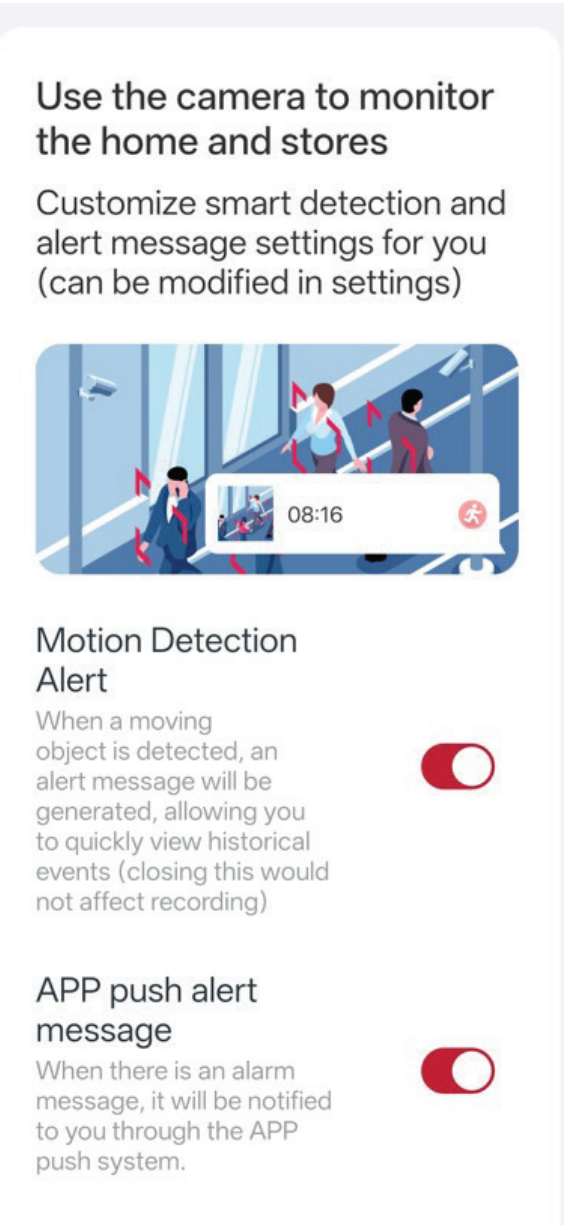


16. Move your camera near to where you want to install it and check the signal strength is OK. Press **Finished.**

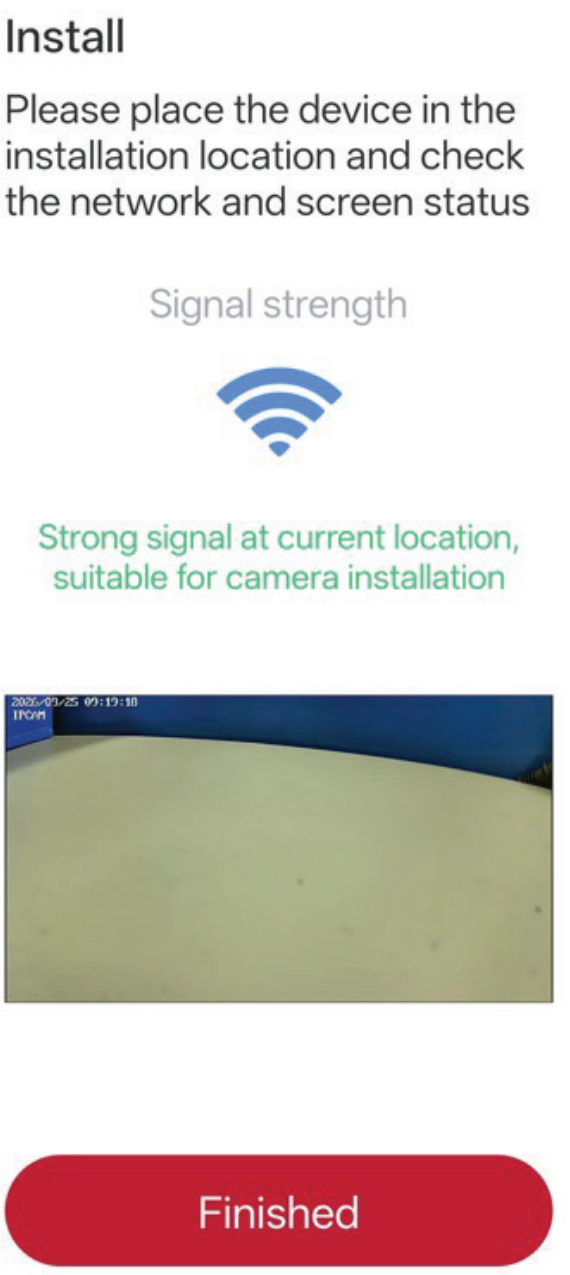


Installation Diagram

1.Fix bracket to installation position

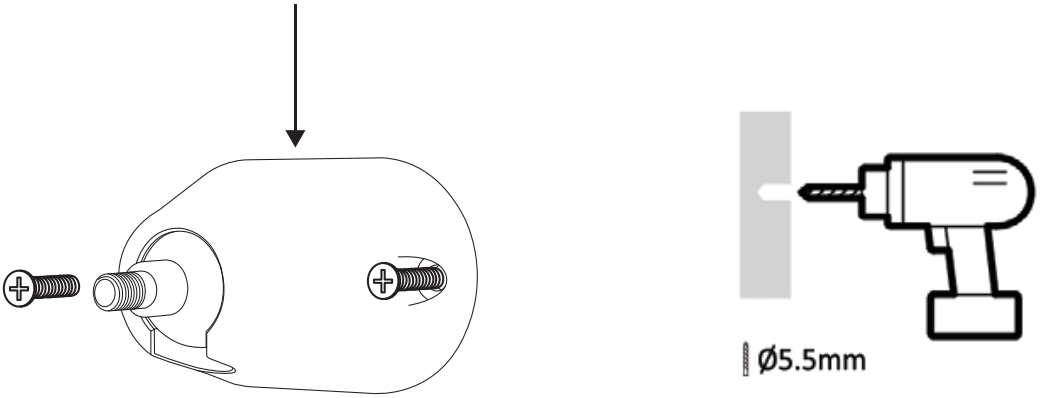

2. Mount the camera on the bracket

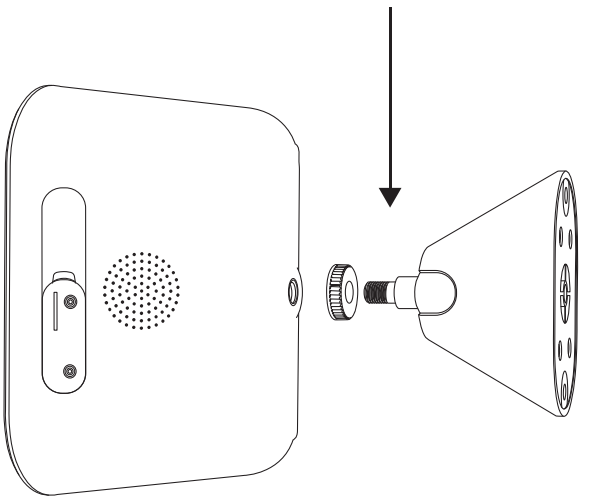

Note: Fully charge the device before first use.



Installation Precautions


A. Location Requirements: Select an installation site with sufficient sunlight and no obstructions, and maintain an appropriate distance from the monitored area.


B. Load-bearing Confirmation: Ensure the installation surface can support three times the total weight of the device to prevent falling after installation.

C. Angle Adjustment: After installing the device, adjust the solar panel surface to a 45° angle with the horizontal plane (fine-tunable according to actual conditions) and fix it securely.

D. Power Supply Check: Open the app. If the solar panel is supplying power to the camera normally, a charging icon will appear in the app.

E. Cleaning and Maintenance: Regularly wipe the solar panel surface with a soft cloth to remove dust and ensure charging efficiency.

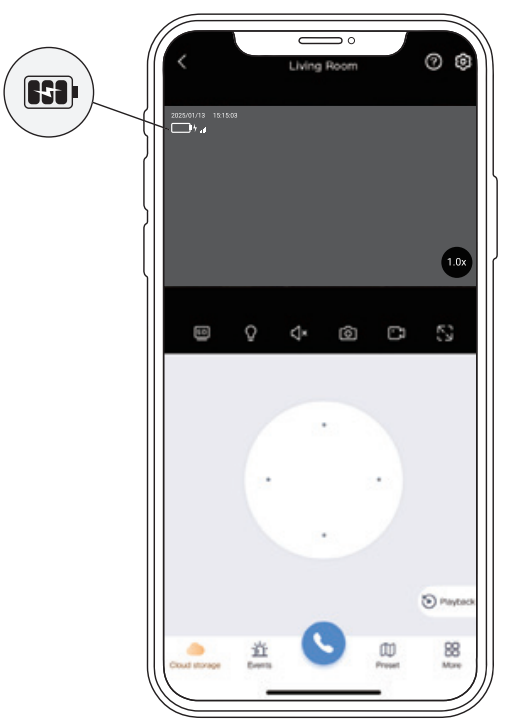

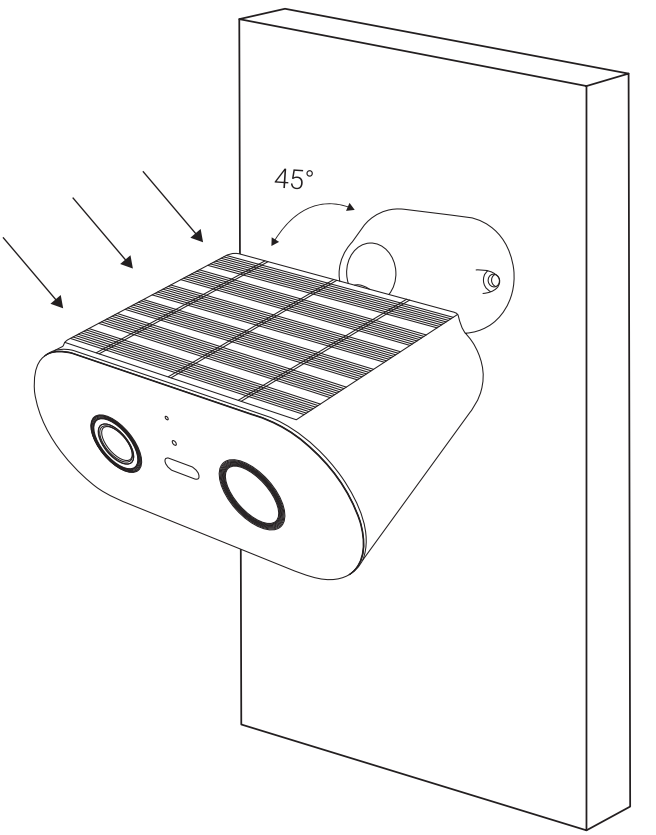

Specifications

Pixel:	4MP
Image Sensor:	1/3” CMOS Sensor
Lens:	4mm HD Waterproof
Resolution:	Main 2560×1440 (2.5K) Sub 800×448
Frame Rate:	15fps
Video Compression:	H.264/H.265
Storage:	MicroSD card (up to 256GB - sold separately)
Audio:	Two-Way
Connectivity:	Dual-Band, 2.4GHz / 5.8GHz (Wi-Fi 6)
Min. Illumination:	Colour 0.1 Lux, B/W 0.01 Lux
IR LED:	4× Infrared + 2× White light
Solar Panel:	1.6W
Battery:	3.7V / 5200mAh
Dimensions:	155(W) x 56(H) x 155(D) mm
Weight:	283.5g

Warranty Information

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.
If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.
This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.
To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.
Any expenses relating to the return of your product to the store will normally have to be paid by you.
The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by: Electus Distribution
Address 46 Eastern Creek Drive, Eastern Creek NSW 2766
Ph. 1300 738 555