



# digitech

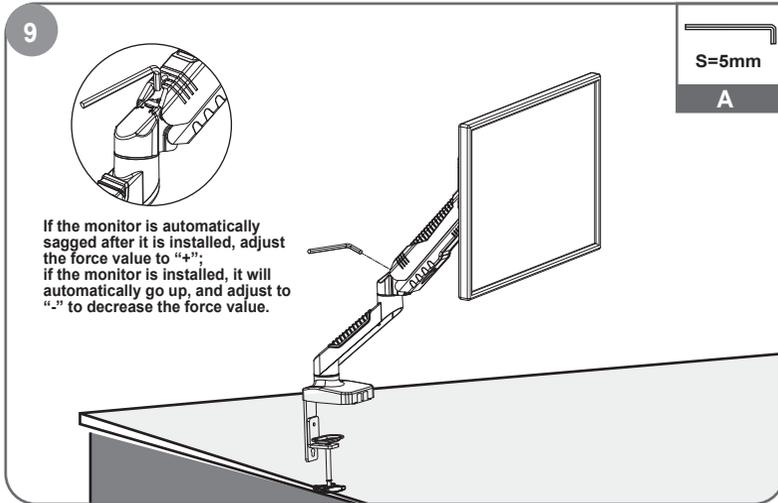

Use a hex wrench to adjust the height tension of the gas spring arm, to keep different weight of monitors still at any position.

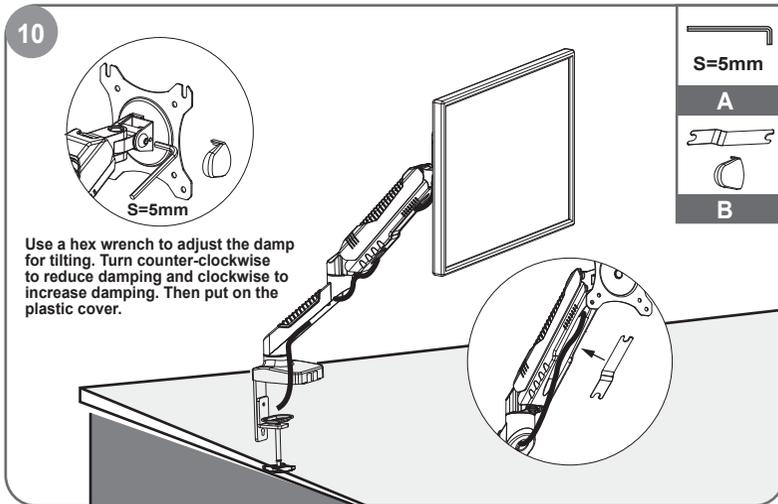

Insert cables into cable covers. Leave enough slack of cables at arm joints for full adjustment.



## Articulating LCD Monitor Desk Mount CW2900 User Manual

Distributed by:  
TechBrands by Electus Distribution Pty. Ltd.  
320 Victoria Rd, Rydalmere  
NSW 2116 Australia  
Ph: 1300 738 555  
Int'l: +61 2 8832 3200  
Fax: 1300 738 500  
www.techbrands.com


Made in China

## SAFETY


### Warning

-  Prior to the installation of this product, the installation instruction must be read and completely understood. Failure to do so may result in personal injury, property damage or voiding of factory warranty.
-  Do not install on a structure that is prone to vibration, movement or chance of impact. Reinforce the structure as required before installation.
-  The desk clamp can support a maximum thickness of 9 cm. Confirm the desk edge before installation.
-  Pay attention to the weight capacity of the mount. Exceeding the limitation can result in function unworkable or even serious personal injury and property damage.
-  Never operate the mount if parts are missing or damaged. Contact your local service center for warranty service.

## PRODUCT DIAGRAM

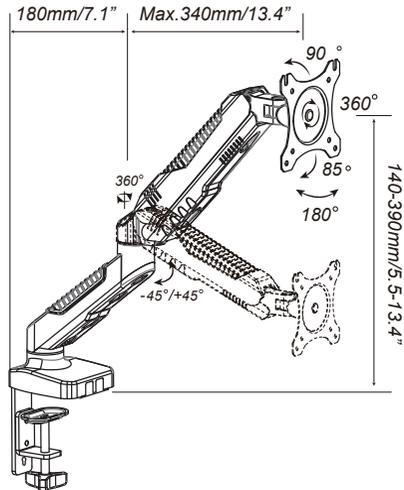


7 OR

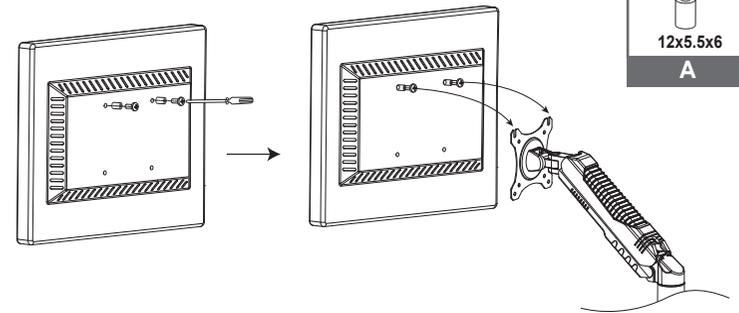


Recessed surface installation: Put spacers between headplate and monitor. Install the upper two screws and don't screw them tight. Leave some space and hang the monitor on the head plate.


8

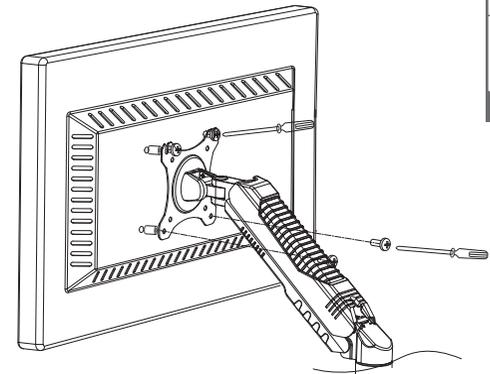

Recessed surface installation: Put spacers between headplate and monitor. Install the lower two screws and fasten the upper two screws.

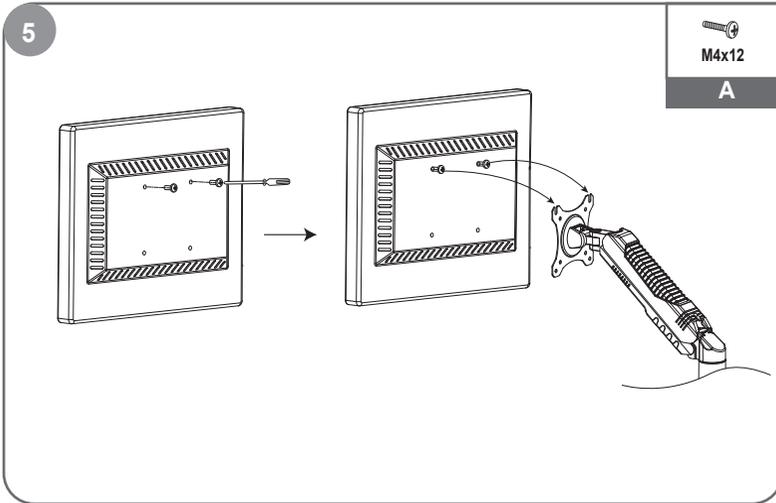

Flush surface installation: Install the upper two screws and don't screw them tight. Leave some space and hang the monitor on the head plate.

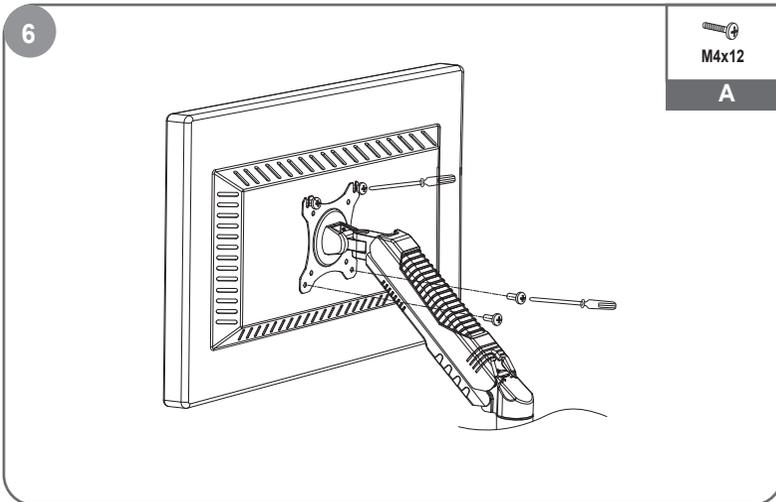


Flush surface installation: Install the lower two screws and fasten the upper two screws.


## TOOLS REQUIRED (NOT INCLUDED)



## BOX CONTENTS

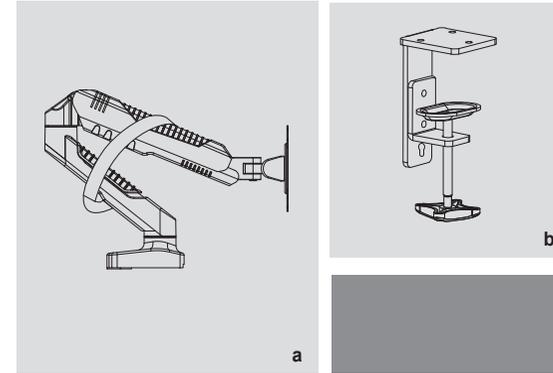


A	 <b>M4x12 (x4)</b>	 <b>M4x20 (x4)</b>
	 <b>12x5.5x6 (x4)</b>	
	 <b>S=4mm (x1)</b>	 <b>S=5mm (x1)</b>
	 <b>M6x12 (x3)</b>	
B	 <b>(x1)</b>	 <b>(x1)</b>
	 <b>(x2)</b>	 <b>(x1)</b>

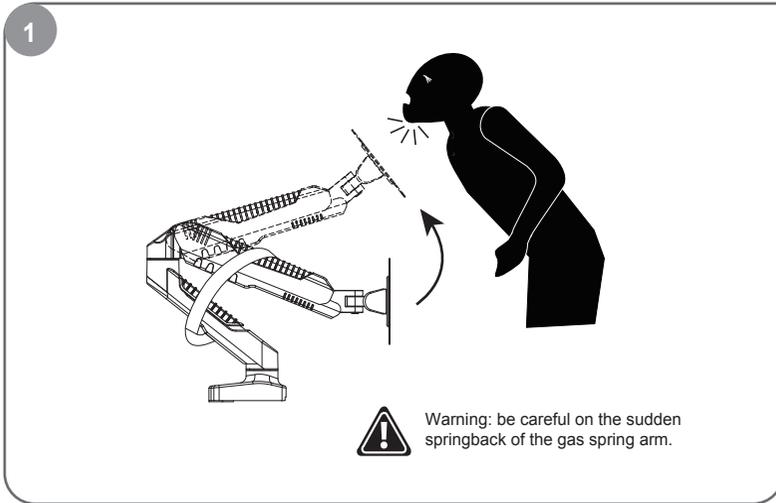


Cut the ties off.

### Desk Clamp installation

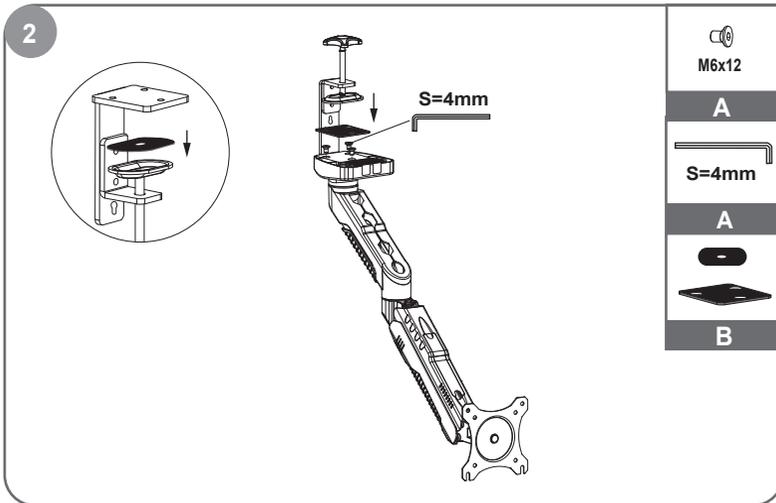


Attach the desk clamp to the aluminum base.

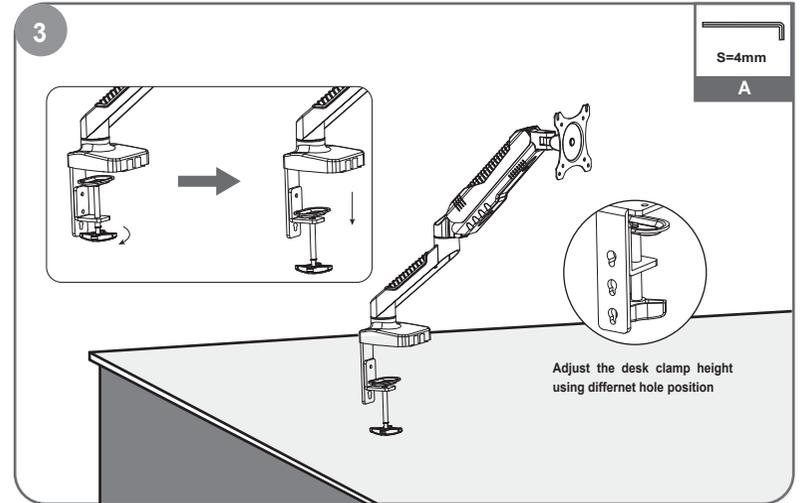

Tighten clamp using clamp screw until mount is securely fastened to desk.

### Grommet installation

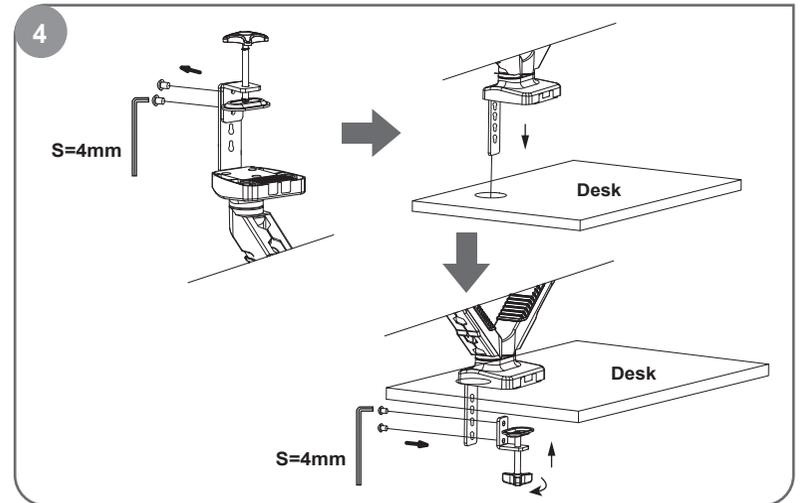

Loosen the two screws on the base, pass it through the hole in the table, and screw in the two screws that have just loosened