

digitech

Auracast Audio Transmitter



Model:
AA2300



Please read and save all instructions to ensure safe and effective use of this product.

Instruction Manual

INTRODUCTION

Stream high quality audio from this AURACAST transmitter. This versatile unit is designed to modernise your home audio system. It supports the latest Bluetooth 5.4 and Auracast broadcast audio technology, allowing it to function as a powerful transmitter to wirelessly stream audio from your TV, PC, or game console to multiple Bluetooth AURACAST headphones/speakers simultaneously. Please read the instructions carefully before first use.

BOX CONTENTS

- TV Auracast Audio Transmitter
- 1 x Optical Audio Cable
- 1 x Aux Cable
- 1 x HDMI Cable
- 1 x Type-C Cable
- User Manual

FEATURES

- Auracast Transmitter: Broadcast audio to an unlimited number of devices.
- Multi-Input support: Optical, HDMI, Aux, and multi-port connectivity.
- Low latency ensures a smooth audio experience.
- Adopt advanced Bluetooth technology 5.4, fast pairing and auto reconnect.
- Compatible with most TV models on the market with Optical and AUX audio jacks.
- Large dedicated CD-pattern button operation, easy to use.
- Combines the function of AURACAST & Transmitter
- Simultaneously stream audio to multiple Bluetooth Auracast headphones or speakers .

COMPATIBILITY


It can be plugged into non-Auracast smart devices, allowing multiple nearby Auracast-enabled devices to receive and connect to its signal.

PRECAUTIONS

Please read all safety instruction warnings carefully before using this product. Improper use of this product may result in damage to this or attached products. To ensure the product works well, please never use the unit under the following conditions:

- Moist or wet environments.
- Near a heater or high-temperature environments.
- Under direct sunlight.
- Never dismantle the product, otherwise it may nullify the warranty clause.

PRODUCT OVERVIEW

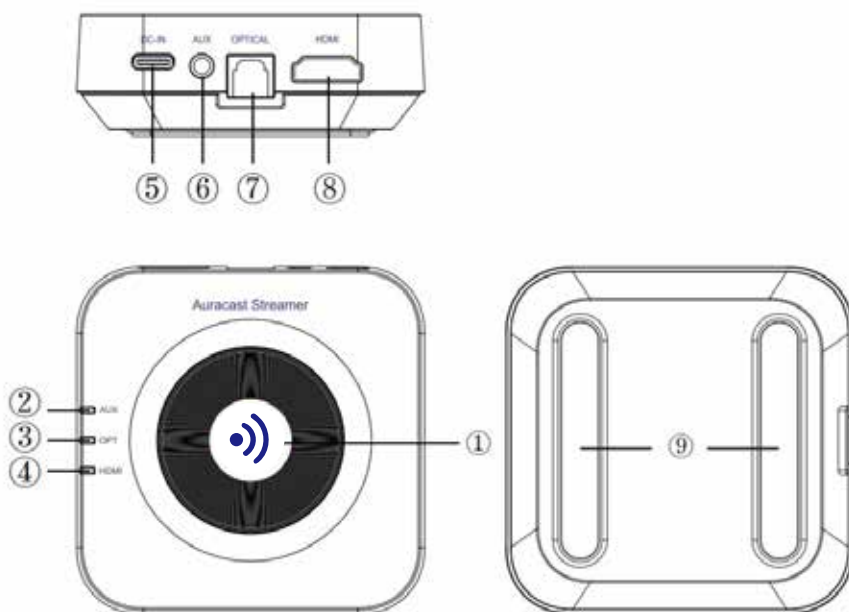

- | | |
|--|-------------------------|
| 1. Power on/off - Input signal switch (AUX/OPT/HDMI) | 5. Type-C charging port |
| 2. AUX signal led | 6. Aux port |
| 3. OPT signal led | 7. Optical port |
| 4. HDMI signal led | 8. HDMI port |
| | 9. Rubber feet |

OPERATING INSTRUCTIONS

1. Power on/off the TV Auracast Audio Transmitter

- Connect TV Auracast Audio Transmitter with a Type-C cable included.
- You may use either a USB port on your TV or a wall plug (via a USB adapter that supports 5V)
- The product will power on automatically. When not powered, the product will turn off automatically.

Note: When the product is powered on, long press and hold “1” for 3 seconds to power on/power off the TV Auracast Audio Transmitter.

2. Switch Channel Mode

Click “1” to manually switch channel modes in sequence: Input Mode **BT-AUX-Optical-HDMI**

Note: Bluetooth mode defaults at power-on.

3. On AURACAST TX mode:

As the primary transmission device, Auracast enables multi-device connectivity—any device supporting the Auracast protocol can connect automatically.

4. LED indicator light:

When manually switching modes, the corresponding blue channel LED will illuminate. The device defaults to Classic Bluetooth mode upon power on (the central circular light ring flashes rapidly; it remains solid when connected).

5. Auto Power Off:

Bluetooth mode: If Bluetooth is not connected, the device will enter standby mode and automatically power off after 5 minutes.

6. How to connect TV Auracast Audio Transmitter to your TV/audio source and Bluetooth headphones/speakers (TX mode)

A. With 3.5m Aux Cable (connect to TV)

- Connect TV Auracast Audio Transmitter with a Type-C cable included.
- The device will power on automatically.
- Connect the “6” with your TV Aux port with 3.5m Aux Cable.
- Click “1” to manually switch channel to be Aux mode, the central circular light ring remains solid blue.

Once successfully connected, the device will automatically search for and connect to nearby AuraCast broadcasts (e.g., from a compatible TV)

B. With Optical Cable (connect to TV)

- Connect TV Auracast Audio Transmitter with a Type-C cable included.
- Long press and hold “1” for 3 seconds to power on to power on the device.
- Connect the “7” with your TV Optical port with Optical Cable.
- Click “1” to manually switch channel to be Optical mode, the central circular light ring remains solid blue.

Once successfully connected, the device will automatically search for and connect to nearby AuraCast broadcasts (e.g., from a compatible TV)

C. With HDMI Cable (connect to TV)

- Connect TV Auracast Audio Transmitter with a Type-C cable included.
- Long press and hold “1” for 3 seconds to power on to power on the device.
- Connect the “8” with your TV HDMI port with HDMI Cable.
- Click “1” to manually switch channel to be HDMI mode, the central circular light ring remains solid blue.

Once successfully connected, the device will automatically search for and connect to nearby AuraCast broadcasts (e.g., from a compatible TV)

Please note:

- Please choose correct output before connecting. (refer to fig 1)
- For TV HDMI port, please set audio format to ARC, other formats are not supported.

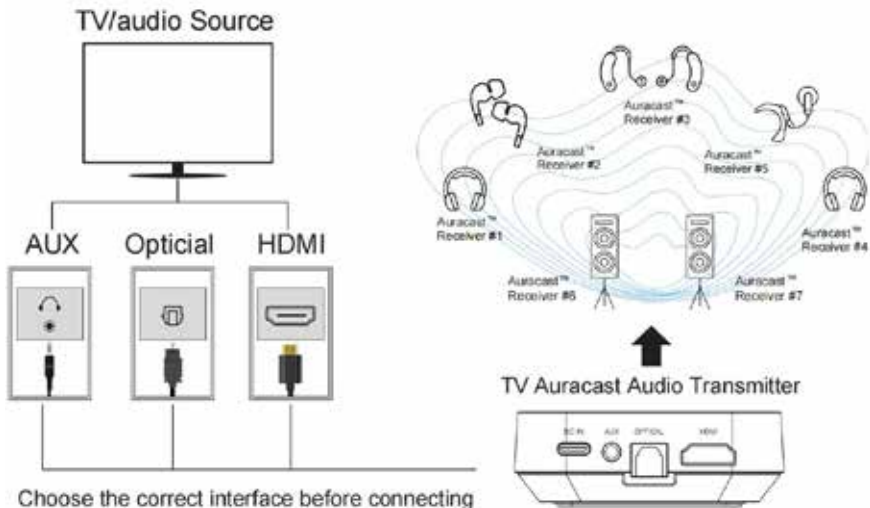


Fig 1: Set up the product as Bluetooth transmitter

SPECIFICATIONS

Bluetooth Version:	V 5.4
Bluetooth Frequency:	2402-2480MHZ
Bluetooth Distance:	Up to 10m
Interface:	Optical, HDMI, Aux
Charging Interface:	DC 5V via USB Type-C
Battery:	No
Audio Jack:	3.5mm Aux-in
Product Size:	75 x 75 x 26mm
Product Weight:	45g
Materials:	ABS

WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555